

REMOTE CONTROL

How to use the remote control?

KEYS

 
Parametres	
	External monitoring / test
	IR-detection field
	Uncovered zone
	Mounting height / Frequency
	Output redirection
	Door control
	Detection field size
	Hold time
	Detection mode
	Radar immunity filter
	Output configuration
	Max. duration of presence detection
	IR-immunity filter




LZR Laser Scanner	
	Field dimensions - optional - width
	Field dimensions - optional - height
	Field dimensions - safety - width
	Field dimensions - safety - height
	Detection field redirection
	Uncovered zone
	Object size
	Output activation delay
	Active curtains
	Mounting side
	Output configuration
	Immunity filter

Values	General keys		Colour Keys				
1 2 3		Unlock					
4 5 6		Lock					
7 8 9		Check value	Flatscan	/	Unlock Stop Side	Unlock Reopen Side	/
0		Increase by 1	Flatscan 3D	Opening	Stop	Reopen	Operating Mode
		Decrease by 1	Widescan	Virtual pull cord	Safety	Motion	Presence
		Setup / Teach-in					
		Factory values					
		Presettings					


USE



 After unlocking, the red LED flashes and the sensor can be adjusted by remote control.




 If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.




To end an adjustment session, always lock the sensor.

Adjusting one or more parameters

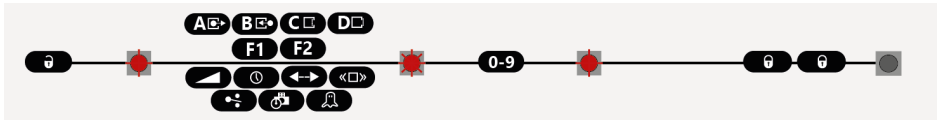


Checking a value

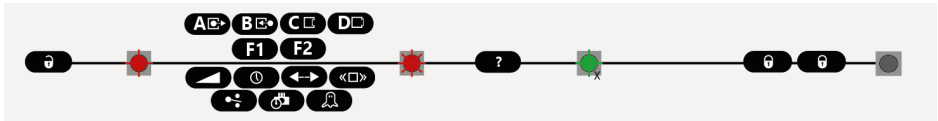


X = number of flashes = value of the parametre

Restoring to factory values

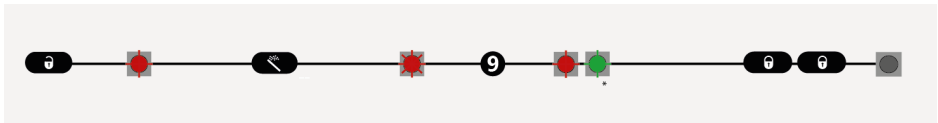

* When no green LED is available, the signal is red.

Saving an access code

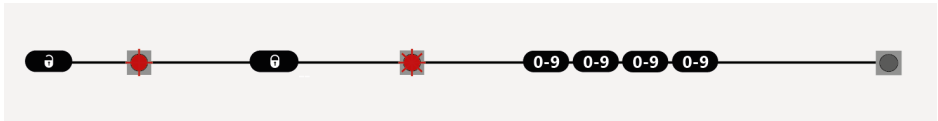

The access code (1-4 digits) is recommended to set sensors that are installed close to each other.

Changing an access code




Enter the existing code

Deleting an access code



Enter the existing code

If you forget the access code, proceed as follows:

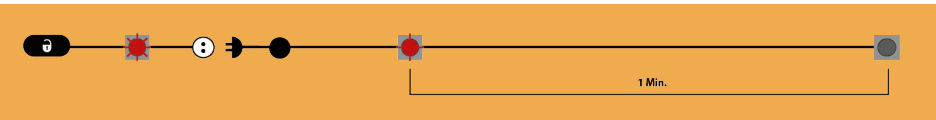

Unpower & power the sensor

During 1 minute, you can access the sensor without access code



LED flashes quickly



LED flashes once



LED flashes



LED is off



LED flashes slowly

Batteries are located behind the back cover. They can be safely removed by hand. Replace the batteries only by equivalent AAA (1.5V) batteries. Remove batteries before long-time storage to prevent leakage.	
BEA hereby declares that this product is in compliance with European legislation, 2014/30/EU (EMC) and 2011/65/EU (RoHS).	CE
The complete declaration of conformity is available on our website.	
This product and batteries should be disposed of separately from unsorted municipal waste.	

A **Halma** company

Manufactured by: BEA SA - LIEGE Science Park - Allée des Noisetiers 5 - 4031 Angleur - Belgium - T +32 4 3616565 - F +32 4 3612858 - info-eu@beasensors.com - www.beasensors.com

© BEA | User's guide | 47.0792.01 | 02-24