



## Installation and operating instructions

Last updated: 05.2024

# Controller for door drives CS 320 FU



# Table of contents

|           |                                                                                                              |           |
|-----------|--------------------------------------------------------------------------------------------------------------|-----------|
| <b>1.</b> | <b>Safety information.....</b>                                                                               | <b>3</b>  |
| 1.1       | Correct use.....                                                                                             | 3         |
| 1.2       | Target groups.....                                                                                           | 3         |
| 1.3       | General safety advice.....                                                                                   | 4         |
| <b>2.</b> | <b>Product overview.....</b>                                                                                 | <b>4</b>  |
| 2.1       | Product description.....                                                                                     | 4         |
| 2.2       | Variants.....                                                                                                | 4         |
| 2.3       | Motherboard CS 320 FU.....                                                                                   | 5         |
| 2.4       | Version CS 320 FU-I<br>Frequency converter incorporated in drive, CS 320<br>control in separate housing..... | 6         |
| 2.5       | Version CS 320 FU-E<br>Frequency converter and CS 320 control together<br>in one housing.....                | 6         |
| 2.6       | Connection of Siemens V20-A / V20-AA frequency<br>converter.....                                             | 8         |
| 2.7       | Connection of Siemens V20 frequency converter.....                                                           | 8         |
| 2.8       | Technical data CS 320 FU.....                                                                                | 9         |
| 2.9       | Category and performance level of the safety<br>function per EN ISO 13849-1.....                             | 10        |
| <b>3.</b> | <b>Installation.....</b>                                                                                     | <b>11</b> |
| 3.1       | Safety instructions for installation.....                                                                    | 11        |
| 3.2       | Mains connection.....                                                                                        | 11        |
| 3.3       | Internal fuse protection.....                                                                                | 13        |
| 3.4       | Mains voltage selection.....                                                                                 | 13        |
| 3.5       | Supply to external devices<br>(only with 400 V / 3-phase connection).....                                    | 14        |
| 3.6       | Connection of electronic limit position system<br>absolute value encoder (AWG).....                          | 14        |
| 3.7       | Mechanical limit switch (MEC) connection.....                                                                | 15        |
| 3.8       | Connection of command devices.....                                                                           | 17        |
| 3.9       | Light grid connection.....                                                                                   | 19        |
| 3.10      | Connection of closing edge protective device 1.....                                                          | 20        |
| 3.11      | Connection light barrier 1.....                                                                              | 21        |
| 3.12      | Terminal assignment, relay outputs.....                                                                      | 22        |
| 3.13      | Connection of programmable inputs.....                                                                       | 22        |
| 3.14      | Safety input per EN 12453.....                                                                               | 25        |
| 3.15      | Radio receiver, pluggable.....                                                                               | 26        |
| 3.16      | CS radio.....                                                                                                | 27        |
| 3.17      | Digital 991.....                                                                                             | 27        |
| 3.18      | Connection of external radio receiver.....                                                                   | 28        |
| 3.19      | Connection of frequency converter.....                                                                       | 28        |
| 3.20      | Connection of LCD monitor.....                                                                               | 29        |
| 3.21      | Connection of MS BUS components.....                                                                         | 29        |
| 3.22      | Transmission system radio.....                                                                               | 30        |
| <b>4.</b> | <b>Initialisation.....</b>                                                                                   | <b>30</b> |
| <b>5.</b> | <b>Setting the limit positions.....</b>                                                                      | <b>31</b> |
| 5.1       | Checking the drive / travel direction.....                                                                   | 31        |
| 5.2       | Setting the mechanical limit switches.....                                                                   | 31        |
| 5.3       | Setting the electronic end position system using<br>the setting buttons on the circuit board.....            | 31        |
| 5.4       | Setting the electronic limit position system via the<br>LCD monitor.....                                     | 32        |
| 5.5       | Setting the intermediate positions of the electronic<br>limit position system via the LCD monitor.....       | 32        |

|            |                                                   |           |
|------------|---------------------------------------------------|-----------|
| <b>6.</b>  | <b>Programming.....</b>                           | <b>33</b> |
| 6.1        | Overview of the LCD monitor.....                  | 33        |
| 6.2        | LCD monitor operating modes.....                  | 33        |
| 6.3        | Expert menu.....                                  | 34        |
| 6.4        | RESET.....                                        | 34        |
| 6.5        | RESETTING the controller with LCD monitor.....    | 34        |
| 6.6        | RESETTING the controller without LCD monitor..... | 35        |
| 6.7        | RESET the frequency inverter settings.....        | 35        |
| <b>7.</b>  | <b>Frequency converter.....</b>                   | <b>36</b> |
| 7.1        | General.....                                      | 36        |
| 7.2        | Adjustable values.....                            | 36        |
| 7.3        | Travel diagrams.....                              | 38        |
| 7.4        | Rated values for motor.....                       | 39        |
| <b>8.</b>  | <b>Navigator (only LCD monitor).....</b>          | <b>40</b> |
| <b>9.</b>  | <b>Functional overviews.....</b>                  | <b>42</b> |
| 9.1        | Automatic mode.....                               | 42        |
| 9.2        | Input operating mode.....                         | 43        |
| 9.3        | Explanations of the relay modes:.....             | 55        |
| 9.4        | Explanations of the inputs:.....                  | 59        |
| 9.5        | Diagnosis operating mode / error memory.....      | 62        |
| <b>10.</b> | <b>Fault display and remedial measures.....</b>   | <b>65</b> |
| 10.1       | Fault display on the LCD monitor.....             | 65        |
| 10.2       | Error message via LED indicator.....              | 69        |
| <b>11.</b> | <b>Service.....</b>                               | <b>71</b> |
| <b>12.</b> | <b>Declaration of incorporation (EU).....</b>     | <b>72</b> |
| <b>13.</b> | <b>Declaration of incorporation (UK).....</b>     | <b>73</b> |
| <b>14.</b> | <b>Annex.....</b>                                 | <b>74</b> |
| 14.1       | Safety circuit measuring points.....              | 74        |
| 14.2       | Overview of the connections.....                  | 76        |

## About this document

- Original operating manual.
- Part of the product.
- Reading and subsequent storage mandatory.
- Protected by copyright.
- No part of this manual may be reproduced without our prior consent.
- Subject to changes which are in the interest of technical improvements.
- All dimensions in millimetres.
- Figures are not to scale.

### Safety instructions

#### **WARNING!**

Safety information regarding a danger that can lead to death or serious injuries.

#### **CAUTION!**

Safety information regarding a danger that can lead to minor or moderate injuries.

#### **ATTENTION!**

Safety information regarding a danger that can lead to damage or destruction of the product.

### Meaning of symbols

- Action prompt
- ✓ Check
- List, itemisation
- Reference to other parts of this document
-  Reference to separate documents that must be observed
-  Factory settings

## 1. Safety information

### **WARNING!**

#### **Risk of death due to a failure to observe the operating manual!**

This manual contains important information for handling the product safely. Particular reference is made to possible dangers.

- Read this manual through carefully.
- Follow the safety instructions in this manual.
- Store the manual in an accessible location.

### 1.1 Correct use

The controller CS 320 FU is designed exclusively for controlling door systems through drives with mechanical limit switches (MEC) or an electronic limit position system (AWG).

The door drives must be designed for control with a frequency inverter.

Use is only permissible:

- In technically faultless condition.
- Following correct installation.
- In compliance with the data in the technical specifications.

→ "2.8 Technical data CS 320 FU"

Any other use is deemed to be improper use.

### 1.2 Target groups

#### 1.2.1 Operator

The operator is responsible for the building in which the product is used. The operator has the following tasks:

- Knowledge and safekeeping of the instruction manual.
- Instruct all persons who use the system.
- Ensure that the system is inspected and maintained regularly by qualified specialist personnel in accordance with the manufacturer's instructions.
- Make sure that inspection and maintenance are documented in the inspection logbook.
- Safe and proper keeping of the inspection logbook.

#### 1.2.2 Specialist personnel

Qualified specialist personnel are responsible for assembly, maintenance, repair, disassembly and disposal.

Requirements applicable to qualified specialist personnel:

- Knowledge of the general and specific safety and accident-prevention regulations.
- Knowledge of the relevant electrical regulations.
- Training in the use and care of appropriate safety equipment.
- Knowledge of the relevant standards.

Electrical work by qualified electricians exclusively, in accordance with DIN VDE 0100.

Requirements applicable to qualified electricians:

- Knowledge of the basics of electrical engineering.
- Knowledge of national regulations and standards.
- Knowledge of the relevant safety regulations.
- Knowledge of this operating manual.

### 1.2.3 Users

Instructed users operate and care for the product.

Requirements applicable to instructed users:

- Users are instructed in relation to their work by the operator.
- Users must have been instructed on how to use the product safely.
- Knowledge of this operating manual.

Special requirements apply to the following users:

- Children aged 8 and above.
- Persons with reduced physical, sensory or mental capabilities.
- Persons with a lack of experience and knowledge.

These users are only authorised to operate the product.

Special requirements:

- The users must be supervised.
- Users must have been instructed on how to use the product safely.
- The users must understand the dangers involved in handling the product.
- Children are not allowed to play with the product.

## 1.3 General safety advice

Persons or objects must never be moved with the aid of the system.

In the following cases, the manufacturer accepts no liability for damages. The guarantee on the product and accessory parts is voided with:

- A failure to observe these operating instructions.
- Misuse and improper handling.
- The assignment of unqualified personnel.
- Modifications or changes to the product.
- The use of spare parts that have not been produced or approved by the manufacturer.

The product is manufactured according to the directives and standards mentioned in the Declaration of Incorporation. The product has left the factory in perfect condition with regard to safety.

Batteries, accumulators, fuses and bulbs are excluded from warranty.

**Further safety information can be found in the relevant respective sections of the document.**

→ "3.1 Safety instructions for installation"

## 2. Product overview

### 2.1 Product description

The controller CS 320 FU is designed for use in industrial areas and can be used with all door types in these areas.

This facilitates the speed-independent control of door drives.

It is possible to connect drives with mechanical limit switches (MEC) or an electronic limit position system (AWG).

All the necessary command devices and safety elements can be connected, set and evaluated.

Programming takes place via a pluggable LCD monitor.

Alternatively, a service tool is available as an accessory.

The service tool consists of a stick and an app.

The following supplier variants of the controller CS 320 are possible:

### 2.2 Variants

**Housing variants:**

- Controller CS 320 FU in the "standard" housing
- Controller CS 320 FU-E in the "combination" or "maxi" housing

**Variants of the pluggable LCD monitor:**

- LCD monitor on the circuit board
- LCD monitor in the housing cover
- Hard-wired LCD monitor, pluggable (MS BUS)

**Command device variants:**

- 3-fold button CS integrated in the housing

**Optional:**

- Housing without 3-fold button
- Housing with ON/OFF key switch
- Housing with main switch
- Housing with emergency stop
- Pluggable components (circuit board)
  - Brake monitoring module
  - Week timer
  - Radio receiver
  - Radio transmission system for closing edge protective device and/or a safety element.


The operating instructions describe the connection and programming options and variants of the CS 320 controller with connected LCD monitor and from software version V1.01a.

## 2.3 Motherboard CS 320 FU

### Explanation:


- X1: Mains connection terminal strip  
 X2: Motor terminal strip  
 X3: Terminal strip for command devices  
 X4: Terminal strip for safety elements  
 X5: Terminal strip for relays  
 X6: Connector strip for internal ON/OFF switch  
 X7: Connector strip for internal 3-fold button KDT  
 X8: Connector strip for LCD monitor  
 (Beneath the LCD monitor)  
 X9: Connector strip for radio receiver  
 X10: Connector strip for week timer / brake monitoring module  
 X11: Connector strip for electronic limit position system (AWG)  
 X12: Connector strip for external radio receiver  
 X13: Connector strip for internal 3-fold button CS  
 X15: Terminal strip for mechanical limit switches (MEC)  
 X16: Connector strip for BUS system (MS BUS)  
 X17: Plug-in connector RJ for BUS system (MS BUS)  
 X18: Connector strip for frequency converter (interface)  
 X19: Terminal strip for supplying external devices 230V / 50Hz  
 X20: Connector strip for transmission system  
 X21: Mains voltage selection
- H1: Ready for operation (green)  
 Lights up with power supply.  
 H2: Status indicator (red)  
 Lights up with faults or with actuation of the safety equipment
- S1: Programming button (+)  
 (Beneath the LCD monitor)  
 S2: Programming button (-)  
 (Beneath the LCD monitor)  
 S3: Programming button (P)  
 (Beneath the LCD monitor)
- F1: Fuse protection for external devices 230V / 50Hz  
 (max. 1A slow-blow)  
 F2.1: Fuse protection for controller and drive L1 (max. 10 A)  
 F2.2: Fuse protection for controller and drive L2 (max. 10 A)  
 F2.3: Fuse protection for controller and drive L3 (max. 10 A)  
 ⊕ Terminal strip for protective conductor (PE)

### 2.3 / 1

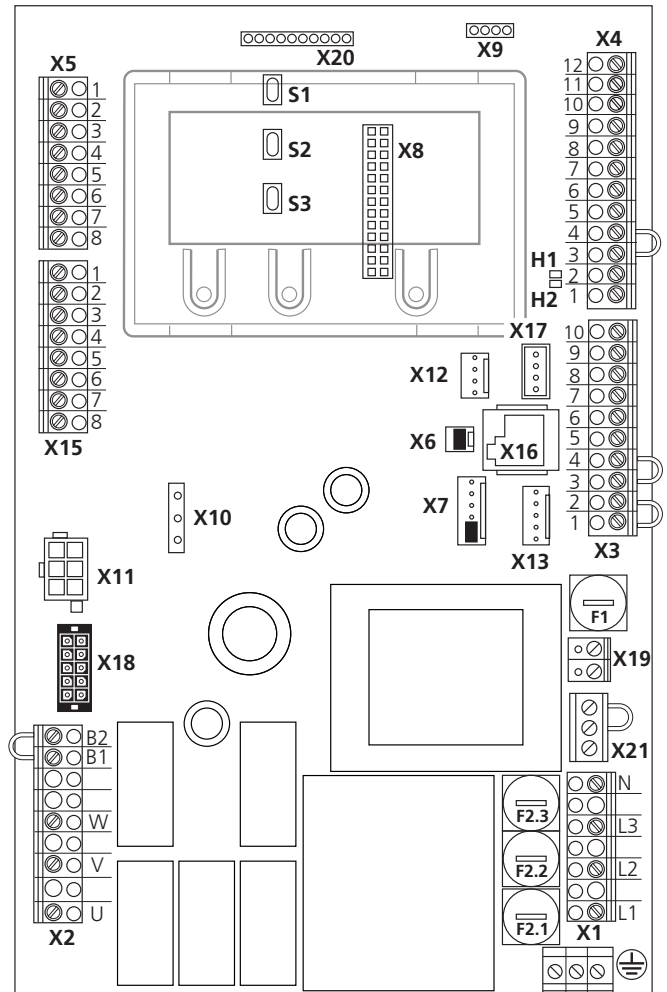

2.4 Version CS 320 FU-I  
Frequency converter incorporated in drive,  
CS 320 control in separate housing

2.4 / 1

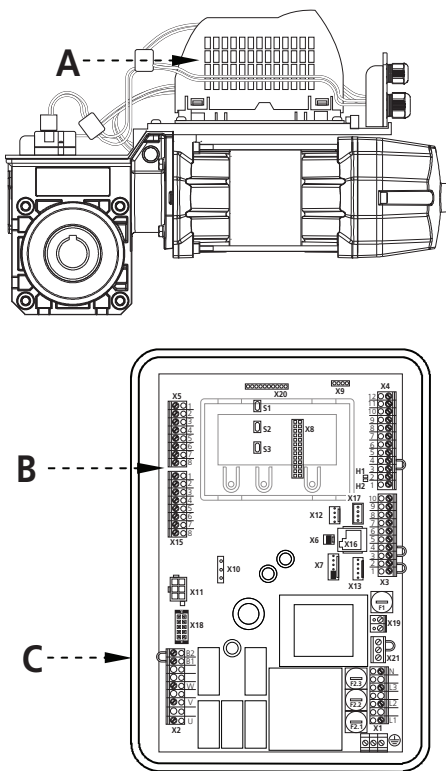


- A Frequency converter
- B CS 320 control
- C Housing

**Siemens frequency converter**

Type V20 AA 230V/1~/0.75 kW incorporated in drive,  
for STA series for use with spring-balanced sectional doors, not  
including brake module or brake resistor

2.5 Version CS 320 FU-E  
Frequency converter and CS 320 control  
together in one housing

2.5 / 1

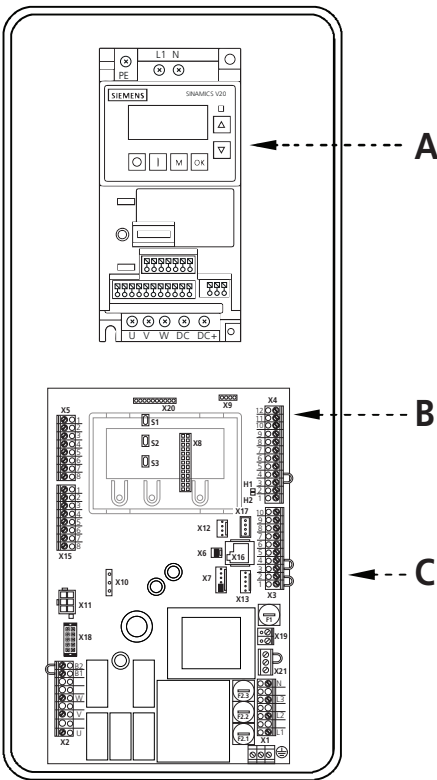


- A Frequency converter
- B CS 320 control
- C Brake module / brake resistor (under the PCB)

**Siemens frequency converter**

Type V20 AA 230V/1~/0.75 kW in "Kombi" housing  
for STA series,  
not including brake module or brake resistor

Type V20 A 400V/3~/0.75 kW in "Kombi" housing  
for MTZ, MDF, SDO series,  
including brake module or brake resistor

## 2.5 / 2

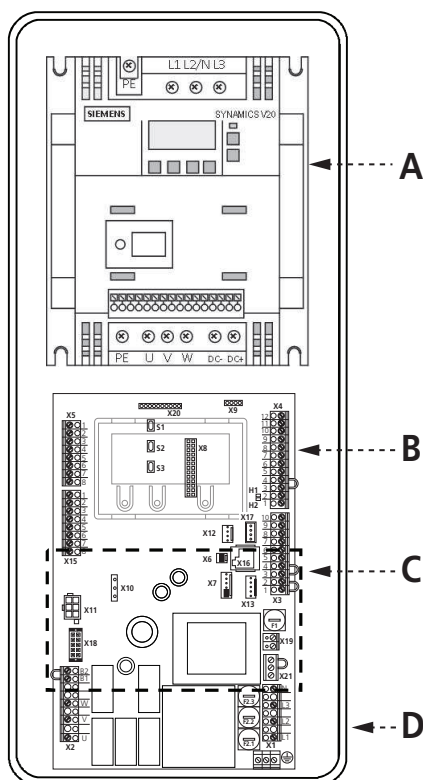


- A Frequency converter
- B CS 320 control
- C Brake module / brake resistor (under the PCB)
- D Housing

### Siemens frequency converter

Type V20 400V/3~/1.5 kW in "Kombi" housing  
 Type V20 400V/3~/2.2 kW i n "Kombi" housing  
 for MTZ, MDF, SDO series,  
 including brake module or brake resistor

## 2.5 / 3

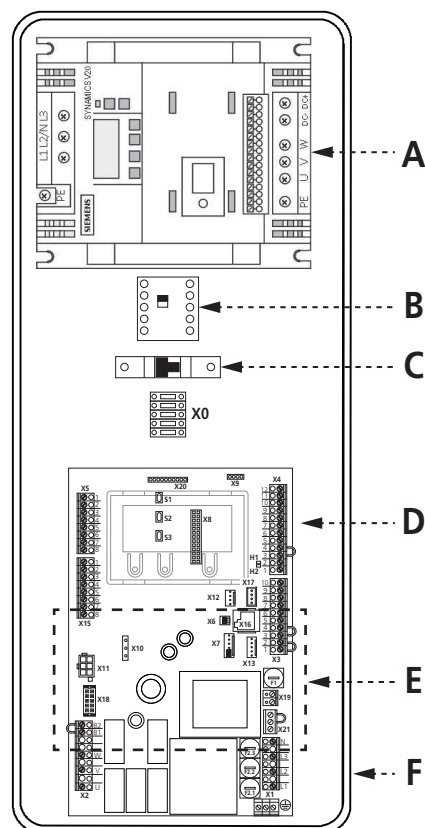

- A Frequency converter
- B Load contactor\*
- C PCB fuse protection
- D CS 320 control
- E Brake module / brake resistor (under the PCB)
- F Housing


\* Only version 230V/1~/1.5 kW und 400V/3~/4.0 kW

### Siemens frequency converter

Type V20 230V/1~/1.5 kW in Maxi housing  
 Type V20 400V/3~/3.0 kW i n Maxi housing  
 Type V20 400V/3~/4.0 kW in Maxi housing  
 for MTZ, MDF, SDO series,  
 including brake module or brake resistor

2.6 Connection of Siemens V20-A / V20-AA frequency converter

2.6 / 1

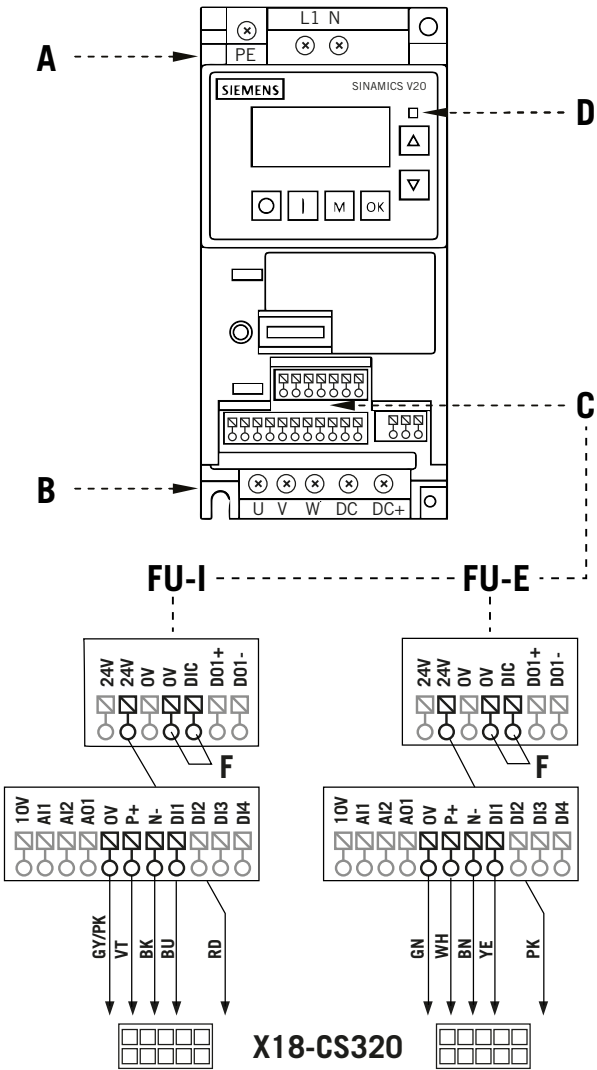


Legend:

|    |       |    |        |
|----|-------|----|--------|
| BK | black | PK | pink   |
| GN | green | RD | red    |
| GY | grey  | VT | violet |
| BU | blue  | YE | yellow |
| WH | white | BN | brown  |

- A Voltage supply, 230V/1~/N/PE (supplied through CS 320 / X2)
- B Motor output, 230V/3~/PE
- C Plug-in connection for FU data cable (different colour coding for FU-I and FU-E)
- D LED FU operation

2.7 Connection of Siemens V20 frequency converter

2.7 / 1

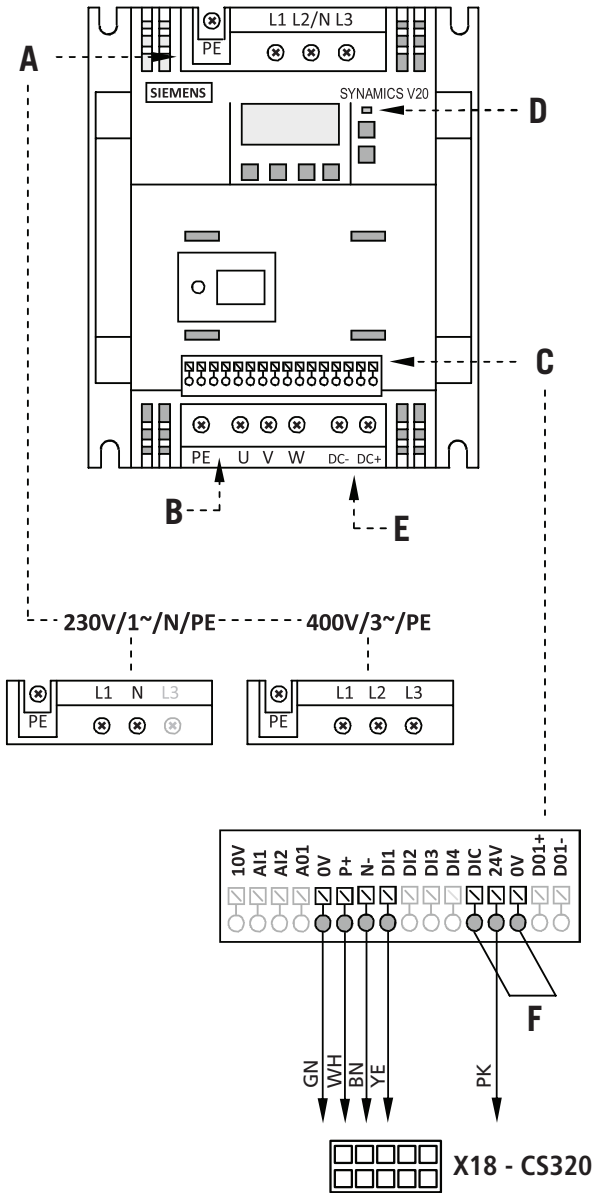

Legend:

|    |        |
|----|--------|
| PK | pink   |
| GN | green  |
| YE | yellow |
| BN | brown  |
| WH | white  |

- A Voltage supply, 230V/1~/N/PE or 400V/3 (supplied through CS 320 / X2)
- B Motor output, 230V/3~/PE or 400V/3~/PE
- C Plug-in connection for FU-E data cable
- D LED FU operation
- E Brake module connection, DC+/DC- (connection for brake resistor on brake module)
- F Bridge (MUST be used)



## 2.8 Technical data CS 320 FU

| Mechanical and electrical data   |                                                                                                                                                                                                                                                                                                                                                                                                          |  |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Housing dimensions:              | 215 x 275 x 190 mm<br>(FU-I 0.75 kW)<br>245 x 455 x 190 mm<br>(FU-E 0.75 kW,<br>FU-E 1.5 kW / 400V / 3~<br>FU-E 2.2 kW / 400V / 3~)<br>260 x 550 x 245 mm<br>(FU-E 1.5 kW / 230V / 1~<br>FU-E 3.0 kW / 400V / 3~<br>FU-E 4.0 kW / 400V / 3~)                                                                                                                                                             |  |
| Installation:                    | Fix vertically to the wall at a minimum height of 1,100 mm                                                                                                                                                                                                                                                                                                                                               |  |
| Power supply via                 |                                                                                                                                                                                                                                                                                                                                                                                                          |  |
| L1, N, PE:                       | 230V/1~ , 50/60Hz (0.75 kW / 1.5 kW)                                                                                                                                                                                                                                                                                                                                                                     |  |
| L1, L2, L3, N, PE:               | 400V/3~ , 50/60Hz (0.75 kW / 1.5 kW / 2.2 kW / 3.0 kW / 4.0 kW)                                                                                                                                                                                                                                                                                                                                          |  |
| Maximum rated motor current:     | 230V/1~ / 0.75 kW      -> 4.1 A<br>230V/1~ / 1.5 kW        -> 6.7 A<br>400V/3~ / 0.75 kW       -> 2.2 A<br>400V/3~ / 1.5 kW       -> 4.1 A<br>400V/3~ / 2.2 kW       -> 5.6 A<br>400V/3~ / 3.0 kW       -> 7.3 A<br>400V/3~ / 4.0 kW       -> 8.8 A                                                                                                                                                      |  |
| Fuse protection:                 | 230V/1~ / 0.75 kW       -> 10 A<br>230V/1~ / 1.5 kW       -> 16 A<br>400V/3~ / 0.75 kW       -> 10 A<br>400V/3~ / 1.5 kW       -> 10 A<br>400V/3~ / 2.2 kW       -> 10 A<br>400V/3~ / 3.0 kW       -> 10 A<br>400V/3~ / 4.0 kW       -> 16 A<br><br>Fuse elements with K-type characteristic.<br><br>If supplied with three-phase current, only blocks of three automatic circuit-breakers must be used. |  |
| Controller internal consumption: | max. 750 mA                                                                                                                                                                                                                                                                                                                                                                                              |  |
| Control voltage:                 | 24 V DC, max. 500 mA; protected by automatically resetting fuse for external sensors                                                                                                                                                                                                                                                                                                                     |  |
| Controller inputs:               | 24 V DC, all inputs are to be connected potential-free.<br>Minimum signal duration for input controller command >100 ms.                                                                                                                                                                                                                                                                                 |  |

### Mechanical and electrical data

|                                         |                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Controller outputs:                     | 24 V DC, max. 500 mA.                                                                                                                                                                                                                                                                                                                                                             |
| Safety circuit / emergency stop:        | All inputs must be connected potential-free; with an interruption of the safety chain, no further electrical movement of the drive is possible, even with dead man's switching.                                                                                                                                                                                                   |
| Light barrier (Protection level D):     | If the light barrier is used as a protection system according to level D, its function must be checked regularly and within 6 months as a minimum. If this is a self-testing system, this requirement does not apply.                                                                                                                                                             |
| Safety input with resistance evaluation | Performance Level C, cat.2 for safety-related components with 8.2 kΩ terminal resistance                                                                                                                                                                                                                                                                                          |
| Display (LCD):                          | Only an original LCD monitor from Marantec may be used.                                                                                                                                                                                                                                                                                                                           |
| Relay outputs:                          | If inductive loads are to be switched (e.g. Additional relays or brakes), these must be equipped with corresponding interference suppression measures (e.g. Free-wheeling diodes, varistors, RC elements). Work contact potential-free; min. 10 mA; max. 230 V AC / 4A. <i>Contacts that have been used for power switching can no longer be used for switching low currents.</i> |
| Temperature range:                      | Operation: -10°C to +45°C<br>Storage: -25°C to +70°C                                                                                                                                                                                                                                                                                                                              |
| Humidity:                               | Up to 80% non-condensing.                                                                                                                                                                                                                                                                                                                                                         |
| Vibrations:                             | Low-vibration mounting, e. g. on a masonry wall.                                                                                                                                                                                                                                                                                                                                  |
| Protection grade                        | IP 65                                                                                                                                                                                                                                                                                                                                                                             |
| Weight                                  | approx. 1.8 kg                                                                                                                                                                                                                                                                                                                                                                    |

## 2.9 Category and performance level of the safety function per EN ISO 13849-1

| Function                                              | Realisation                                                                                                                                                                                                                                                                                                                                                                                                       | MTTF <sub>D</sub><br>Electro-nics | MTTF <sub>D</sub> Total<br>with output<br>contactor | DC <sub>avg</sub> | Category | Performance<br>Level |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|-----------------------------------------------------|-------------------|----------|----------------------|
| Emergency stop                                        | Input terminal X3, X6, X7, X11<br>Interrupts the power supply to the output relay and main contactor, independent of the CPU.<br>Feedback to the CPU available.                                                                                                                                                                                                                                                   | 1175 years                        | 191 years                                           | 84.7%             | 3        | d                    |
| Stop circuit                                          | Input terminal X3, X7<br>Interrupts the supply to the main contactor.<br>Message to CPU.                                                                                                                                                                                                                                                                                                                          | 1175 years                        | 191 years                                           | -                 | B        | b                    |
| End position detection through absolute value encoder | Input terminal X11<br>For position determination and end position detection. Testing through plausibility check of expected position values to received position values.                                                                                                                                                                                                                                          | 1062 years                        | 188 years                                           | 83.7%             | 2        | c                    |
| End position detection through end position switch    | Input terminal X15<br>Protection through runtime limiting. Inputs are evaluated by the CPU.                                                                                                                                                                                                                                                                                                                       | 1248 years                        | 193 years                                           | 63.1%             | 2        | c                    |
| Light barrier evaluation                              | Input terminal X4<br>Pulse evaluation through CPU. Faults are identified through plausibility evaluation in the CPU. The frequency must lie between 130 Hz and 190 Hz. The function is monitored by switching the supply voltage (T117, IC111) of the light barrier each time before travel and every two minutes when idle. With activation in the CLOSE direction, a stop or reversing of the door takes place. | 1000 years                        | 186 years                                           | 81.9%             | 2        | c                    |
| Evaluation of a pneumatic switching strip             | Input terminal X4<br>Evaluation through CPU. Testing through plausibility evaluation. Switching signal must come shortly before reaching the lower end positions.                                                                                                                                                                                                                                                 | 1123 years                        | 190 years                                           | 85.6%             | 2        | c                    |
| Evaluation of single or double 8k2 / single OSE SKS   | Input terminal X4<br>Evaluation through CPU. The function is monitored by switching the supply voltage (IC110, T138) each time before travel.                                                                                                                                                                                                                                                                     | 1123 years                        | 190 years                                           | 85.6%             | 2        | c                    |

DC<sub>avg</sub>    Average diagnostic coverage  
MTTF<sub>D</sub>    Mean time to dangerous failure

## 3. Installation

### 3.1 Safety instructions for installation



#### **WARNING!**

##### **Danger due to a failure to observe the installation instructions!**

This chapter contains important information for the safe assembly of the product.

- Read this chapter through carefully before assembly.
- Follow the safety instructions.
- Perform the assembly as described.

Assembly by qualified specialist personnel only.

→ "1.2.2 Specialist personnel"

Electrical work must be performed by qualified electricians exclusively.

→ "1.2.2 Specialist personnel"

- Before performing wiring work, always disconnect the system from the power supply.
- Make sure that the power supply remains disconnected during wiring work.

The operator of the system or their representative must be instructed on its operation after the system has been installed.

- Children must not play with the control or command devices.
- No persons or objects are permitted inside the danger zone of the system.
- It is necessary to check all available emergency command devices.
- Observe possible crushing and shearing points on the system.
- Never reach into a running system or moving parts.
- The line types and cross-sections must be selected in accordance with the valid specifications.
- With a fixed connection, an all-pole main switch must be used.
- Mains cables and control cables must be routed separately.
- The line types and cross-sections must be selected in accordance with the valid specifications.
- It is essential to observe the local protective regulations.
- Observe the specifications of the door manufacturer for installation.

The following points must be correct to guarantee fault-free functioning:

- The door is installed, fully functional and designed for power-driven operation.
- The gear motor is fitted and ready for operation.
- The command and safety devices are fitted and ready for operation.
- The control housing with the CS 320 FU controller is fitted.

Observe the valid standards and regulations!

-  The instructions from the respective manufacturer must be observed for the installation of the door, the gear motor and the command and safety devices.

### 3.2 Mains connection

#### **Prerequisites**

The following points must be correct to guarantee the function of the controller:

- The mains voltage must correspond with the information on the type plate.
- The mains voltage must be the same as the input voltage of the frequency converter.
- The output voltage of the frequency converter must be the same as the supply voltage for the operator.
- The motor rating data configured must comply with the data on the type plate.
- In the case of three-phase power, this must have a clockwise rotating field.
- With a fixed connection, an all-pole main switch must be used.
- With three-phase power, only triple block circuit breakers of type C (max. 16 A) shall be used.




#### **ATTENTION!**

##### **Malfunctions due to improper installation of the controller!**

- The use of frequency converters results in high-frequency pulsating direct fault currents/leakage currents against the protective conductor (PE). Any residual current device (RCD) used must therefore be of type B+ (VDE 0100-530, 531.3.2).  
We recommend using a separate fault current circuit breaker for every door or gate system.
- Before switching on the control for the first time, a check must be carried out after completing the wiring to ensure that all the motor connections on the motor and the control are securely fixed. All control voltage inputs are galvanically isolated from the supply.
- The control and load lines of the connected drives must be double-insulated along their entire route.


### Detailed circuit diagram for mains connection and motor connection (230V / 1-phase / 0.75 kW)

3.2 / 1

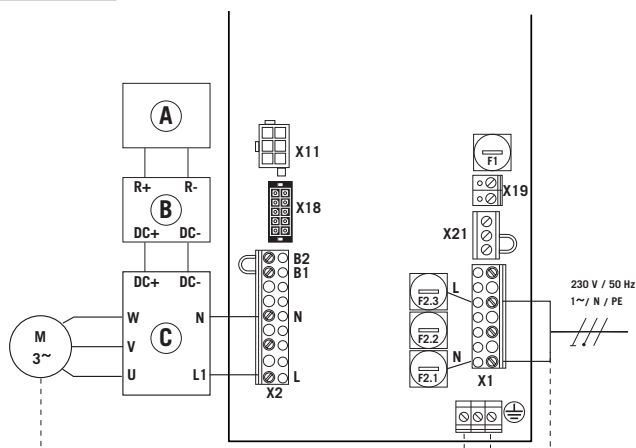


### Detailed circuit diagram for mains connection and motor connection (230V / 1-phase / 1.5 kW)

3.2 / 2

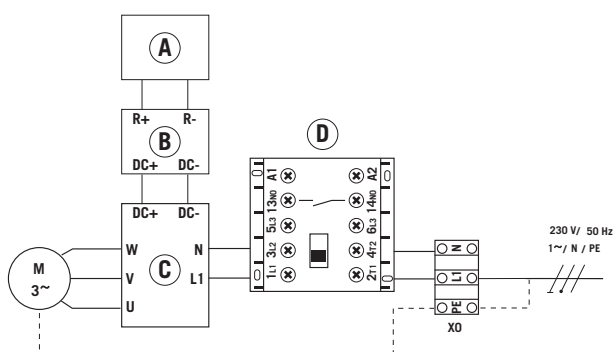


### Detailed circuit diagram for mains connection and motor connection (400 V 3-phase / 1.5 kW / 2.2 kW)

3.2 / 3

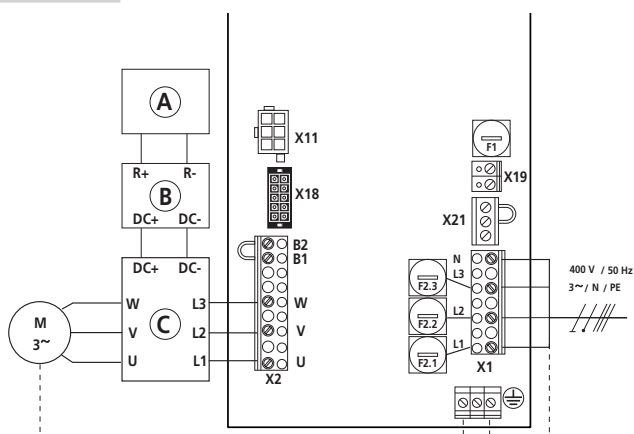

### Detailed circuit diagram for mains connection and motor connection (400 V 3-phase / 4.0 kW)

3.2 / 4

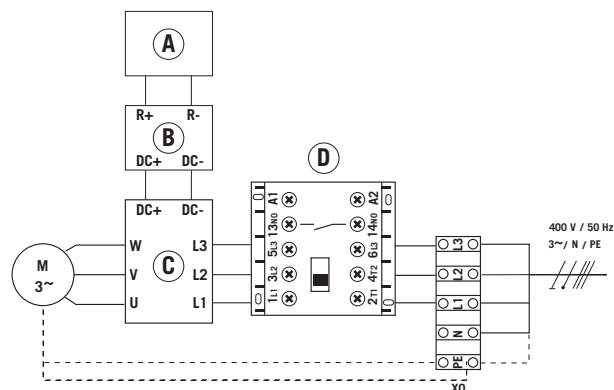

#### Key:

- A Brake resistor (not for STA and FDO range)
- B Brake module (not for STA and FDO range)
- C Frequency converter
- D Load contactor
- M1: Motor
- X1: Terminal block for mains connection (with load contactor)
- X1: Terminal block for mains connection
- X2: Terminal block for motor
- X11: Connector strip for electronic limit position system with safety circuit
- X15: Terminal block for mechanical limit switches (Safety circuit at X2 / B1-B2)
- X19: Power supply connection for external devices


#### Connection:

- Connect electronic limit position system to X11, or mechanical limit switch to X15 of the controller.
  - Connect power supply frequency inverter (A) to X2, or X10 of the controller.
  - Connecting the motor to the frequency converter.
  - Connect FU (C) data cable to X18 of the control.
  - Connect the control to the mains power supply.
  - Cable groups must be secured close to their relevant terminals using a cable tie.
  - Check and compare technical data.
- "2.8 Technical data CS 320 FU"

### 3.3 Internal fuse protection

The controller CS 320 FU is equipped with internal fuse protection (F2) at the mains input. The fuse elements are equipped with fine fuses 8A / T (5.2 x 20 mm) in the factory.

#### 3.3 / 1

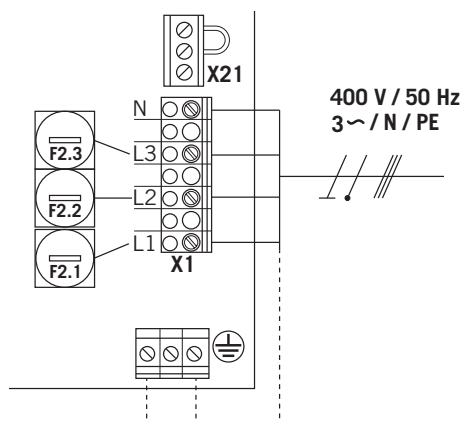

#### **! ATTENTION!**

##### **Malfunctions due to improper fuse protection of the controller!**

Internal fuse maximum 10 A / T!


The internal fuses do not replace fuse protection of the supply cable. This shall be realised with max. 16 A and must be configured as triple block circuit breakers of type C.

→ "3.2 Mains connection"


### 3.4 Mains voltage selection

The position of the bridge connector to X21 must be adjusted to the supply voltage and motor voltage.

#### 3.4 / 1

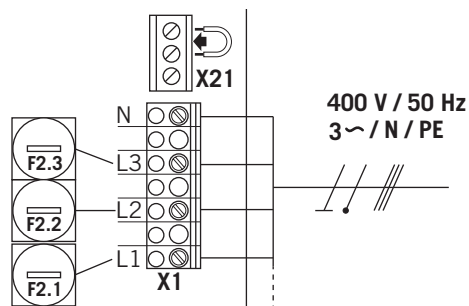


#### 3.4 / 2

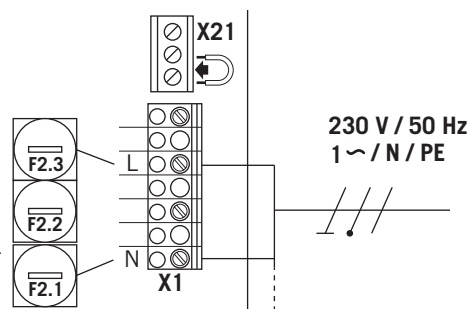

3.5 Supply to external devices
(only with 400 V / 3-phase connection)

The CS 320 FU has 2 separate voltage supplies for external components, such as signal devices, light barriers, etc.
X19 230V/1~
X4 24V-DC

3.5 / 1

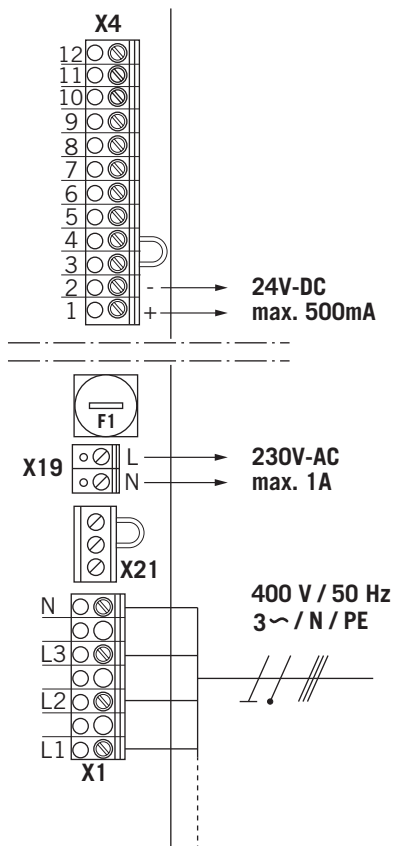


NOTE:
Use of the connection X19 is only possible with a supply with 400V / N / 3~.
The connection X19 is protected by the fuse element F1 (max. 1 A / T).

3.6 Connection of electronic limit position system absolute value encoder (AWG)

AWG V3 TYPE Marantec


3.6 / 1

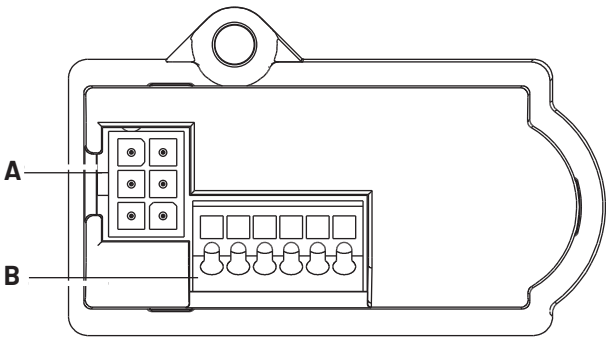

A: Absolute value encoder plug
B: AWG plug-in terminal

AWG TYPE Kostal

3.6 / 2

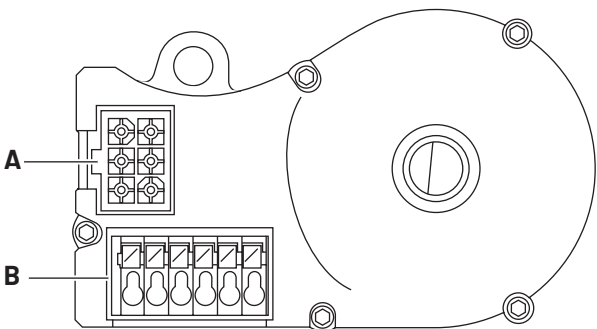

A: Absolute value encoder plug
B: AWG plug-in terminal

Connector strip X11 (on connector A)


3.6 / 3

Table with 2 columns and 3 rows showing wire numbers and colors: 4 (grey), 7 (yellow), 5 (green), 8 (pink), 6 (white), 9 (brown).

Cables with either numbered or coloured wires are used for the AWG, depending on the drive:
4 (grey): Safety chain input
5 (green): RS 485 B
6 (white): GND
7 (yellow): RS485 A
8 (pink): Safety circuit output
9 (brown): 12V DC

### Connector strip B (only absolute value encoder)

3.6 / 4

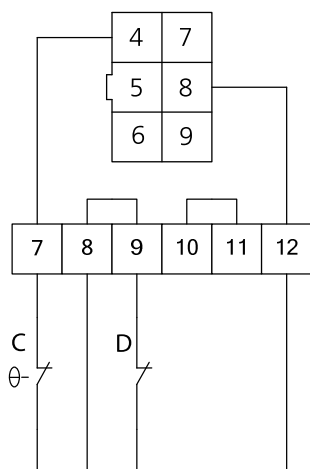

- C: Thermal element in the drive  
D: Emergency manual actuation (emergency crank or emergency chain)

#### NOTE:

In order to satisfy the requirements of EN 12453:2017 the electronic end position system must comply as a minimum with PL "c" with a min. category 2 per EN ISO 13849-1.

In order to satisfy this requirement, it is only permissible to use an absolute value encoder from Marantec (art. no. 97957) as an electronic end position system.


## 3.7 Mechanical limit switch (MEC) connection

Alternatively to the absolute value encoder as an electronic system, it is also possible to connect a mechanical cam limit switch and evaluate this.

With first commissioning and after a RESET, the connected limit position system is automatically detected. With a subsequent change, the respective limit position system must be selected via a parameter setting in the INPUT operating mode.


### Series STA, MDF05, MTZ05

3.7 / 1

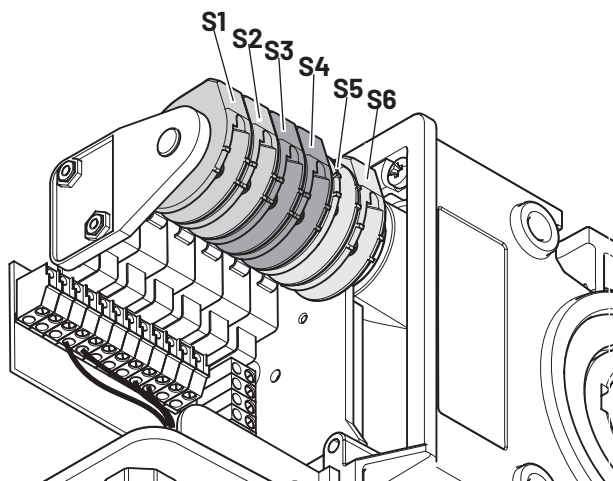


### Series MDF20+, KD, MTZ20+

3.7 / 2

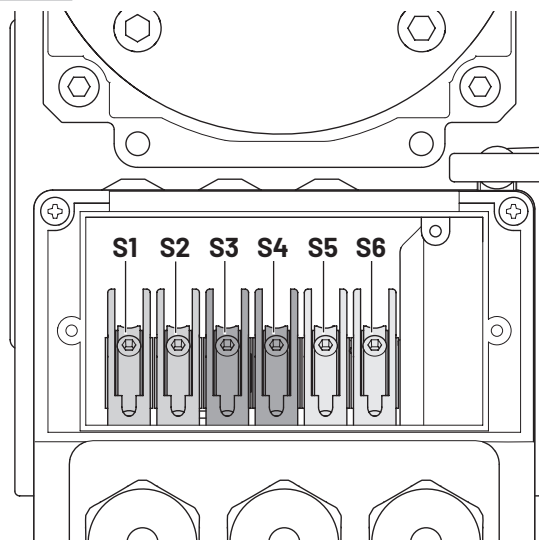


### Mechanical limit switches

3.7 / 3

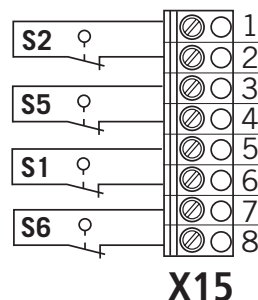


### Safety circuit

3.7 / 4

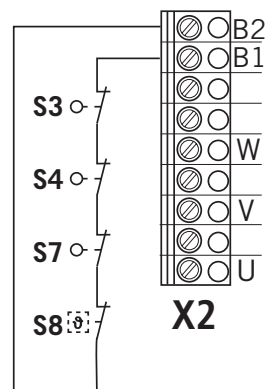

Example of connection with 7-wire solution

3.7 / 5

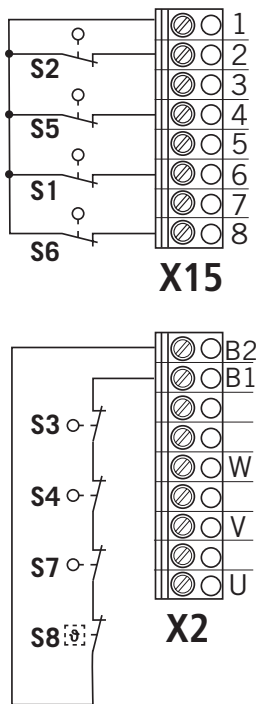

Legend:

- S1 Supplementary limit switch UP
- S2 Limit switch UP
- S3 Safety limit switch UP
- S4 Safety limit switch DOWN
- S5 Limit switch DOWN
- S6 Supplementary limit switch DOWN
- S7 Emergency operation (NC - contact)
- S8 Motor thermal protection

NOTE:


In order to satisfy the requirements of EN 12453:2017 the mechanical limit switches must have been approved as a “reliable component” in accordance with EN ISO 13849-1.  
Drives with integrated safety catch device must not be equipped with mechanical limit switches.

**! ATTENTION!**

**Property damage due to improper installation!**

Connection as a 6-wire solution is prohibited and can lead to destruction of the CS 320 circuit board.  
Reference potential on X2/B1-B2 = 24V-DC  
Reference potential on X15=12V-DC

3.7 / 6

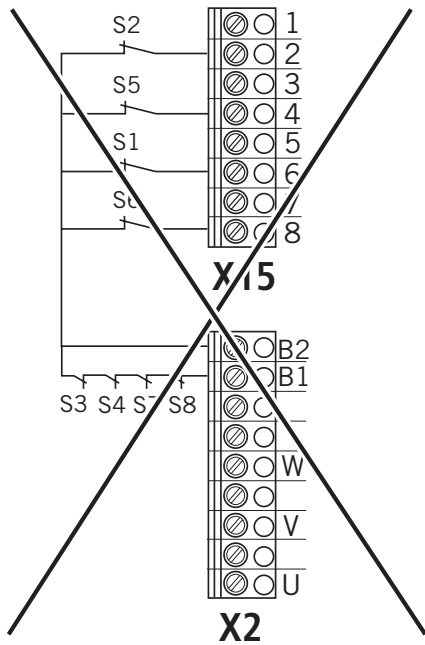



### 3.8 Connection of command devices

#### CAUTION!

##### **Risk of injury due to uncontrolled door movement!**

A CLOSE command in dead-man operation without a view of the door is not permitted.

- Install the command devices for the dead-man operation in direct visual contact with the door, although outside the danger zone for the operator.


A CLOSE command without visual sight of the door may only be given via input 1 / MOD 32 (X4 / 9-10).

If the command device is not a key switch:

- Install it at a height of at least 1.5 m.
- Install it where it is inaccessible to the public.

#### Command devices (standard)

3.8 / 1

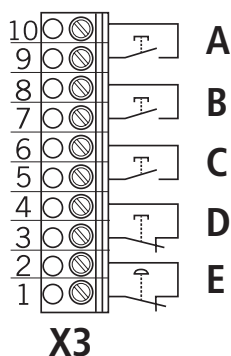


#### Legend:

- A Button / input DOWN
- B Button / input impuls
- C Button / input UP  
(UP inside, with active two-way control)
- D STOP button
- E Emergency stop command device


#### UP / STOP / DOWN switch (6-wire solution)

3.8 / 2

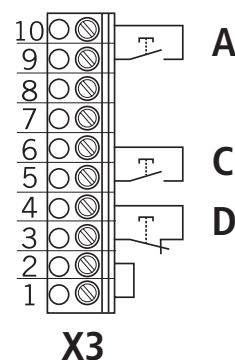

#### UP / STOP / DOWN switch (4-wire solution)


3.8 / 3

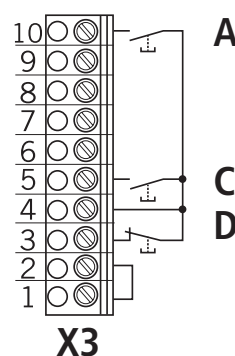

#### IMPULS button

Selection of the function via IMPULS parameter  
→ "9.2 Input operating mode"


3.8 / 4

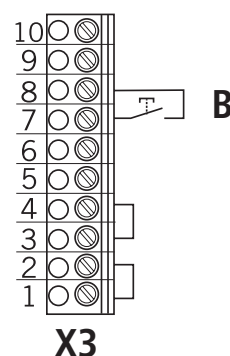

- UP switch
- STOP button

External radio receiver


3.8 / 5

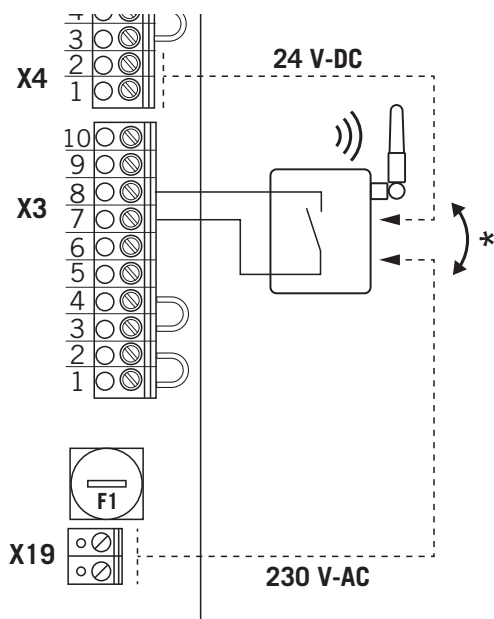

\* optionally, depending on connection of the radio receiver

Key switch

3.8 / 6

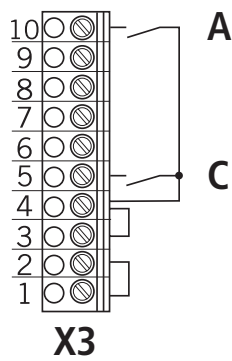


Legend:

- A Button / input DOWN
- C Button / input UP  
(UP inside, with active two-way control)

Cover keypad KDT

Push-button with NO / NC contacts.  
Up to year of manufacture 12 / 2009.

3.8 / 7

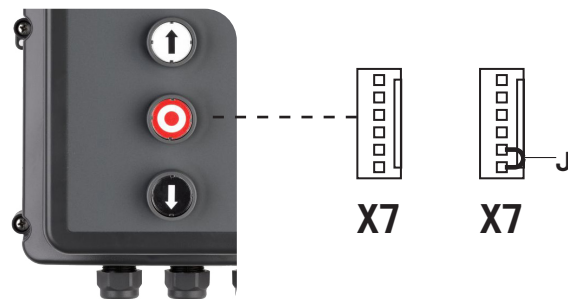

J Jumper (bridge)

The jumper must be connected if the KDT keypad is not connected.

Cover keypad CS

Silicone keys with NO contacts.  
From year of manufacture 01 / 2010.


3.8 / 8



ON/OFF key switch

NC contact for interrupting the door function (optional).  
This switch is part of the safety circuit.

3.8 / 9

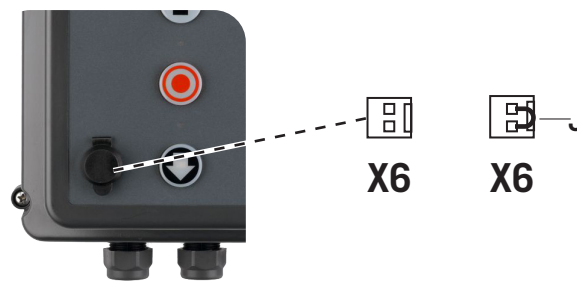

J Jumper (bridge)

The jumper must be connected if the key switch is not connected.

### 3.9 Light grid connection


It is possible to connect up to 2 light grids to the CS 320 FU Light grid 1 is connected to the closing edge protective device input. Light grid 2 is connected to programmable input 2.

#### Light grid 1

Parameter SKS = MOD 4

The connection cable (A) is pluggable.

#### 3.9 / 1

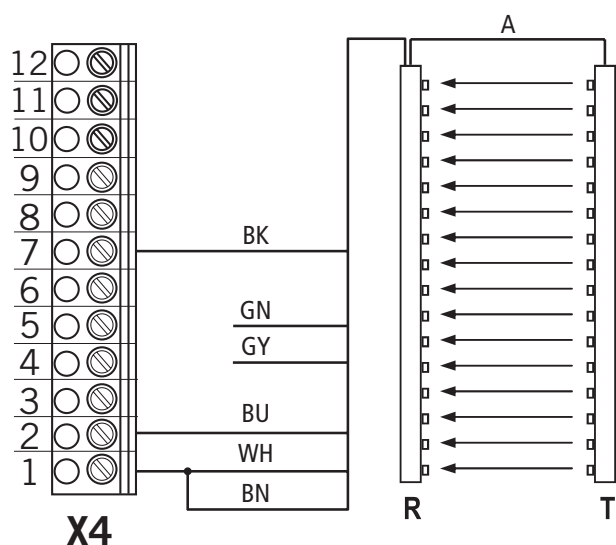


#### Light grid 2

Parameter INPUT 2 = MOD 12

The connection cable (A) is pluggable.

#### 3.9 / 2

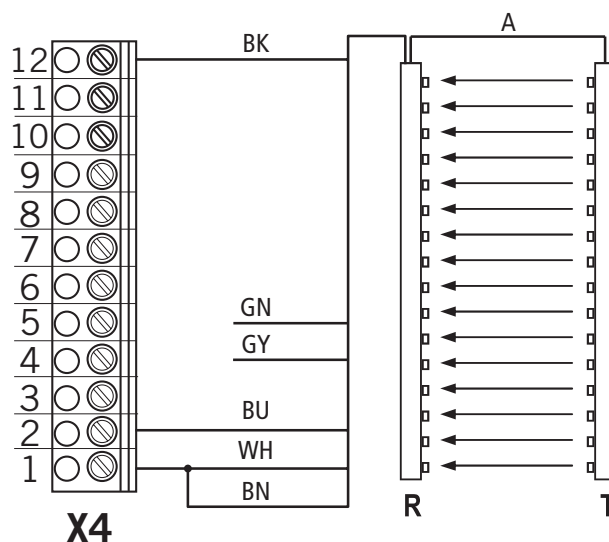

#### Legend:

BK Black  
GN Green  
GY Grey  
BU Blue  
WH White  
BN Brown

R Receiver  
T Transmitter

#### NOTE:

The GridScan/Pro light grids from Cedes are shown on an exemplary basis in this manual.

The GridScan/Pro light grids correspond to

- Performance Level d, category 2 per EN ISO 13849-1
- Protection level E per EN 12453:2017

Diagrams from other manufacturers on inquiry.


For a precise description of the function and connection, refer to the separate documentation for the light grid.

3.10 Connection of closing edge protective device 1

With first commissioning and after a RESET the system of the closing edge protective device is automatically detected and programmed. If no closing edge system is connected, the input is requested every time the power is switched on again until a closing edge system has been detected. With a subsequent change, the respective system must be selected via a parameter setting in the INPUT operating mode. In the case of light barriers with a test function, this must be set manually.  
→ "9.2 Input operating mode"

Optoelectronic closing edge protective device (OSE)  
Parameter SKS = MOD 1


3.10 / 1

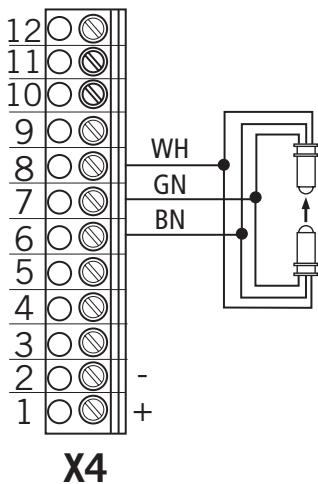

Legend:  
WH White  
GN Green  
BN Brown


Electrical closing edge protection (8.2 kOhm)  
Parameter SKS = MOD 2

3.10 / 2

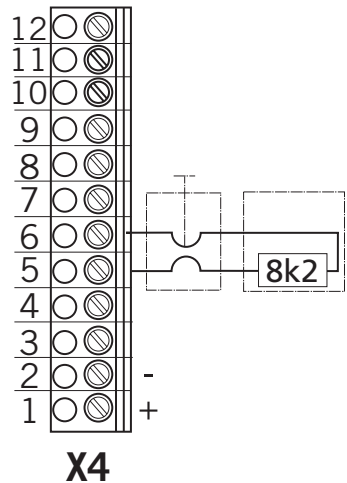

Pneumatic closing edge protection (DW)  
Parameter SKS = MOD 3 / testing automatically active

3.10 / 3

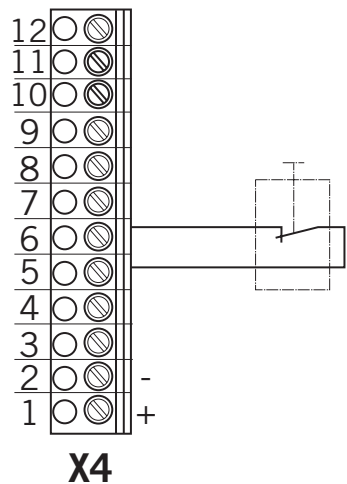

### 3.11 Connection light barrier 1


With first commissioning and after a reset the light barrier is automatically detected and programmed. If no light barrier system is connected, the input is requested every time the power is switched on again until a light barrier system has been detected. With a subsequent change, the respective system must be selected via a parameter setting in the input operating mode. In the case of light barriers with a test function, this must be set manually.

→ "9.2 Input operating mode"

#### Light barrier 4-wire NC

without testing parameter LIGHT BARR 1 = MOD 3  
with testing parameter LIGHT BARR 1 = MOD 5


3.11 / 1

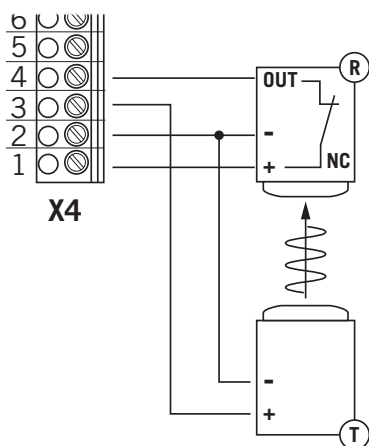

#### Light barrier Marantec 2-wire

with testing parameter LIGHT BARR 1 = MOD 1


3.11 / 2

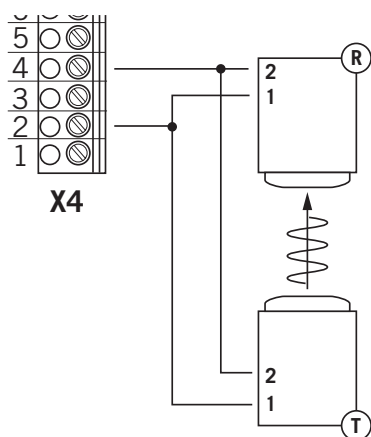

#### Light barrier 3 wire NPN

without testing parameter LIGHT BARR 1 = MOD 2  
with testing parameter LIGHT BARR 1 = MOD 4


3.11 / 3

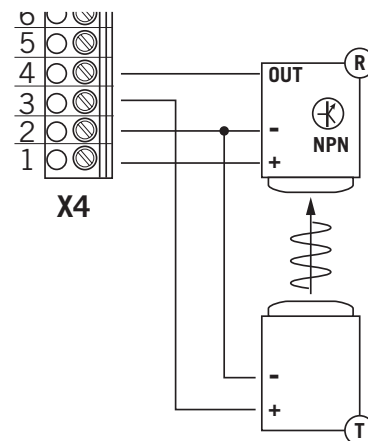

#### Light barrier 3 wire PNP

without testing parameter LIGHT BARR 1 = MOD 3  
with testing parameter LIGHT BARR 1 = MOD 5

3.11 / 4

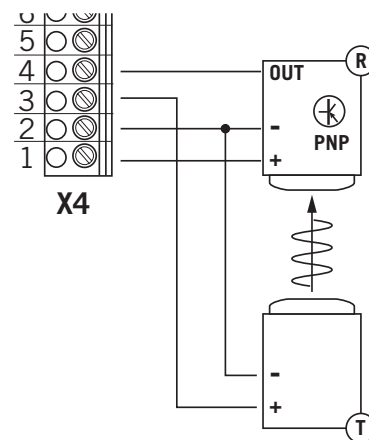

#### Legend:

R Receiver  
T Transmitter

#### NOTE:


All light barriers are active in the UP or DOWN direction depending on the setting.

→ "9.2 Input operating mode" (Parameter LB FUNC 1)

### 3.12 Terminal assignment, relay outputs

Four potential-free relay outputs are available, which can be programmed with a variety of types of function.  
→ "9.2 Input operating mode"

#### 3.12 / 1

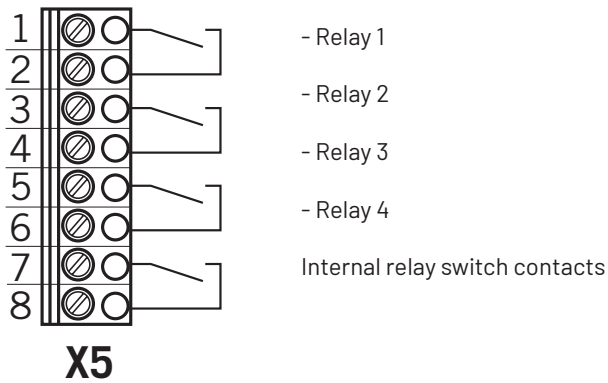

There are four potential-free relay outputs able to take a max. load of 4A at 230 V/1~.

The type of function depends on the parameter setting for the respective relay output in the INPUT operating mode.

### 3.13 Connection of programmable inputs

The controller CS 320 has 3 programmable inputs, for which different functions can be selected.  
The type of wiring is determined on the basis of the parameter settings for the individual inputs.  
→ "9.2 Input operating mode" (Parameter INPUT 1-3)

#### ! ATTENTION!

**Danger of damage to the circuit board due to incorrect connection!**

Inputs 1, 2 and 3 have different reference potentials and must not be operated from a common potential!


#### Input 1

Optional wiring with NO / NC contacts.

Reference potential 24V-DC

→ "9.2 Input operating mode" (Parameter INPUT 1)

#### 3.13 / 1

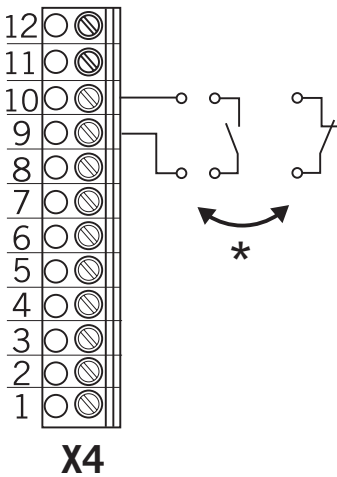

\* optionally


## Input 2

Optional wiring with components on a 8.2 kOhm basis,  
NO / NC contacts and photo sensors.

Reference potential 12V-DC

→ "9.2 Input operating mode" (Parameter INPUT 2)

### 3.13 / 2

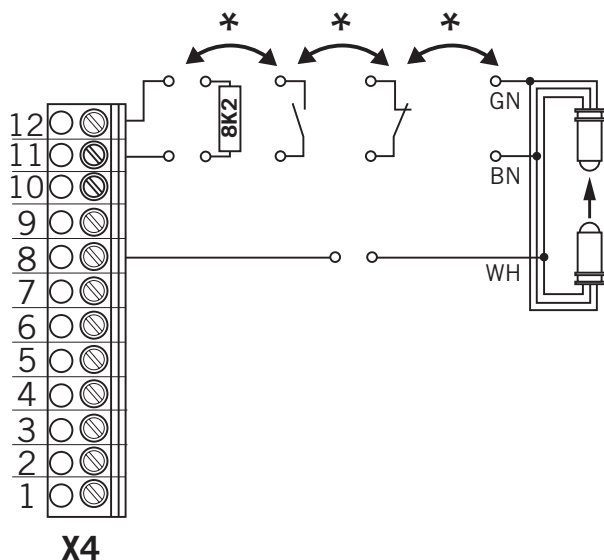

\* optionally

#### Legend:

GN Green  
BN Brown  
WH White

#### NOTE:

Programmable input 2 can also be used for the connection  
of a light grid.

→ "3.9 Light grid connection"

Programmable input 2 is also used as a safety input in accordance  
with EN 12453:2017.

If a resistance value is detected with first commissioning and  
after a reset, the MOD 2 (safety input) is activated automatically.  
Individually connected closing edge protective device 8.2 kOhm  
must be activated manually in this case.

→ "3.14 Safety input per EN 12453"


## Input 3

Connector strip for optional wiring with pluggable week timer,  
pluggable brake monitoring module BWM1 or as connection for  
monitoring an external load contactor and drive brake.

Reference potential 5V-DC

→ "9.2 Input operating mode" (Parameter INPUT 3)

### 3.13 / 3

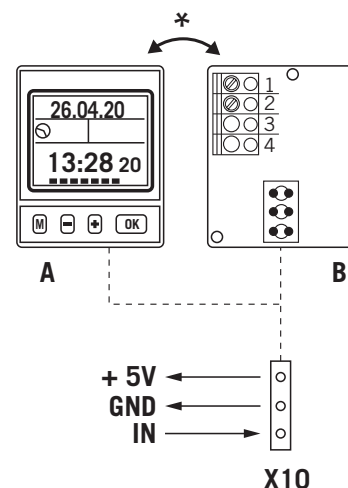

\* optionally

#### A

##### Week timer

The week timer offers a weekly program for opening the door  
system and keeping it open with up to 8 switching times per day.  
While the door is held open, the timer emits a continuous signal  
that prevents the door system from closing.

After the set time interval has expired, this continuous signal  
is switched off and the door system can be closed again, e.g.  
manually via a CLOSE command.

Alternatively, automatic closing is also possible.

For this purpose the parameter OPEN TIME = 1 must be set in the  
input operating mode.

#### B

##### Brake monitoring module BWM1

The brake monitoring module is required for drives with a brake  
connected (relay 4 / MOD 14-16). The module monitors the brake  
function.

#### C


##### Monitoring an external load contactor and drive brake (optional)

→ "3.13 / 5"

For a precise description of the function and connection, refer  
to the separate documentation for the week timer and brake  
monitoring module.

Connection of the brake monitoring module

3.13 / 4

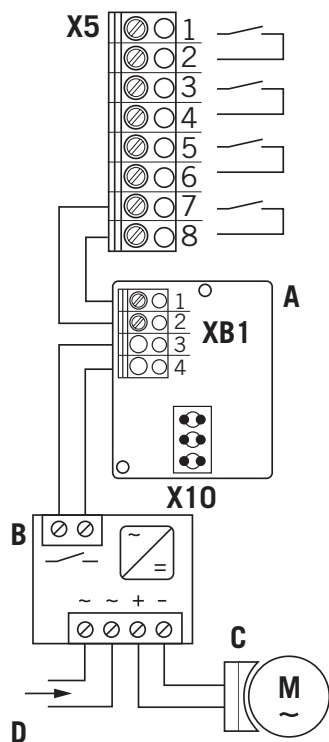

Legend:

- A Brake monitoring module BWM 1
- B Brake rectifier
- C Drive brake
- D Brake power supply (AC)

NOTE:

If MOD 14-16 (brake actuation) is set on relay 4, the mode for the brake monitoring module is automatically set at input 3. If a timer is used, this setting must be adapted to set the MOD for the timer at input 3.

Optionally, input 3 can also be used for monitoring an external load contactor and the drive brake.


The parameter INPUT 3 must then be set to MOD 22.

Connection for monitoring an external load contactor and drive brake (optional)

If the power of the door drive/frequency inverter used exceeds the maximum load capacity of the internal contactor, an external load contactor must be used.

In this case, it is possible to monitor the external load contactor and drive brake with input 3 and therefore guarantee safe operation.

3.13 / 5

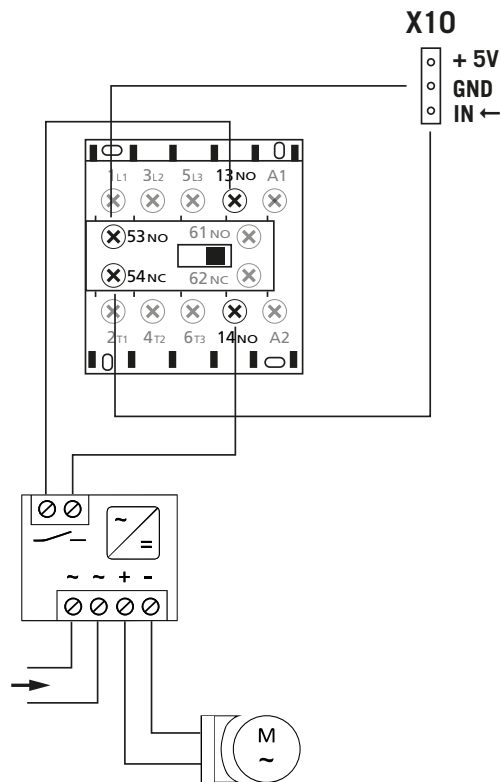

The wiring preparation is carried out in the factory.



### 3.14 Safety input per EN 12453

Increased requirements on the fail-safety of the slip door switch have been part of EN 12453 since 2001. With EN 12453:2017 increased safety requirements (PLc, Cat.2) also apply, for example to slack rope switches and switches of fall protection systems, including the transmission and processing of the signal.

With the setting MOD 2 the programmable INPUT 2 allows the evaluation of these components, which all work with an internal resistance value of 8.2 kOhm. If a fault occurs in one of the components, the system can no longer be operated and the message ERROR STOP appears on the display.


1 – 4 components on a 8.2 kOhm basis can be linked according to the following wiring diagrams. It does not matter which of the respective switches represents the components 1 – 4 here.

\* optionally

- ✓ The tolerance of the individual resistance values must not exceed max. 1%.


#### Connection 4 components

3.14 / 1

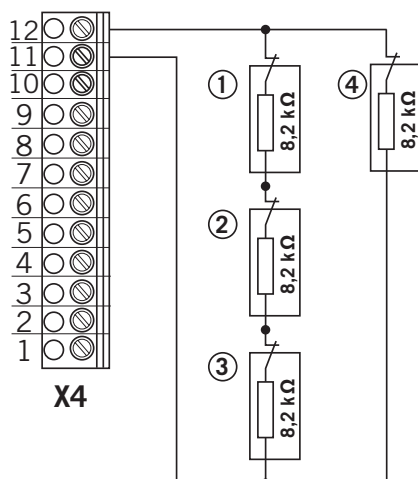


#### Connection 3 components

3.14 / 2

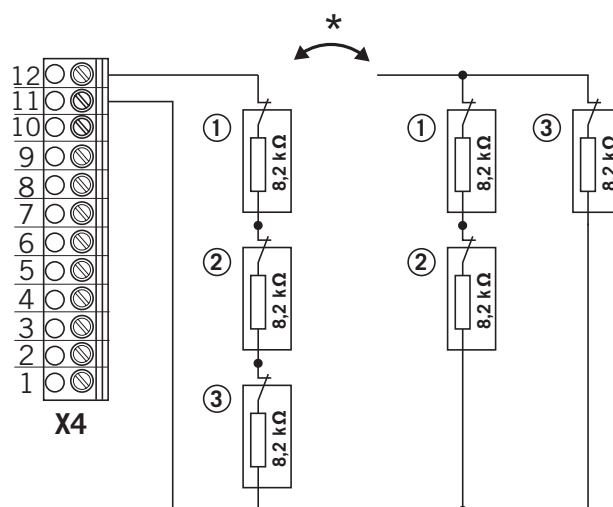


#### Connection 2 components

3.14 / 3

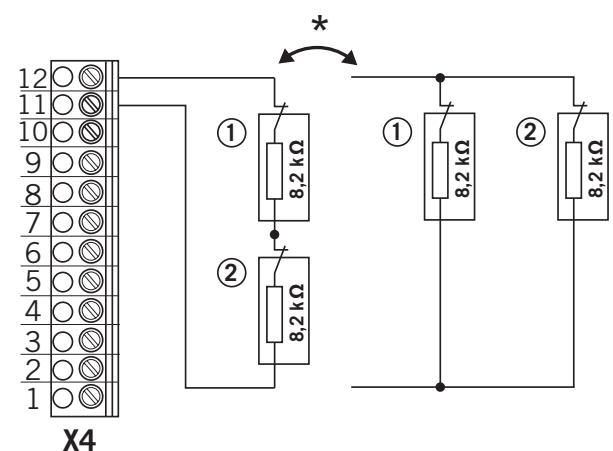

#### Connection 1 component

3.14 / 4

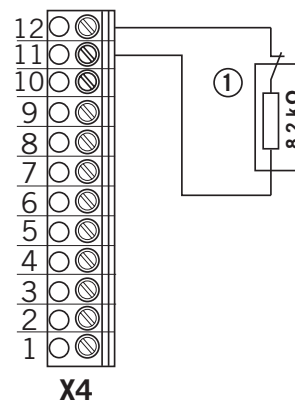

**NOTE:**

With first commissioning and after a reset, input 2 is set to A (self-teaching) once.

If a resistance value is detected, MOD 2 (safety input) is automatically set and the measured value is stored and monitored as a reference for the connected safety-related components. Deviation of the measured value leads to an error message.

If a safety element is subsequently added or removed, the resistance measurement must be performed again. For this purpose the parameter INPUT 2 must be manually reset to A (self-teaching) and the supply voltage must be switched off and on again once. Renewed measurement then takes place.

The components used must either comply with EN ISO 13849-1 PLC/Cat.2 or be approved as a reliable component in order to satisfy the requirements of EN 12453:2017.

Alternatively, the fall protection can also be equipped with an NC contact and integrated in the safety circuit of the controller (X3/1-2). This switch with NC contact must be approved as a reliable component per EN ISO 13849-1. To ensure cross-wire short monitoring, the connection cable must be laid in a protective tube.

### 3.15 Radio receiver, pluggable

2 different pluggable radio receivers can be connected to the controller directly.

**CS-radio 1-channel, multi-bit, 15 storage spaces**

- 868 MHz - art. no. 76616
- 433 MHz - art. no. 76614

Compatible hand-held transmitter:

- RT 52, 28, 29, 31
- Digital 382, 384, 313, 321, 323, 306, 318


**Digital 991 1-channel, AES 128 Bit, 200 storage spaces**

- 868 MHz - art. no. 118726
- 433 MHz - art. no. 118727

Compatible hand-held transmitter:

- Digital 564, 663, 572, 633, 506, 517, 518

#### 3.15 / 1

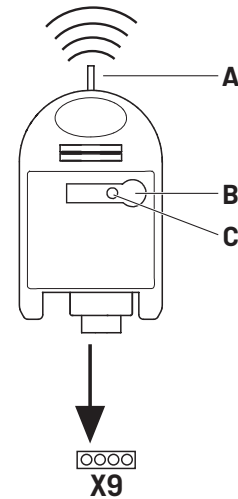

- A Antenna
- B Programming button
- C LED

 For a precise description of the function and connection, refer to the separate documentation for the radio receiver.

### 3.16 CS radio

#### Connection

- Plug the radio receiver into connector strip X9.

#### Teach transmitter codes

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Press the channel button of your transmitter. If the radio controller has stored the transmitter code, the LED lights up for approx. 4 seconds.

A total of 15 transmitter codes (hand-held transmitter) can be taught. If all storage spaces are occupied, the LED flashes very rapidly. Furthermore, it is possible to integrate additional hand-held transmitters through duplication from one hand-held transmitter to the next.

#### Targeted deletion of a transmitter code

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press the desired channel button of your transmitter. If the LED lights up for approx. 4 seconds, the corresponding transmitter code has been deleted.

You can cancel the deletion process by briefly pressing the programming button.

#### RESET (completely delete memory)

- Press and hold the programming button (B) for longer than 1.6 seconds. Programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press and hold the programming button for longer than 1.6 seconds. If the LED lights up for approx. 4 seconds, all storage spaces have been deleted.

You can cancel the deletion process by briefly pressing the programming button.

### 3.17 Digital 991

#### Connection

- Plug the radio receiver into connector strip X9.

#### Teach transmitter codes

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Press the teach button and then the channel button of your transmitter. If the radio controller has stored the transmitter code, the LED lights up for approx. 2 seconds.

A total of max. 200 transmitter codes (hand-held transmitter) can be taught. If all storage spaces are occupied, the LED flashes very rapidly.

#### Targeted deletion of a transmitter code.

- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press the desired channel button of your transmitter. If the LED lights up for approx. 2 seconds, the corresponding transmitter code has been deleted.

You can cancel the deletion process by briefly pressing the programming button.

#### RESET (completely delete memory)


- Press and hold the programming button (B) for longer than 1.6 seconds. The programming mode is activated. The LED (C) flashes.
- Continue to press and hold the programming button. Erase mode is activated. The LED flashes very quickly.
- Press and hold the programming button again for longer than 1.6 seconds. If the LED lights up for approx. 2 seconds, all storage spaces have been deleted.

You can cancel the deletion process by briefly pressing the programming button.

### 3.18 Connection of external radio receiver

In addition to the standard connection of an external radio "3.8 / 5" External radio receiver) there is also an additional optional pre-wired, pluggable variant.

3.18 / 1

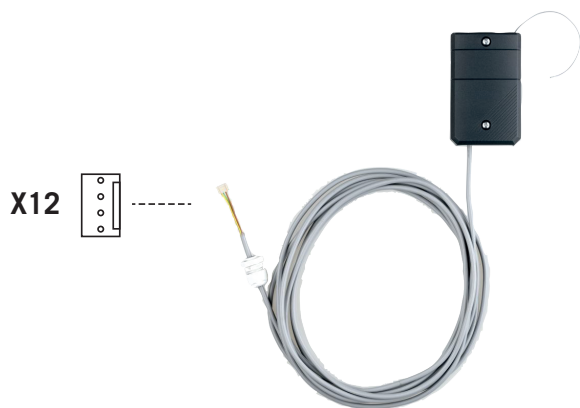


 For a precise description of the function and connection, refer to the separate documentation for the BUS modules.

### 3.19 Connection of frequency converter

It is possible to connect a Siemens frequency converter for speed-independent control of the door drive via interface X18.

3.19 / 1

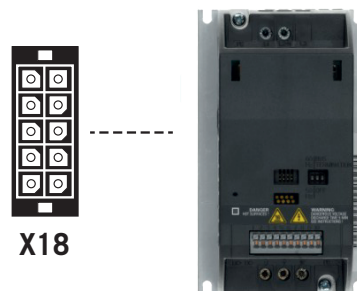

#### **ATTENTION!**

##### **Property damage due to improper installation!**

When using a frequency converter, the drive, wiring and converter module must be compatible.

- Please contact Marantec technical support.


### 3.20 Connection of LCD monitor

Full access to all menu settings and parameters of the controller is possible via the LCD monitor.

→ "6. Programming"

#### Plug-in base X8

3.20 / 1

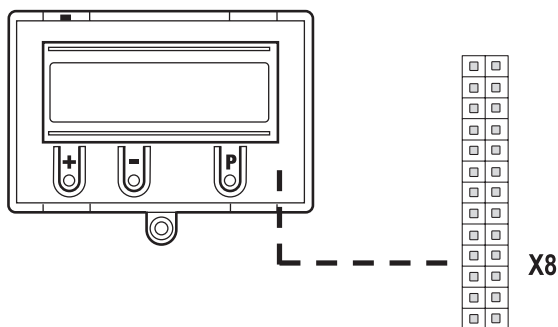

#### ⚠ ATTENTION!

##### Property damage due to improper installation!


The LCD monitor must be plugged in whilst de-energised. Only an LCD monitor from Marantec (art. no. 91447) may be used.

#### ⚠ ATTENTION!

##### Property damage due to improper installation!

The Marantec LED module (art. no. 103239) cannot be combined with the CS 320 FU. Use and commissioning can lead to destruction of the CS 320 FU circuit board.

3.20 / 2

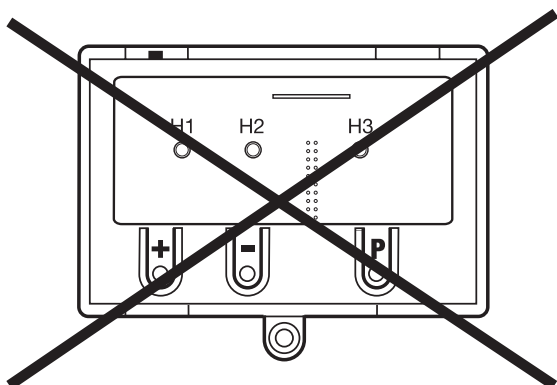

### 3.21 Connection of MS BUS components

Two BUS interfaces are present on the circuit board for connecting different components.

The MS-BUS LCD monitor (#121246) is supplied with a 3 m long connection cable.


The MS-Bus LCD monitor (like the standard LCD monitor) permits full access to all parameter settings.

It is possible to expand functions or realise additional functions with the MS BUS function modules.

- ES module: Evaluation of trap-in protection systems
- I/O module: Input/output expansion
- GV module: Two-way control

#### Connector strip X16 / X17

3.21 / 1

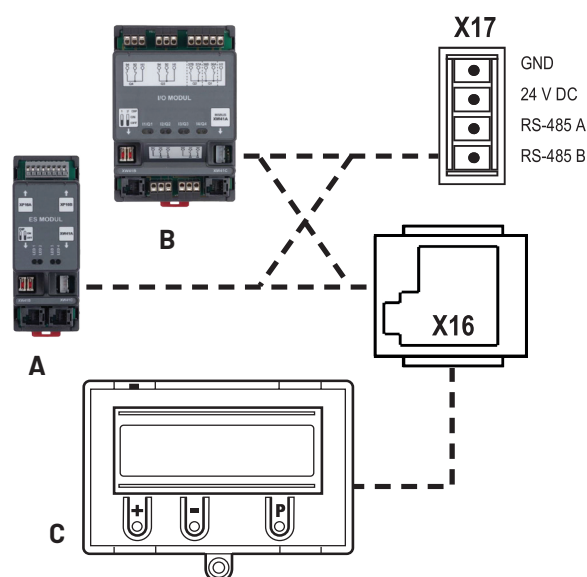

- |   |                        |                          |
|---|------------------------|--------------------------|
| A | ES module              | Connection to X16 or X17 |
| B | I/O module / GV module | Connection to X16 or X17 |
| C | LCD monitor            | Connection to X16 only   |

For a precise description of the function and connection, refer to the separate documentation for the BUS modules.

#### NOTE:

The connector strips X16 and X17 can only be assigned once. However, multiple BUS modules can be connected through special bypass cables. The current consumption must be considered with this.

### 3.22 Transmission system radio


The transmission system radio is a radio system with bi-directional operation. The transmission system facilitates wireless signal transmission from safety equipment to door systems.

The radio connection exists between an internal, pluggable component, which is connected to X20, and an external unit that is mounted on the door leaf.

It is possible to transmit signals from different closing edge systems and/or a safety circuit.

Transmission with spiral cable is thereby omitted.

3.22 / 1

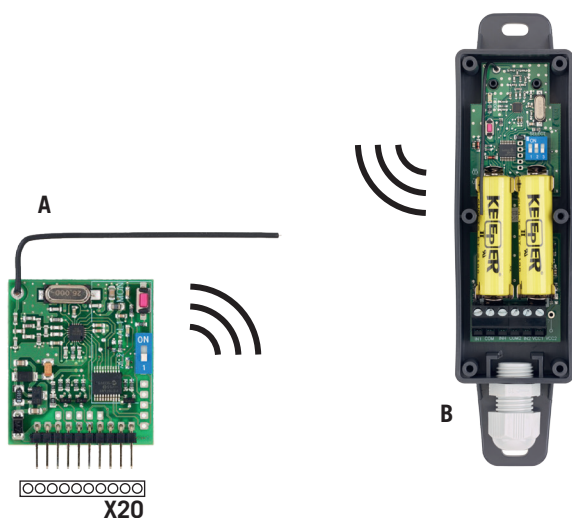

- A Pluggable components. Is connected to connector strip X20 of the CS 320.
- B External unit. Is mounted on the door leaf. The safety strip and safety circuit are connected here.

For a precise description of the function and connection, refer to the separate documentation for the transmission system.

## 4. Initialisation

With first commissioning and after a RESET the following components are automatically detected and programmed:

- End position system
- Closing edge protective device
- Light barrier system
- Input 2 (safety input)

During this process (approx. 60 seconds) the green LED flashes and the display shows "PLEASE WAIT ..." in the top line.

Operation of the system is not possible at this time.

The end position system must be installed before first commissioning.

Components can be retrospectively changed or added via the LCD display or renewed initialisation.

If a component is not yet connected, this is shown in the display with "A".

A search for this component takes place with every subsequent initialisation. If this is detected, the corresponding setting mode is set automatically.

#### Exception:

Input 2 remains inactive (OFF), if a resistance value is not detected with first initialisation.

If a resistor is detected at input 2 with first commissioning, this is evaluated as a safety element and put into operation as a safety input.

→ "9.2 Input operating mode" / Parameter INPUT 2

#### NOTE:

Initialisation serves not only to teach the different system components, but also offers the option of changing the menu language directly.

The pre-set menu language (ENGLISH) appears for 60 seconds as flashing text in the display. With the [+] and [-] buttons it is possible to select the desired language and save this with the [P] button. All texts / messages are subsequently displayed in the selected language.

## 5. Setting the limit positions

### 5.1 Checking the drive / travel direction

#### Change to adjustment mode

- Press the (P) button until ADJUSTMENT appears.

#### Checking the drive direction

- Press the (+) button. The door must open.
  - Press the (-) button. The door must close.
- If this is correct, proceed to setting the limit positions.  
Otherwise, change the direction of travel.

#### Changing the direction of travel

- Press and hold the buttons (+) and (-) simultaneously for more than 5 seconds. The display shows "LEFT ROT FIELD".  
Any limit positions that were saved will have been deleted.  
Proceed with the setting the limit positions.

### 5.2 Setting the mechanical limit switches

#### Change to adjustment mode

- Press the (P) button until ADJUSTMENT appears.

#### Setting the UP and DOWN limit positions



#### REFERENCE

Setting the limit positions is described in the separate documentation for the mechanical limit switches.

- Exit adjustment mode by pressing the (P) button.

#### Note

The system does not exit adjustment mode automatically. Exit adjustment mode by pressing the (P) button in order to change to normal mode.

### 5.3 Setting the electronic end position system using the setting buttons on the circuit board

#### Change to adjustment mode

- Press the button (P) for approx. 5 seconds.  
The red LED flashes slowly.

#### Setting the UP end position

- Drive the door to the desired UP end position by pressing the (+/-) buttons.
- Save end position by pressing the (P) button and additionally also the (+) button.  
The red LED flashes rapidly for approx. 1 second.

#### Setting the DOWN end position

- Drive the door to the desired DOWN end position with the (+/-) buttons.
- Save end position by pressing the (P) button and additionally also the (-) button.  
The red LED flashes rapidly for approx. 1 second.

The adjustment mode is automatically exited.  
The red LED goes out.

#### Note

- The adjustment mode is automatically exited after approx. 7 minutes, if no button is pressed.
- Normal operation is not possible until both end positions have been learned through the initial calibration.
- If an end position is to be corrected, the ADJUSTMENT mode can be exited by pressing the (P) button after learning the special end position.
- After programming the limit switches, the system run-time is learned automatically. The controller functions are the same as in automatic mode.

## 5.4 Setting the electronic limit position system via the LCD monitor



### ATTENTION!

#### Improper assembly will cause damage or destruction!

The monitor must be plugged in whilst de-energised. Only a standard LCD monitor (#91447) from Marantec may be used.

#### Change to adjustment mode

- Press the (P) button until ADJUSTMENT appears.

#### Setting the UP end position

- Drive the door to the desired UP end position by pressing the (+/-) buttons.
- Save end positions by pressing the (P) button and additionally also the (+) button.  
"STORE UP" appears in the display.

#### Setting the DOWN end position

- Drive the door to the desired DOWN end position with the (+/-) buttons.
- Save end position by pressing the (P) button and additionally also the (-) button.  
"STORE DOWN" appears in the display.

The adjustment mode is automatically exited.

#### Note

- The adjustment mode is automatically exited after approx. 7 minutes, if no button is pressed.
- Normal operation is not possible until both end positions have been learned through the initial calibration.
- If an end position is to be corrected, the ADJUSTMENT mode can be exited by pressing the (P) button after learning the special end positions.
- After programming the limit switches, the system run-time is learned automatically. The display shows TEACH IN RUN. The controller functions are the same as in automatic mode.

## 5.5 Setting the intermediate positions of the electronic limit position system via the LCD monitor

#### Drive the door to the desired position in automatic mode

- Drive the door to the desired intermediate positions (INT POS UP or INT POS DOWN) with the (+/-) buttons.

#### Change to input mode

- Press the (P) button until INPUT appears.
- Press and hold the buttons (+) and (-) simultaneously for more than 2 seconds. The first parameter appears in the second line of the display.

#### Save the intermediate UP (INT POS UP) or DOWN (INT POS DOWN) position

- Press the buttons (+/-) until the parameter INT POS UP or INT POS DOWN appears.  
The value stands at A.
- Press the button (P) to accept the current door position as the intermediate position.
- Save the intermediate position by pressing the (P) button again.

#### Exit Input operating mode

- Press and hold the buttons (+) and (-) simultaneously for more than 1 second.  
Input is exited.

#### Change to automatic mode

- Press the (P) button until AUTOMATIC appears.

#### Note

If an intermediate position is to be corrected, the taught value can be changed in the INPUT menu or set to A again, so that a new teach-in can be started.



## 6. Programming


### 6.1 Overview of the LCD monitor

#### ATTENTION!

##### Property damage due to improper installation!

The display must be plugged in whilst de-energised. Only a standard LCD monitor (#91447) from Marantec may be used.

6.1 / 1

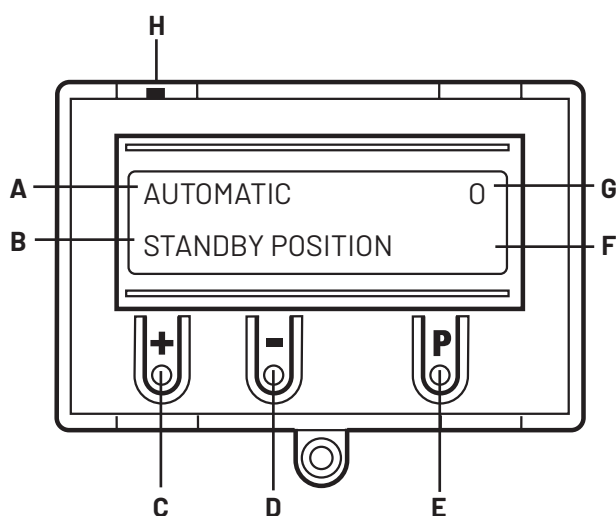

#### Explanation:

- A: Operating mode / diagnostics info
- B: Parameters / diagnostics info
- C: (+) button
- D: (-) button
- E: (P) button
- F: Value/status
- G: Value/status
- H: Jumper

If the jumper H is removed, the (+), (-) and (P) buttons no longer function.

The display continues to function.

After the controller has been switched on, it is in the initialisation phase. The display shows "PLEASE WAIT ...". The controller is not ready for operation. The initialisation phase takes approx. 60 seconds after switching on for the first time.

### 6.2 LCD monitor operating modes

With the LCD monitor, the controller has four operating modes:

1. AUTOMATIC
2. ADJUSTMENT
3. INPUT
4. DIAGNOSIS

The operating modes ADJUSTMENT, INPUT and DIAGNOSIS are automatically exited 7 minutes after the last button was pressed. The controller changes to AUTOMATIC mode.

#### Operating mode 1: AUTOMATIC

The door system is driven in AUTOMATIC mode.

Display:

- Display of the function being carried out
- Display of possible faults

If the "Self-locking" parameter is set to MOD 2-7 or MOD 9 in the input menu, the display switches from AUTOMATIC mode to MANUAL.

#### Operating mode 2: ADJUSTMENT

The UP and DOWN limit positions are set in ADJUSTMENT mode.

#### ATTENTION!

##### Risk of property damage due to improper operation of the controller!

When in ADJUSTMENT mode, there is no shutdown with the electronic limit position system (AWG) upon reaching the limit positions. The door can be damaged by running past the limit positions.

Fine adjustment can be implemented in INPUT mode.

Display:

- Displays the limit position value

#### Operating mode 3: INPUT

The values of various parameters can be changed in INPUT mode.

Display:

- Displays the selected parameter
- Displays the status/value set

#### Operating mode 4: DIAGNOSIS

Door-specific checks can be interrogated in DIAGNOSIS mode.

Display:

- Display of the check
- Display of the check status

## 6.3 Expert menu

Under factory settings (standard), only a few parameters appear in the INPUT operating mode, which can be adjusted by the operator. These setting parameters reflect the most frequently applied requirements for an industrial door system and are sufficient for commissioning in a standard situation.

The last item in this list is the "EXPERT MENU" parameter. This is always set to OFF.

OFF: Limited number of parameter settings:

- Menu language
- INT POS UP
- OPEN TIME
- FOREWARNING TIME
- FAST CLOSE
- REVERSE OFF
- INPUT 1
- SELF LOCK
- BRAKE P OP
- BRAKE P CL
- SPEED OPEN
- SPEED CLOSE
- SOFTRUN OP.
- SOFTRUN CL.
- SPEED UP OP.
- SPEED UP CL.
- SLO. DO. OP.
- SLO. DO. CL.
- MOTOR V
- MOTOR I
- MOTOR P
- MOTOR PHI
- MOTOR HZ
- MOTOR RPM
- EXPERT MENU

Setting the EXPERT MENU parameter to ON activates the expert mode. It is now possible to call up and set all input menu parameters.

→ "9.2 Input operating mode"

### Note

- The expert mode is automatically exited after approx. 7 minutes, if no button is pressed. Now, only the limited selection of parameters is once again available until the EXPERT MENU parameter is set to ON again.
- The same applies to switching off the power. This once again sets the EXPERT MENU parameter to OFF.

## 6.4 RESET

The RESET function can be used to reset the control parameters to the pre-selected factory settings.

→ "9.2 Input operating mode"

### FACTORY SETTING parameter

Selection of the parameter set that should be reset with a RESET.

It is possible to implement different types of reset whereby more or less settings are reset.

→ "9.2 Input operating mode"

### RESET parameter

*Part reset 1 :*

All parameter settings are reset, apart from the settings for the frequency converter (only with CS 320 FU).

*Part reset 2 :*

All parameter settings are reset, apart from the settings for the limit positions and the detected limit position system.

*Full reset :*

Everything is reset to factory settings.

→ "6.5 RESETTING the controller with LCD monitor"

→ "6.6 RESETTING the controller without LCD monitor"

### RES. INVERTER parameter

Reset all parameters of the frequency inverter to the factory settings. All other settings remain intact.

→ "6.7 RESET the frequency inverter settings"

## 6.5 RESETTING the controller with LCD monitor

### Changing to the INPUT operating mode

- Press (P) button until INPUT appears.
- Press and hold the buttons (+) and (-) simultaneously for more than 2 seconds to activate the input.

### Resetting the controller

- Press the buttons (+/-) until the RESET parameter appears. The value stands at "OFF".
- Press the button (+) until MOD 3 appears.
- Press (P) button to start the RESET.

The system runs through the initialisation phase and all connected safety components and the limit position system are automatically taught.

### Change to adjustment mode

→ "5.4 Setting the electronic limit position system via the LCD monitor"

### Change to automatic mode

- Press (P) button until AUTOMATIC appears.

## 6.6 RESETTING the controller without LCD monitor

- Interrupt the supply voltage.
- Press and hold the circuit board buttons (P) and (-) at the same time.
- Switch the supply voltage back on.
- Press and hold the circuit board buttons (P) and (-) at the same time until the red LED (H6) flashes rapidly.
- Release the circuit board buttons (P) and (-).

The system then runs through the initialisation phase (approx. 60 seconds).

During initialisation, it is not possible to program or operate the system.

After initialisation is complete, the limit positions are deleted and all parameters are reset to factory settings.

## 6.7 RESET the frequency inverter settings

### Change to input mode

- Press the (P) button until INPUT appears.
- Press and hold the buttons (+) and (-) simultaneously for more than 2 seconds to activate the input.

### Perform a reset

- Press the (+/-) buttons until the RES.INVERTER parameter appears.  
The value stands at "OFF".
- Press the (+) button until "ON" appears.
- Press the (P) button to start the RESET.

The initialisation phase runs and all settings on the frequency inverter are reset to factory settings.

The settings must now be performed again.

### Change to automatic mode

- Press the (P) button until AUTOMATIC appears.

## 7. Frequency converter

### 7.1 General

The frequency converter control allows the door/gate speed to be adjusted separately for the OPEN and CLOSING directions. The frequency of the converter determines the operator speed. This speed-independent controlling of the door/gate system makes the door/gate run smoothly and protects the door/gate mechanism, resulting in benefits such as

- faster response times,
- reduced draughts, and
- minimised heating costs.

The acceleration and deceleration times (SPEED UP / SLOW DOWN) ensure soft starting and stopping at the end positions.

### 7.2 Adjustable values

The following is a list of parameter settings that are directly related to speed regulation through the frequency converter module.

Various graphs showing the process that takes place at the various settings are given by way of illustration.

→ "7.3 Travel diagrams"

#### **BRAKE P.OP.** (Brake point OPEN)

Initiates the deceleration time SLOW DO. OP. The door/gate then continues at minimum speed  $f_{\text{SOFT RUN OP}}$ .

This parameter only appears in the menu when the end positions have been programmed, and it then appears as a negative value referred to the upper cut-out point.

This can only be set in the menu in conjunction with an absolute value encoder.

If mechanical limit switches are used, the before-end switch OPEN is used as a position marker for speed reduction.

*Only applies for OPENING direction of door/gate travel*

#### **BRAKE P.CL.** (Brake point CLOSED)

Initiates the deceleration time SLOW DO. CL. The door/gate then continues at minimum speed  $f_{\text{SOFT RUN CL}}$ .

This parameter only appears in the menu when the end positions have been programmed, and it then appears as a positive value referred to the lower cut-out point.

This can only be set in the menu in conjunction with an absolute value encoder.

If mechanical limit switches are used, the before-end switch CLOSE is used as a position marker for speed reduction.

*Only applies for CLOSING direction of door/gate travel.*

#### **BRAKE P CL 2** (Brake point CL 2)

Allows the door/gate to close at 3 different speeds. The Brake point CL2 initiates the deceleration SLOW DO. MX. The door/gate movement then continues at normal speed  $f_{\text{SPEED CLOSE}}$ .

This parameter only appears in the menu when the end positions have been programmed, and it then appears as a positive value referred to the lower cut-out point.

This can only be set in the menu in conjunction with an absolute value encoder.

This function is not available if mechanical limit switches are used.

*Only applies for CLOSING direction of door/gate travel.*

#### **SPEED OPEN** (normal OPENING speed)

The normal OPENING speed for door/gate movement can be set here. Speed of travel  $f_{\text{SPEED OPEN}}$ .

*Only applies for OPENING direction of door/gate travel*

#### **SPEED CLOSE** (normal CLOSING speed)

The normal CLOSING speed for door/gate movement can be set here. Speed of travel  $f_{\text{SPEED CLOSE}}$ .

*Only applies for CLOSING direction of door/gate travel.*

#### **MX SPEED CL.** (maximum CLOSING speed)

The maximum speed for door/gate CLOSING movement can be set here. Speed of travel  $f_{\text{MX SPEED CL}}$ .

This parameter only appears in the menu when Brake point 2 has been programmed, and it then appears as an option. This allows two different fast speeds and one slow speed to be set in the CLOSING direction.

*Only applies for CLOSING direction of door/gate travel.*

#### **SOFT RUN OP.** (minimum OPENING speed)

The minimum speed for door/gate OPENING movement can be set here. Speed of travel  $f_{\text{SOFT RUN OP}}$ .

*Only applies for OPENING direction of door/gate travel*

#### **SOFT RUN CL.** (minimum CLOSING speed)

The minimum speed for door/gate CLOSING movement can be set here. Speed of travel  $f_{\text{SOFT RUN CL}}$ .

*Only applies for CLOSING direction of door/gate travel.*

#### **SPEED UP OP.** (Speed up OPENING)

The acceleration time that elapses between the starting command and reaching the normal speed  $f_{\text{SPEED OPEN}}$ .

*Only applies for OPENING direction of door travel.*

**SPEED UP CL. (Speed up CLOSING)**

The acceleration time that elapses between the starting command and reaching the normal speed  $f_{\text{SPEED CLOSE}}$ .  
*Only applies for OPENING direction of door/gate travel.*

**SLOW DO. OP. (Slow down OPENING)**

Sets the time that elapses between the Brake point OPEN and reaching the minimum speed  $f_{\text{SOFT RUN OP}}$ .  
*Only applies for OPENING direction of door/gate travel.*

**SLOW DO. CL. (Slow down CLOSING)**

Sets the deceleration time that elapses between Brake point CLOSE and reaching the minimum speed  $f_{\text{SOFT RUN CL}}$ .  
*Only applies for CLOSING direction of door/gate travel.*

**SPEED UP MX (Speed up MAX CLOSING)**

Sets the time that elapses between the starting command and reaching the maximum speed  $f_{\text{MX SPEED CL}}$ .  
 This parameter only appears in the menu when Brake point 2 has been programmed, and it then appears as an option. This allows acceleration to a second (optional) fast speed to be set in the CLOSING direction.  
*Only applies for CLOSING direction of door/gate travel.*

**SLOW DO. MX (Slow down MAX CLOSING)**

Sets the time that elapses between the Brake point CL 2 and reaching the normal speed  $f_{\text{SPEED CLOSE}}$ .  
 This parameter only appears in the menu when Brake point 2 has been programmed, and it then appears as an option. This allows deceleration in the CLOSING direction to be set from a second (optional) fast speed to a normal speed  $f_{\text{SPEED CL}}$ .  
*Only applies for CLOSING direction of door/gate travel.*

**Reversal of direction by pressing the OPEN or CLOSE button**

Depending on the current speed and direction of travel, reversal of the direction by directly pressing the OPEN or CLOSE buttons will result in SLOW DO. OP. / CL. / MX and SPEED UP OP. / CL. / MX being run through.  
 The total time for reversing the direction is made up of SLOW DO. OP. / CL. / MX (INPUT menu) and SPEED UP OP. / CL. / MX.

**Reversal of direction by triggering the closing edge safety device**

The parameter SLOW DO. SKS / SPEED UP SKS describe the procedures after triggering the closing edge safety device and the associated direct reversal of direction.  
 The total time for reversing the direction is made up of SLOW DO. SKS, reversal time (INPUT menu) and SPEED UP SKS

**SLOW DO. SKS (Slow down SKS)**

Sets the time that elapses between triggering the closing edge safety device and stopping the door/gate system.  
 The countdown for the pre-set reversal time then begins.  
*Applies for both directions of door/gate travel.*

**SPEED UP SKS (Speed up SKS)**

Sets the time that elapses between expiry of the reversal time and reaching the normal speed  $f_{\text{SPEED OPEN/CLOSE}}$ .  
*Applies for both directions of door/gate travel.*

**Reversal of direction by triggering the photocell (drive-through)**

The parameter SLOW DO. LB / SPEED UP LB describe the procedures after triggering the photocell system and the associated direct reversal of direction.  
 The total time for reversing the direction is made up of SLOW DO. SKS, reversal time (INPUT menu) and SPEED UP LB.

**SLOW DO. LB (Slow down LB)**

Sets the time that elapses between triggering the closing edge safety device and stopping the door/gate system.  
 The countdown for the pre-set reversal time then begins.  
*Applies for both directions of door/gate travel.*

**SPEED UP LB (Speed up LB)**

Sets the time that elapses between expiry of the reversal time and reaching the normal speed  $f_{\text{SPEED OPEN/CLOSE}}$ .  
*Applies for both directions of door/gate travel.*


**Stopping the door/gate system with the stop button or the impulse sequence****SLOW DO. STOP (Slow down STOP)**

Sets the time that elapses between pressing the stop button or the impulse sequence and stopping the door/gate system.  
*Applies for both directions of door/gate travel.*

### 7.3 Travel diagrams


#### Door/gate opening run with two speeds

7.3 / 1

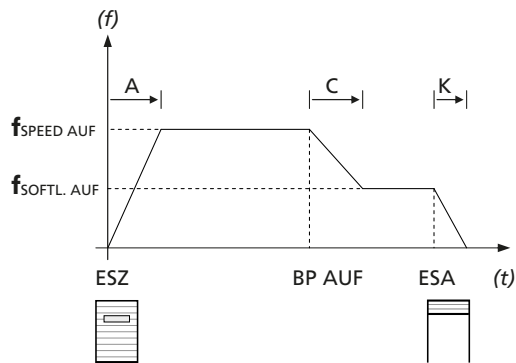


#### Door/gate closing run with two speeds

7.3 / 2

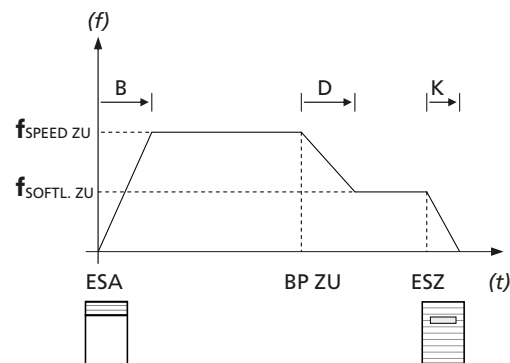


#### Door/gate closing run with three speeds

7.3 / 3

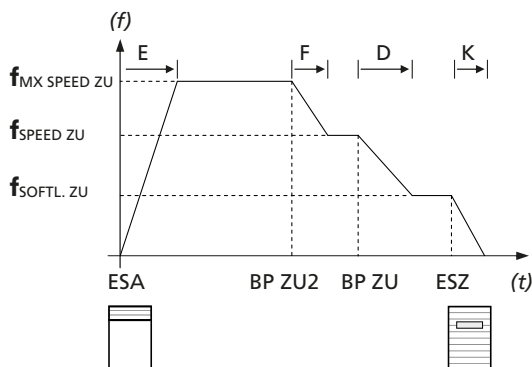


#### Reversal of direction with OPEN / CLOSE button

7.3 / 4

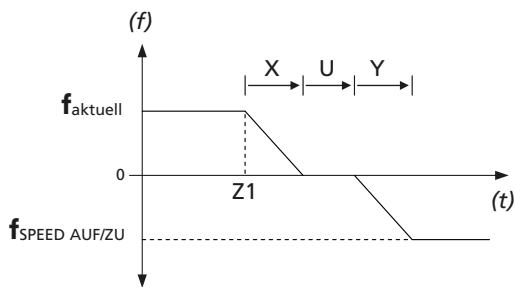


#### Reversal of direction with closing edge safety device

7.3 / 5

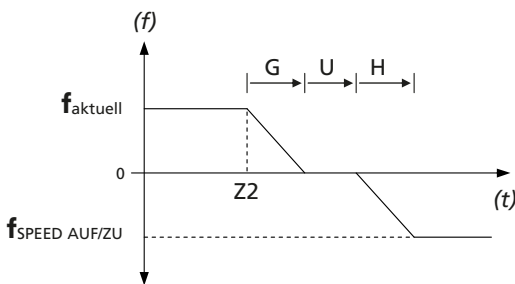


#### Reversal of direction with photocell

7.3 / 6

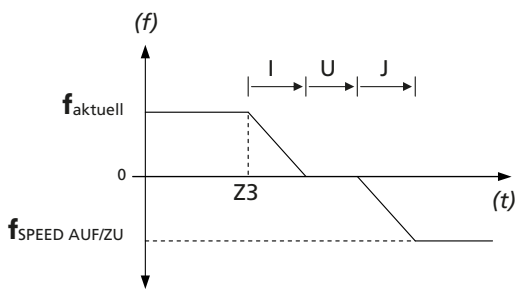

#### Operating stop with stop button or impulse sequence

7.3 / 7

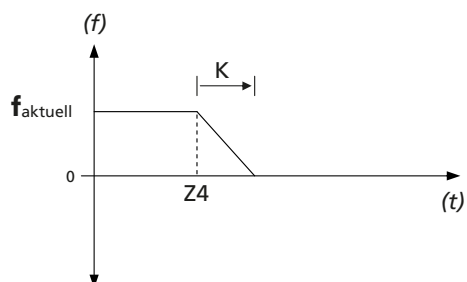

**Key**

|                           |                                                                                              |
|---------------------------|----------------------------------------------------------------------------------------------|
| (f)                       | Frequency                                                                                    |
| (t)                       | Time                                                                                         |
| ESA                       | Upper limit switch, OPEN                                                                     |
| ESZ                       | Lower limit switch, CLOSE                                                                    |
| BP AUF                    | Brake point OPEN                                                                             |
| BP ZU                     | Brake point CLOSED                                                                           |
| BP ZU 2                   | Brake point CLOSED 2                                                                         |
| $f_{\text{SPEED AUF}}$    | Frequency SPEED OPEN                                                                         |
| $f_{\text{SOFTL. AUF}}$   | Frequency SOFTRUN OPEN                                                                       |
| $f_{\text{SPEED ZU}}$     | Frequency SPEED CLOSE                                                                        |
| $f_{\text{MX SPEED ZU.}}$ | Frequency MX SPEED CL                                                                        |
| $f_{\text{SOFTL. ZU}}$    | Frequency SOFTRUN CL.                                                                        |
| $f_{\text{aktuell}}$      | Current operating frequency                                                                  |
| $f_{\text{SPEED AUF/ZU}}$ | Frequency SPEED OPEN or SPEED CLOSE                                                          |
| A                         | SPEED UP OP.                                                                                 |
| B                         | SPEED UP CL.                                                                                 |
| C                         | SLOW DO. OP.                                                                                 |
| D.                        | SLOW DO. CL.                                                                                 |
| E                         | SPD. UP MX                                                                                   |
| F                         | SLO. DO. MX                                                                                  |
| G                         | SLOW DO. SKS                                                                                 |
| H                         | SPEED UP SKS                                                                                 |
| I                         | SLOW DO. LB                                                                                  |
| J                         | SPEED UP LB                                                                                  |
| K                         | SLOW DO. STOP                                                                                |
| U                         | Reversal time<br>The reversal time can be set in the INPUT menu item                         |
| X                         | SLOW DO. OP./CL. or SLOW DO. MX                                                              |
| Y                         | SPEED UP OP./CL. or SPD. UP MX                                                               |
|                           | The current operating frequency determines whether slow down/speed up OP./CL. or MX applies. |
| Z1                        | Button pressed                                                                               |
| Z2                        | SKS closing edge safety device triggered                                                     |
| Z3                        | Photocell triggered                                                                          |
| Z4                        | Stop triggered                                                                               |

**7.4 Rated values for motor**

In INPUT operating mode, certain motor rating data can be set. It is essential that these settings agree with the information given on the motor type plate. Although these are factory pre-set when supplied in combination with a door/gate operator, it must be checked before using them for the first time whether the settings comply with the information given on the type plate. It is essential that the following data is checked and set:

|           |                          |
|-----------|--------------------------|
| MOTOR V   | Rated voltage of motor   |
| MOTOR I   | Rated current of motor   |
| MOTOR P   | Rated power of motor     |
| MOTOR PHI | Power factor of motor    |
| MOTOR I   | Rated frequency of motor |
| MOTOR RPM | Rated speed of motor     |

In addition, it is possible to set the limits for the minimum and maximum operating frequency of the motor. The parameters required for this purpose can also be found in INPUT operating mode:


|            |                                          |
|------------|------------------------------------------|
| MOT.HZ MIN | Lowest programmable operating frequency  |
| MOT.HZ MAX | Highest programmable operating frequency |

The maximum programmable operating frequency of a motor is determined by the manufacturer and must be individually checked and set.

**ATTENTION!****Damage can occur through improper installation!**

Incorrectly entering the parameter settings described can result in considerable damage occurring to the control unit and motor.

8. Navigator (only LCD monitor)

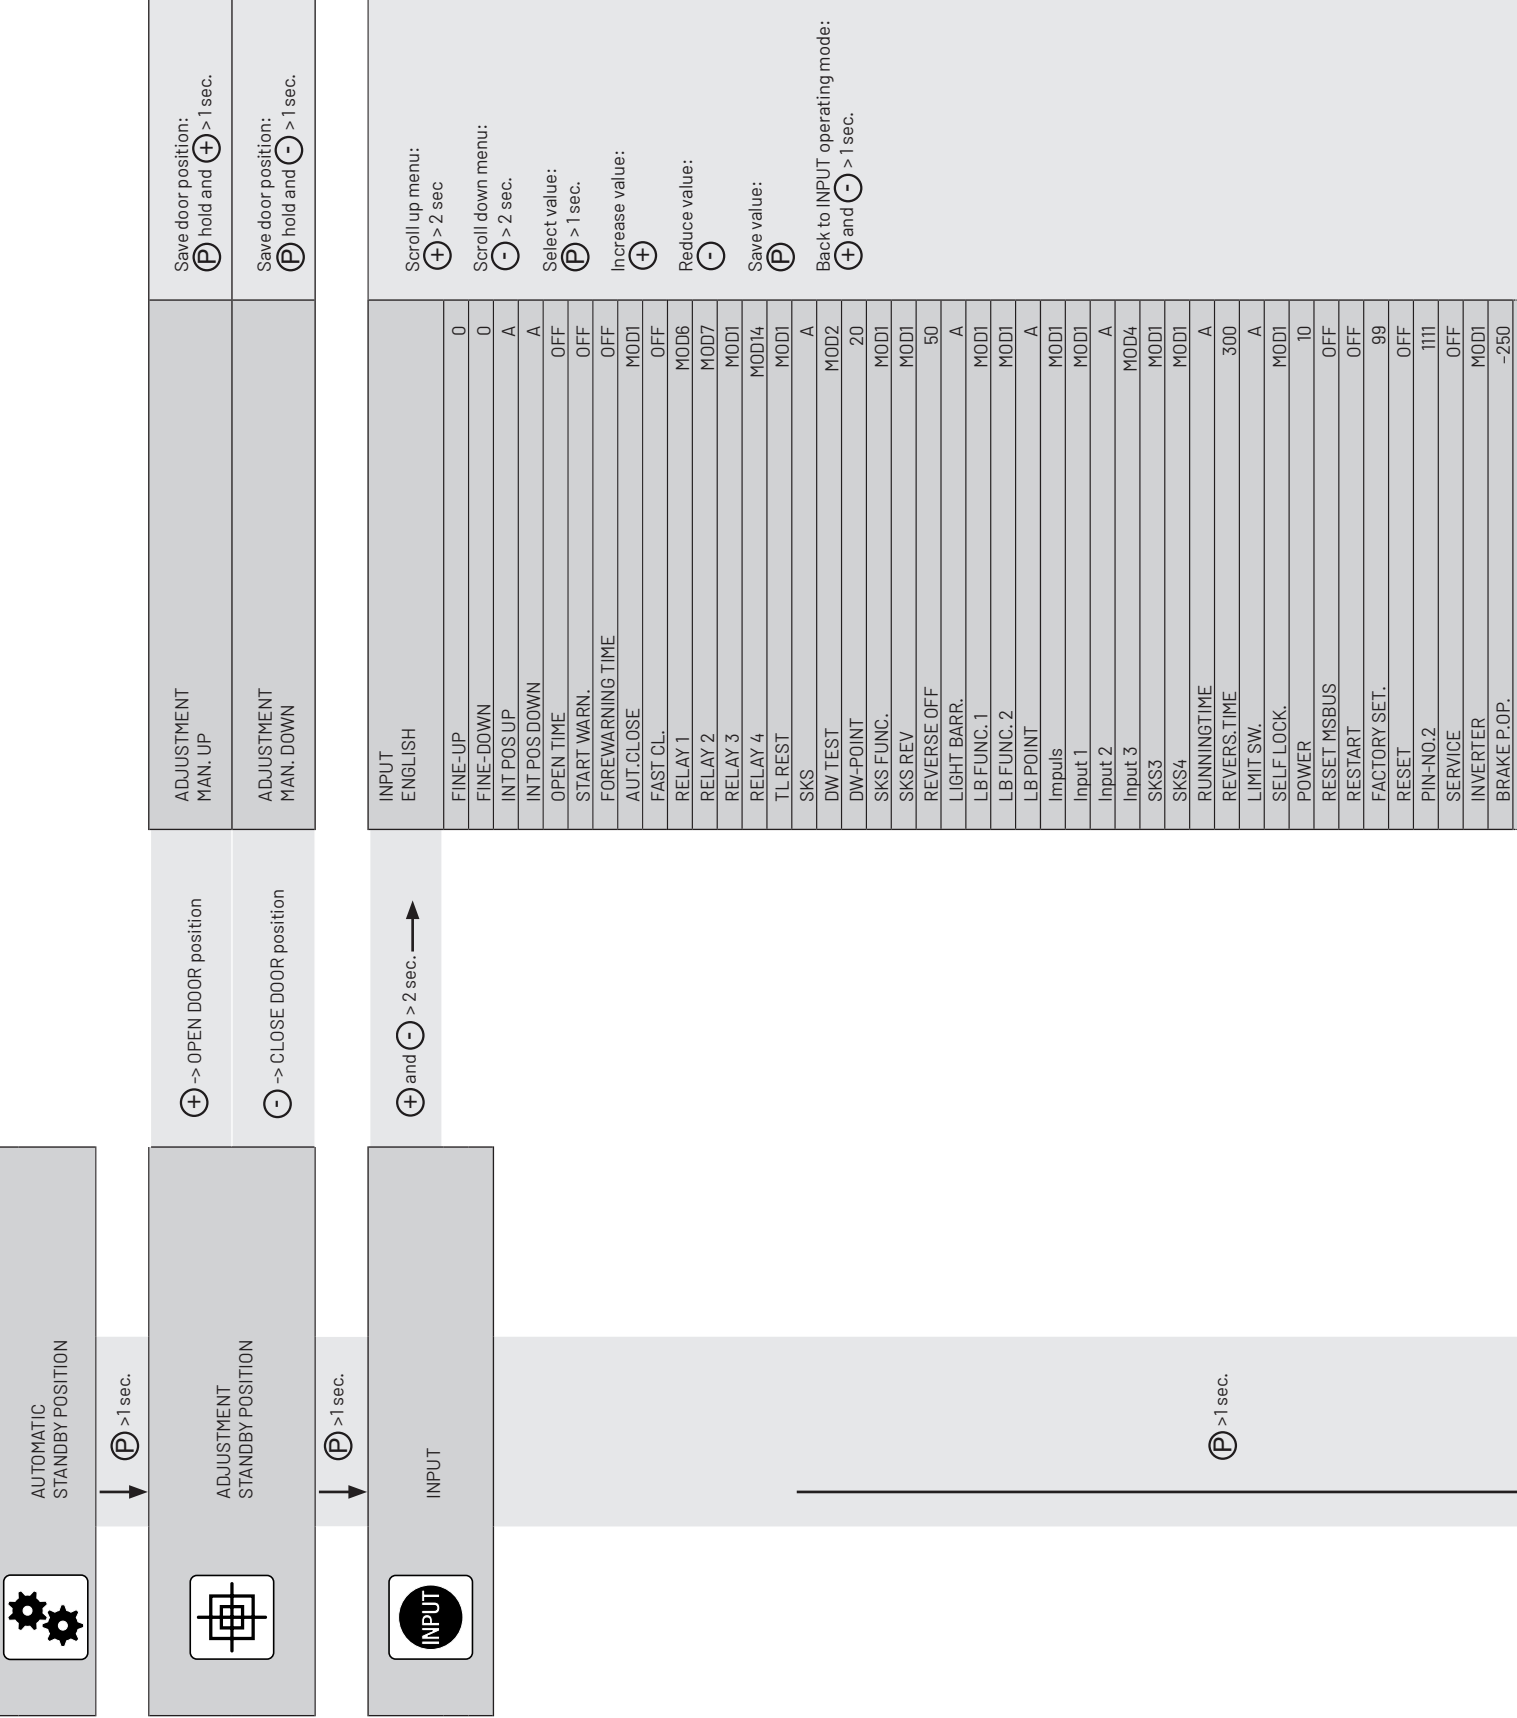



|               |      |
|---------------|------|
| BRAKE P.C.L.  | 250  |
| BRAKE P.C.L.2 | A    |
| SPEED OPEN    | 50   |
| SPEED CLOSE   | 50   |
| MX SPEED CL.  | 50   |
| SOFT RUN OP.  | 25   |
| SOFT RUN CL.  | 25   |
| SPEED UP OP.  | 2.0  |
| SPEED UP CL.  | 2.0  |
| SLOW DO. OP.  | 2.0  |
| SLOW DO. CL.  | 2.0  |
| SPEED UP MX   | 2.0  |
| SPEED DO. MX  | 2.0  |
| SPEED UP SKS  | 0.5  |
| SLOW DO. SKS  | 0.1  |
| SPEED UP LB   | 0.5  |
| SLOW DOWN LB  | 0.5  |
| SLOW DO. STOP | 0.5  |
| RES. INVERTER | OFF  |
| MOTOR V       | 230  |
| MOTOR I       | 5.1  |
| MOTOR P       | 550  |
| MOTOR PHI     | 0.69 |
| MOTOR HZ      | 50   |
| MOTOR RPM     | 1370 |
| MOTOR HZ MIN  | 10   |
| MOTOR HZ MAX  | 87   |
| BRAKE DELAY   | 50   |
| BOOST CONT.   | 50   |
| BOOST RUN UP  | 50   |
| BOOST START   | 0    |
| EXPERT MENU   | OFF  |

## DIAGNOSIS



|                               |              |
|-------------------------------|--------------|
| UPPER SWITCH                  | ON           |
| LOWER SWITCH                  | ON           |
| UP-SWITCH                     | OFF          |
| DOWN-SWITCH                   | OFF          |
| INPUT 1                       | OFF          |
| INPUT 2 / SKS OP. 2 / SAFE. 2 | - / ON / OFF |
| INPUT 3                       | - / OFF      |
| SKS                           | ON           |
| SKS 3 / SAFE: 3               | - / ON       |
| SKS 4 / SAFE: 4               | - / ON       |
| IMPULS                        | OFF          |
| TIMER                         | OFF          |
| LIGHT BARR.                   | ON           |
| LIGHT BARR. 2                 | ON           |
| SAFETY CIRC.                  | ON           |
| STOP                          | ON           |
| ROT FIELD                     | Right        |
| CYCLE                         | 000000       |
| SERVICE                       | OFF          |
| AWG                           | 0000         |
| C.STOP                        | 0000         |
| C.OPENED                      | 0000         |
| C.O.BTN                       | 0000         |
| Error memory                  | Error ...    |

Scroll up menu:  
 > 2 sec

Scroll down menu:  
 > 2 sec.

Back to AUTOMATIC operating mode:

Only interrogation possible

## 9. Functional overviews

### 9.1 Automatic mode



| Display                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AUTOMATIC<br>TEACH IN RUN     | The run-time is taught automatically.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| AUTOMATIC<br>OPENING          | The door is currently in the opening phase.                                                                                                                                                                                                                                                                                                                                                                                                                        |
| AUTOMATIC<br>CLOSING          | The door is currently in the closing phase.                                                                                                                                                                                                                                                                                                                                                                                                                        |
| AUTOMATIC<br>STANDBY POSITION | The door is currently in an intermediate position.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| AUTOMATIC<br>STANDBY POSITION | 0 The door is in the UP limit position.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| AUTOMATIC<br>STANDBY POSITION | o The door is in the Sect. UP position ("intermediate position UP" parameter).                                                                                                                                                                                                                                                                                                                                                                                     |
| AUTOMATIC<br>STANDBY POSITION | U The door is in the DOWN limit position.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| AUTOMATIC<br>STANDBY POSITION | u The door is in the Sect. DOWN position ("intermediate position DOWN" parameter).                                                                                                                                                                                                                                                                                                                                                                                 |
| AUTOMATIC<br>STANDBY POSITION | r The door is in the reverse shut-off position.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| AUTOMATIC<br>STOP             | The command button STOP (cover keypad CS) was pressed for longer than 5 seconds.                                                                                                                                                                                                                                                                                                                                                                                   |
| AUTOMATIC<br>PERMANENT INPUT  | When the power is switched off, an active signal (NO) is detected at the UP, DOWN, pulse or programmable input 1 (with use of I/O BUS modules, also inputs 11-14 or 15-18). This always constitutes an impermissible state. The cause is probably a defective component that must be replaced.<br>Exception: The signal comes from a pluggable timer or the programmable input 1 if this is set as a timer function (MOD 4), or fire alarm function (MOD 5-9, 13). |
| AUTOMATIC<br>CRASH SENSOR     | The door system crash sensor has been activated (connection to X4/9-10, programmable input 1, MOD 18).<br>A vehicle (e. G. forklift truck) has possibly driven into the closed door.                                                                                                                                                                                                                                                                               |
| SERVICE<br>STANDBY POSITION   | The pre-selected service interval has been reached.                                                                                                                                                                                                                                                                                                                                                                                                                |

If the "Self-locking" parameter is set to MOD 2-7 or MOD 9 in the input menu, the display switches from AUTOMATIC mode to MANUAL.

| Display                    | Description                                        |
|----------------------------|----------------------------------------------------|
| MANUAL<br>MAN. UP          | The door is currently in the opening phase.        |
| MANUAL<br>MAN. DOWN        | The door is currently in the closing phase.        |
| MANUAL<br>STANDBY POSITION | The door is currently in an intermediate position. |

## 9.2 Input operating mode



| Function       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Adjustment options                                                                                                                                 | Factory setting |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| DEUTSCH        | <p>Selection of the menu language.</p> <p><b>Only with LCD monitor:</b><br/>           The menu language can also be selected during the initialisation phase (during first commissioning or after a reset). The factory pre-set menu language (ENGLISH) appears here for approx. 60 seconds as flashing text in the display. At this time it is possible to change the menu language during the initialisation phase.<br/>           You can scroll through the language choices by pressing the [+] or [-] buttons. Save the desired language with the [P] button.<br/>           All texts / messages are subsequently displayed in the selected language.</p> | DEUTSCH<br>ENGLISH<br>FRANCAIS<br>NEDERLANDS<br>DANSK<br>ESPANOL<br>POLSKI<br>CESKY<br>ITALIANO<br>SUOMI<br>SVENSKA<br>TÜRKÇE<br>NORSE<br>MAGYARUL | DEUTSCH         |
| FINE-UP        | <p>Fine adjustment of the UP limit position in relation to the saved limit position (UP SWITCH).<br/>           Only visible with electronic limit position system.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | -250 – 250                                                                                                                                         | 0               |
| FINE-DOWN      | <p>Fine adjustment of the DOWN limit position in relation to the saved limit position (DOWN SWITCH).<br/>           Only visible with electronic limit position system.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | -250 – 250                                                                                                                                         | 0               |
| INT POS UP     | <p>Setting the switching point UP intermediate position (Sect. UP) in relation to the saved limit position UP. Display as a negative value.<br/>           Only visible with electronic limit position system.</p> <p>Automatic teach-in of the position:<br/>           → "5.5 Setting the intermediate positions of the electronic limit position system via the LCD monitor"</p>                                                                                                                                                                                                                                                                               | A (teaching)<br>-1 – DOWN SWITCH                                                                                                                   | A               |
| INT POS CLOSED | <p>Setting the switching point DOWN intermediate position (Sect. DOWN) in relation to the saved limit position DOWN. Display as a positive value.<br/>           Only visible with electronic limit position system.</p> <p>Automatic teach-in of the position:<br/>           → "5.5 Setting the intermediate positions of the electronic limit position system via the LCD monitor"</p>                                                                                                                                                                                                                                                                         | A (teaching)<br>1 – UP SWITCH                                                                                                                      | A               |
| OPEN TIME      | <p>After opening, the door automatically travels in the DOWN direction after the set value has passed.</p> <p><b>NOTE:</b><br/>           Pressing the DOWN button during the open time starts the closing operation immediately.<br/>           Pressing the UP or STOP button during the open time restarts the time.<br/>           If an automatic closing operation is interrupted by the closing edge protective device, the open time is added to every new attempt. After 3 attempts, automatic closing is cancelled.</p>                                                                                                                                 | OFF,<br>1 – 3600 seconds                                                                                                                           | OFF             |
| START WARN.    | <p>The start-up warning is implemented before <b>every</b> run.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | OFF,<br>1 – 10 seconds                                                                                                                             | OFF             |

| Function          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Adjustment options                                                                | Factory setting |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------|
| FORE-WARNING TIME | <p>The warning time is activated before automatic downward travel or closing through pulse operation.</p> <p><b>NOTE:</b><br/>This time is added to the start-up warning</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | OFF,<br>1 – 300 seconds                                                           | OFF             |
| AUT.CLOSE         | <p>Automatic closing after the open time has elapsed.</p> <p>MOD 1: AUT.CLOSE from UP limit position<br/>MOD 2: AUT.CLOSE from Sect. UP limit position<br/>MOD 3: AUT.CLOSE from UP limit position and Sect. UP limit position<br/>MOD 4: AUT.CLOSE from <i>all</i> door positions</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | MOD 1 – MOD 4                                                                     | MOD 1           |
| FAST CL.          | <p>Premature closing after passing through the light barrier.</p> <p><b>PREREQUISITE:</b><br/>Connection of a light barrier at pass through-height and setting of an open time &gt; 0.<br/>With open time = 0 the door closes directly after passing through the light barrier.</p> <p>MOD 2: The open time is cancelled after passing through the light barrier (system shuts immediately).<br/>If passing through the light barrier occurs during opening, the programmed open time is ignored and the door closes directly.</p> <p>MOD 3: The open time is cancelled after passing through the light barrier for a minimum duration of 2 seconds (personnel suppression).<br/>If passing through the light barrier occurs during opening, the programmed open time is ignored and the door closes directly.</p> <p>MOD 4: Like MOD 2, but the light barrier does not function during opening.</p> | OFF,<br>MOD 2 – MOD 4                                                             | OFF             |
| RELAY 1           | <p>All 4 relays can be assigned a relay mode from 1 – 13, 17 – 19, 21 – 46, 49 and 60 – 62.<br/>Relay 4 can also be programmed with MOD 14 – 16.<br/>Further explanations:<br/>→ "9.3 Explanations of the relay modes:"</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | MOD 1 – MOD 13<br>MOD 17 – MOD 19<br>MOD 21 – MOD 46<br>MOD 49<br>MOD 60 – MOD 62 | MOD 6           |
| RELAY 2           | <p>MOD 1: (Red traffic light inside 1) forewarning – flashing, door running – illuminated<br/>MOD 2: (Red traffic light inside 2) forewarning – flashing, door running – flashing<br/>MOD 3: (Red traffic light inside 3) forewarning – illuminated, door running – illuminated<br/>MOD 4: Pulse signal with UP command from inside<br/>MOD 5: Fault message</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | MOD 1 – MOD 13<br>MOD 17 – MOD 19<br>MOD 21 – MOD 46<br>MOD 49<br>MOD 60 – MOD 62 | MOD 7           |
| RELAY 3           | <p>MOD 6: UP limit position<br/>MOD 7: DOWN limit position<br/>MOD 8: UP limit position negated<br/>MOD 9: DOWN limit position negated<br/>MOD 10: Intermediate position UP<br/>MOD 11: Intermediate position DOWN<br/>MOD 12: Intermediate position DOWN to end position DOWN<br/>MOD 13: Magnetic lock function<br/>MOD 14: Brake (closed-circuit current principle)<br/>MOD 15: Brake (open-circuit current principle)<br/>MOD 16: Brake (closed-circuit current principle) applied in UP end position<br/>MOD 17: SKS actuated or test error<br/>MOD 18: (Red traffic light 4) forewarning – flashing, door running – off<br/>MOD 19: Intermediate position UP to end position UP</p>                                                                                                                                                                                                            | MOD 1 – MOD 13<br>MOD 17 – MOD 19<br>MOD 21 – MOD 46<br>MOD 49<br>MOD 60 – MOD 62 | MOD 1           |

| Function | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Adjustment options                                                                | Factory setting |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------|
| RELAY 4  | <p>MOD 21: Test of the trap-in protection before opening (additional module required)</p> <p>MOD 22: Activation of transmission system radio 1 and 3, or testing light grid</p> <p>MOD 23: (Green traffic light) limit position UP - illuminated, forewarning - OFF, door running - OFF*</p> <p>MOD 24: Capacitor switching for sectional door drives 230V/1~</p> <p>MOD 25: Courtyard light function, 2 minutes illuminated after UP/pulse - command</p> <p>MOD 26: Activation of transmission system radio 2</p> <p>MOD 27: Pulse signal after reaching UP end position</p> <p>MOD 28: Relay general OFF</p> <p>MOD 29: Door drives open</p> <p>MOD 30: Door drives closed</p> <p>MOD 31: Service, continuous signal after reaching the set service interval</p> <p>MOD 32: Battery operation</p> <p>MOD 33: No battery operation</p> <p>MOD 34: BMA signal (fire alarm signal active)</p> <p>MOD 35: Light barrier in function</p> <p>MOD 36: Locking cylinder slip door</p> <p>MOD 37: Testing stop signal transmission system radio 1 and 3</p> <p>MOD 38: Testing light grid 2 (input 2)</p> <p>MOD 39: Error LED</p> <p>MOD 40: Pulse signal with UP command from outside</p> <p>MOD 41: Test transmission system radio 4 in UP direction</p> <p>MOD 43: Drive moving</p> <p>MOD 44: (Red traffic light inside + outside)<br/>DOWN door movement from intermediate position DOWN - flashing<br/>UP door movement - off</p> <p>MOD 45: Closing edge in function</p> <p>MOD 46: Controller in operating mode ADJUSTMENT</p> <p>MOD 49: Testing presence and movement sensors (NC)</p> <p>MOD 60: (Red traffic light outside 1) forewarning - flashing, door running - illuminated</p> <p>MOD 61: (Red traffic light outside 2) forewarning - flashing, door running - flashing</p> <p>MOD 62: (Green traffic light outside) limit position UP - illuminated, forewarning/door running - off</p> | <p>MOD 1 - MOD 19</p> <p>MOD 21 - MOD 46</p> <p>MOD 49</p> <p>MOD 60 - MOD 62</p> | MOD 43          |
| TL REST  | <p>Switch traffic lights</p> <p>MOD1: off in standby position</p> <p>MOD2: on in standby position</p> <p>MOD3: off after 5 minutes when in standby position</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | MOD 1 - MOD 3                                                                     | MOD 1           |
| SKS      | <p>MOD1: OSE (photo sensor)</p> <p>MOD2: 8.2kΩ (electric contact strip)</p> <p>MOD3: DW (pressure wave strip) as NC with testing</p> <p>MOD4: Light grid OSE without testing</p> <p>MOD5: Light grid SSR or PNP with testing</p> <p>MOD6: Light grid SSR or PNP without testing</p> <p>MOD7: 2-wire OSE (photo sensor with 2 connection wires)</p> <p><b>NOTE:</b><br/>MOD4, MOD5 and MOD6 must be set manually when using a light grid.</p> <ul style="list-style-type: none"> <li>- Without addition of the open time (if programmed) after interruption of the light grid during the automatic closing.</li> <li>- Without switch-off of the function "Automatic closing" after 3 interruptions in succession.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <p>A (teaching)</p> <p>MOD 1 - MOD 7</p>                                          | A               |

| Function      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Adjustment options            | Factory setting |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-----------------|
| DW TEST       | <p>Activation and deactivation of the test function for the connected pressure wave strip.</p> <p>Only appears when setting parameter SKS = MOD 3.</p> <p>MOD 1: Test OFF</p> <p>MOD 2: Test ON</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | MOD 1 – MOD 2                 | MOD 2           |
| DW-POINT      | <p>Point at which the connected pressure wave strip (X4 / 5+6) is tested.</p> <p>Only appears when setting parameter SKS = MOD 3.</p> <p>Setting in increments (only AWG), starting from bottom limit switch-off point.</p> <p>In the case of systems with mechanical limit switches, the supplementary limit switch DOWN serves as a DW-Point.</p>                                                                                                                                                                                                                                                                                                                                                                                              | 0 – 1000                      | 20              |
| SKS FUNC.     | <p>MOD 1: Stop + reversing</p> <p>MOD 2: Stop + rev for 2 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | MOD 1 – MOD 2                 | MOD 1           |
| SKS REV       | <p>MOD 1: Stop + reversing between limit position UP and reversing point<br/>Stop between reversing point and limit position DOWN<br/>→ for vertically closing doors</p> <p>MOD 2: Stop + reversing between limit position UP reversing point<br/>No action between reversing point and limit position DOWN<br/>→ for vertically closing doors with leading light barrier</p> <p>MOD 3: Stop + reversing between limit position UP and limit position DOWN<br/>→ for horizontally closing doors and systems with mechanical limit switches without pre-limit switch</p> <p><b>NOTE:</b><br/>In the case of systems with mechanical limit switches the supplementary limit switch DOWN serves as reversing point.</p>                             | MOD 1 – MOD 3                 | MOD 1           |
| REVERSE OFF   | <p>Reversing point. Point at which the reversing of the door is switched off.</p> <p>Only appears with systems with an electronic limit position system (AWG). Setting in increments, starting from bottom limit switch-off point. In the case of systems with mechanical limit switches, the supplementary limit switch DOWN serves as reversing point.</p>                                                                                                                                                                                                                                                                                                                                                                                     | A (teaching)<br>1 – 1000      | 50              |
| LIGHT BARR. 1 | <p>Light barrier 1, with or without testing, mounted in passage area of the door.</p> <p>Connection to X4 / 1-4. The respective system connected is automatically detected and taught</p> <p>→ Wiring diagrams "3.10 Connection of closing edge protective device 1"</p> <p>MOD 1: 2-wire-system (Marantec) with testing</p> <p>MOD 2: 3-wire-system NPN without testing</p> <p>MOD 3: 3-wire-system PNP without testing</p> <p>4-wire-system NC contact without testing</p> <p>MOD 4: 3-wire-system NPN with testing</p> <p>MOD 5: 3-wire-system PNP with testing</p> <p>4-wire-system NC contact with testing</p> <p><b>NOTE:</b><br/>If a 3- or 4-wire-system is operated with testing, the respective MOD (4 or 5) must be set manually.</p> | A (teaching)<br>MOD 1 – MOD 5 | A               |

| Function   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Adjustment options                                                                        | Factory setting                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-------------------------------------------------------|------------------|---------------------------------------------------------------------------------------------------|------------------|------------------------------------------------------|--------|-----------------------------------------------------------|-----------|----------------------------------------------------------|---------------|-----------|--------|------|------|--------|------------------|-------------------------------------------------------------------------------------------|--------|-----------|------------------|--------|-----------|------------|--------|-----------|------|--------|----------------------------------------------------------------------------------------------|------------------|---------------|-------|
| LB FUNC. 1 | <p>Function of the light barrier 1 in passage area of the door.</p> <table><thead><tr><th></th><th>DOWN door movement</th><th>UP door movement</th></tr></thead><tbody><tr><td>MOD 1:</td><td>Stop + reversing</td><td>No action</td></tr><tr><td>MOD 2:</td><td>Stop + rev</td><td>No action</td></tr><tr><td>MOD 3:</td><td>STOP</td><td>No action</td></tr><tr><td>MOD 4:</td><td>STOP</td><td>STOP</td></tr><tr><td>MOD 5:</td><td>Stop + reversing</td><td>Ride-along suppression<br/>(UP door movement only possible if the light barrier is clear).</td></tr><tr><td>MOD 6:</td><td>No action</td><td>Stop + reversing</td></tr><tr><td>MOD 7:</td><td>No action</td><td>Stop + rev</td></tr><tr><td>MOD 8:</td><td>No action</td><td>Stop</td></tr><tr><td>MOD 9:</td><td>Ride-along suppression<br/>(DOWN door movement only possible, if the light barrier is clear).</td><td>Stop + reversing</td></tr></tbody></table> |                                                                                           | DOWN door movement                                    | UP door movement | MOD 1:                                                                                            | Stop + reversing | No action                                            | MOD 2: | Stop + rev                                                | No action | MOD 3:                                                   | STOP          | No action | MOD 4: | STOP | STOP | MOD 5: | Stop + reversing | Ride-along suppression<br>(UP door movement only possible if the light barrier is clear). | MOD 6: | No action | Stop + reversing | MOD 7: | No action | Stop + rev | MOD 8: | No action | Stop | MOD 9: | Ride-along suppression<br>(DOWN door movement only possible, if the light barrier is clear). | Stop + reversing | MOD 1 – MOD 9 | MOD 1 |
|            | DOWN door movement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | UP door movement                                                                          |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 1:     | Stop + reversing                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | No action                                                                                 |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 2:     | Stop + rev                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | No action                                                                                 |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 3:     | STOP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | No action                                                                                 |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 4:     | STOP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | STOP                                                                                      |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 5:     | Stop + reversing                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Ride-along suppression<br>(UP door movement only possible if the light barrier is clear). |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 6:     | No action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Stop + reversing                                                                          |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 7:     | No action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Stop + rev                                                                                |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 8:     | No action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Stop                                                                                      |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 9:     | Ride-along suppression<br>(DOWN door movement only possible, if the light barrier is clear).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Stop + reversing                                                                          |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| LB FUNC. 2 | <p>Function of the light barrier 2 in passage area of the door.<br/>Only appears when setting parameter INPUT 1 = MOD 15.<br/>Connection only as NC contact via programmable input 1 (X4 / 9+10).<br/>Selection mode analogous to the settings under LB FUNC. 1</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | MOD 1 – MOD 9                                                                             | MOD 1                                                 |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| LB POINT   | <p>Between limit position DOWN and LB POINT, the light barrier 1 (X4 / 1-4) is not evaluated. Setting in increments, starting from bottom limit switch-off point. Only appears with systems with an electronic limit switch.</p> <p><b>NOTE:</b><br/>At the first approach during adjustment, this point is automatically detected, provided that light barrier 1 is mounted in the door frame and remains interrupted during the downward travel from this point to the limit position DOWN.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                  | A (teaching)<br>1 – UP SWITCH                                                             | A                                                     |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| Impuls     | <p>Selection of a function that should be assigned to the impuls button (X3 / 7+8).</p> <table><tbody><tr><td>MOD 1:</td><td>UP – STOP – DOWN – STOP – UP ... (sequential control)</td></tr><tr><td>MOD 2:</td><td>UP when door is stationary / no action during UP movement<br/>Stop and run open with DOWN movement</td></tr><tr><td>MOD 3:</td><td>UP when door is stationary / STOP with door movement</td></tr><tr><td>MOD 4:</td><td>UP when door is stationary / no action with door movement</td></tr><tr><td>MOD 5:</td><td>UP when door is stationary / DOWN from UP limit position</td></tr></tbody></table>                                                                                                                                                                                                                                                                                                            | MOD 1:                                                                                    | UP – STOP – DOWN – STOP – UP ... (sequential control) | MOD 2:           | UP when door is stationary / no action during UP movement<br>Stop and run open with DOWN movement | MOD 3:           | UP when door is stationary / STOP with door movement | MOD 4: | UP when door is stationary / no action with door movement | MOD 5:    | UP when door is stationary / DOWN from UP limit position | MOD 1 – MOD 5 | MOD 1     |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 1:     | UP – STOP – DOWN – STOP – UP ... (sequential control)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                           |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 2:     | UP when door is stationary / no action during UP movement<br>Stop and run open with DOWN movement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                           |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 3:     | UP when door is stationary / STOP with door movement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                           |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 4:     | UP when door is stationary / no action with door movement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                           |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |
| MOD 5:     | UP when door is stationary / DOWN from UP limit position                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                           |                                                       |                  |                                                                                                   |                  |                                                      |        |                                                           |           |                                                          |               |           |        |      |      |        |                  |                                                                                           |        |           |                  |        |           |            |        |           |      |        |                                                                                              |                  |               |       |

| Function | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Adjustment options                          | Factory setting |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|-----------------|
| Input 1  | <p>Selection of a function that should be assigned to input 1(X4 / 9+10).</p> <p>MOD 1: Button Sect. UP ..... <b>NO</b><br/> MOD 2: Switch Sect. UP ..... <b>NO</b><br/> MOD 3: Switch auto CL..... <b>NO</b><br/> MOD 4: External CLOCK(permanent UP)..... <b>NO</b><br/> MOD 5: Switch BMA 3(Sect. opening) ..... <b>NO</b><br/> MOD 6: Switch BMA 1(emergency closing) ..... <b>NO</b><br/> MOD 7: Switch BMA 1(emergency closing) ..... <b>NC</b><br/> MOD 8: Switch BMA 2(emergency opening) ..... <b>NO</b><br/> MOD 9: Switch BMA 2(emergency opening) ..... <b>NC</b><br/> MOD 10: Button ventilation function(Sect. opening) ..... <b>NO</b><br/> MOD 11: Button automatic closing ..... <b>NO</b><br/> MOD 12: Laser scanner(height detection) ..... <b>NO</b><br/> MOD 13: Switch BMA 3(Sect. opening) ..... <b>NC</b><br/> MOD 14: Slip door locking ..... <b>NO</b><br/> MOD 15: Light barrier 2 ..... <b>NC</b><br/> MOD 16: Forewarning switch ..... <b>NO</b><br/> MOD 17: Impuls button ..... <b>NO</b><br/> MOD 18: Crash sensor ..... <b>NC</b><br/> MOD 19: Lock operation commands via LCD monitor ..... <b>NC</b><br/> MOD 22: Monitoring an external load contactor ..... <b>NO</b><br/> MOD 30: UP switch inside ..... <b>NO</b><br/> MOD 31: UP switch outside..... <b>NO</b><br/> MOD 32: DOWN switch ..... <b>NO</b><br/> (only active with functioning closing edge protective device<br/> and functioning light barrier 1. No function in dead-man's<br/> operation.)</p>                 | MOD 1 – MOD 19<br>MOD 22<br>MOD 30 – MOD 32 | MOD 1           |
| INPUT 2  | <p>Selection of a function that should be assigned to input 2(X4 / 11+12).</p> <p>OFF: NOT active<br/> MOD 2: Safety switching with resistance evaluation..... <b>xx Ω</b><br/> MOD 3: Switching strip – active in UP direction ..... <b>8.2 kΩ</b><br/> Stops and reverses with actuation<br/> MOD 4: Switching strip – active in UP direction ..... <b>8.2 kΩ</b><br/> Stop and rev with actuation<br/> MOD 5: Battery operation ..... <b>NO</b><br/> MOD 6: Radar movement detector(height detection)..... <b>NO</b><br/> MOD 7: Light grid 2(SSR / PNP) with testing..... <b>NC</b><br/> MOD 9: Safety element – STOP with deviation ..... <b>OSE</b><br/> MOD 10: Switching strip – active in UP direction ..... <b>OSE</b><br/> Stops and reverses with actuation<br/> MOD 11: Switching strip – active in UP direction ..... <b>OSE</b><br/> Stop and rev(2 sec.) with actuation<br/> MOD 12: Light grid 2 without testing ..... <b>OSE</b></p> <p>With first commissioning and after a reset, input 2 is set to A - self-teaching once. If a resistance value is detected, MOD 2(safety input 5.14) is automatically set and the measured value is stored and monitored as a reference for the connected safety-related components. A single switching strip 8.2 kΩ(MOD 3/4) must be manually activated. If no connected component is detected during initial commissioning or after a reset, the input is automatically deactivated. OFF appears in the display and the input must be manually activated.</p> | A(teaching)<br>OFF<br>MOD 2 – MOD 12        | A               |



| Function     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Adjustment options                             | Factory setting |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|-----------------|
| INPUT 3      | <p>Selection of a function that should be assigned to input 3 (X10/1-3).</p> <p>MOD 4: Week timer<br/>MOD 21: Brake actuation monitoring<br/>MOD 22: (analogous to input 1/MOD 22)</p> <p><b>NOTE:</b><br/>If MOD 14 - 16 is set at relay 4, MOD 21 (brake monitoring) is automatically set at input 3. This setting cannot be changed if the brake mode is active.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | MOD 4 / MOD 21/<br>MOD 22                      | MOD 4           |
| SKS3         | <p>Setting for channel 1 of the pluggable signal transmission system (X20).</p> <p>OFF: Not active<br/>MOD 2: Activates as closing edge protection in DOWN direction.<br/>MOD 3: Activates as closing edge protection in UP direction.<br/>MOD 4: Activates as safety device (internal safety circuit)</p> <p>If the pluggable component of the signal transmission system is plugged into X20, the controller recognises this (only during initial commissioning or after a reset) and the parameter is automatically set to MOD 4.</p>                                                                                                                                                                                                                                                                                                  | A - (teaching)<br>OFF<br>MOD 2 - MOD 4         | A               |
| SKS4         | <p>Setting for channel 2 of the pluggable signal transmission system (X20).<br/>Selection mode analogous to the settings under SKS 3.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | A - (teaching)<br>OFF<br>MOD 2 - MOD 4         | A               |
| RUNNING-TIME | <p>Monitoring the maximum running time of an UP or DOWN movement. During the teach-in run, the runtime of the door is learned automatically.<br/>If the deviation is 20% (in both directions), a runtime error appears. After automatic teach-in, the runtime can be changed manually.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | A (teaching)<br>OFF<br>1 - 300 seconds         | A               |
| REVERS.TIME  | <p>Motor standstill time with each direct change of direction. The reversal time when the safety edge is activated during the closing movement is one quarter of the set time.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 100 -<br>5000 milliseconds                     | 300             |
| LIMIT SW.    | <p>Selection of the limit position system to be evaluated.</p> <p>MOD 1: Absolute value encoder (AWG)<br/>MOD 2: Mechanical limit switches (MEC)<br/>MOD 4: only for frequency converter operation<br/>MOD 5: Absolute value encoder (AWG) + mechanical limit switch DOWN (NC)<br/>with standard installation<br/>MOD 6: Absolute value encoder (AWG) + mechanical limit switch DOWN (NC)<br/>with special installation with left rotating field</p> <p><b>MOD 5+6 (optional):</b><br/>Here an additional external mechanical limit switch is set to query the lower end point in order to compensate for tolerances caused by the door mechanism and/or the door curtain. As soon as the mechanical limit switch is actuated, the lower end position is considered reached, regardless of the information from the absolute encoder.</p> | A (teaching)<br>MOD 1 - MOD 2<br>MOD 4 - MOD 6 | A               |

| Function     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Adjustment options | Factory setting |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------------|
| SELF LOCK    | <p>Selection between pulse operation and manual operation (dead man) with or without evaluation of closing edge safety device (SKS) and light barrier system (LB).</p> <p>MOD 1: Pulse operation for OPEN + CLOSE with SKS and LB<br/>With defective safety equipment, switch over to manual operation.</p> <p>MOD 2: Manual operation for OPEN + CLOSE with SKS and LB</p> <p>MOD 3: Manual operation for CLOSE, pulse operation for OPEN, with SKS and LB</p> <p>MOD 4: Manual operation for OPEN, pulse operation for CLOSE, with SKS and LB</p> <p>MOD 5: Manual operation for OPEN + CLOSE without SKS and LB</p> <p>MOD 6: Manual operation for CLOSE, pulse operation for OPEN, without SKS and LB</p> <p>MOD 7: Manual operation for OPEN + CLOSE with SKS and LB<br/>STOP upon reaching the intermediate position CLOSE.<br/>By pressing the button again, continued travel to end position CLOSED is possible.</p> <p>MOD 8: Pulse operation for OPEN + CLOSE with SKS and LB<br/>With defective safety equipment, switch over to manual operation only via circuit board button</p> <p>MOD 9: Manual operation for OPEN + CLOSE with SKS and LB<br/>With defective safety equipment, operation only via circuit board button.</p> | MOD 1 – MOD 9      | MOD 1           |
| POWER        | <p><b>Automatic power monitoring</b><br/>(Monitoring of the rotational speed)<br/>Fault message in the event of the door being difficult to move or blocked.<br/>Adjustment of the sensitivity for OPEN direction.<br/>A value for the force (rotational speed) will be displayed during opening.<br/>With the power monitoring active, the value must be set to a lower value than the lowest value shown during the door travel. The greater the difference to the lowest displayed value, the less sensitive the reaction of the power monitoring.<br/>The power monitoring is only activated if the numeric value is set.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | OFF<br>1 – 999     | 10              |
| RESET MSBUS  | <p>All assigned MSBUS addresses are reset.<br/>After a controller restart, re-addressing of all connected MSBUS devices takes place.<br/> For detailed information refer to the manual for the MSBUS device.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | ON<br>OFF          | OFF             |
| RESTART      | With activation of the function, the controller is restarted.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | ON<br>OFF          | OFF             |
| FACTORY SET. | <p>Selection of the parameter set that should be reset with a RESET.</p> <p>MOD 5: Marantec S → Drives in dead man operation</p> <p>MOD 6: Marantec FU → Drive series MDF-U (integrated UPS)</p> <p>MOD 7: Marantec S → Drive series STAW with increased switch-on duration</p> <p>MOD 8: Marantec FU → Drive series MTZ 05 (230V)</p> <p>MOD 9: Marantec FU → Drive series STA</p> <p>MOD 14: Marantec FU → Drive series MTZ 05 (400V)</p> <p>MOD 28: Marantec S → Standard with brake test monitoring</p> <p>MOD 31: Marantec S → Dead-mans function, not resettable</p> <p>MOD 32: Marantec DUO → DUO-system, 2 drives</p> <p>MOD 99: Marantec S → Standard</p> <p>MOD 10 – MOD 13 / MOD 15 – MOD 97: Customer-specific parameter sets</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | MOD 5 – MOD 99     | MOD 99          |

| Function      | Description                                                                                                                                                                                                                                                                                                                                                                                                             | Adjustment options                     | Factory setting |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|-----------------|
| RESET         | Reset control parameters to the pre-selected factory settings.<br>MOD 1: Part reset 1 (everything apart from frequency converter settings)<br>MOD 2: Part reset 2 (everything apart from limit positions / known limit position system)<br>MOD 3: Complete reset (everything is reset to factory settings)                                                                                                              | OFF,<br>MOD 1 – MOD 3                  | OFF             |
| PIN no. 2     | Input and selection of a PIN code for programming a service interval. After inputting the PIN code, the second programming level opens. Afterwards, a service interval can be entered via the SERVICE parameter. Input level 2 disappears again after the voltage is switched off, or automatically after 10 minutes. A change to the PIN code can only take place in the second programming level.                     | 0 – 9999                               | 1111            |
| SERVICE       | OFF: Service display not active<br><br>Setting a service interval. After the set load cycles are complete, a service message is issued (LED / LCD). If a relay output is programmed with MOD 31, the respective relay (continuous signal) switches. Only appears after activation of input level 2 via parameter PIN no. 2.                                                                                             | OFF<br>0 – 99950                       | OFF             |
| INVERTER      | Activates or deactivates a connected frequency converter. By connecting a frequency converter to Interface X18 the controller becomes an CS 320 FU.<br><br>MOD 1: Operation without frequency converter<br>MOD 2: Operation with frequency converter<br>MOD 3: Operation with frequency converter (effective ramp times)                                                                                                | MOD 1 – MOD 3                          | MOD 1           |
| BRAKE P.OP.*  | Initiates the deceleration time SLOW DO. OP. Display in absolute value encoder increments as a negative value in relation to the upper end switch-off point.<br><i>Only applies for OPENING direction of door travel.</i>                                                                                                                                                                                               | -999 – 0                               | -250            |
| BRAKE P.CL.*  | Initiates the deceleration time SLOW DO. CL. Display in absolute value encoder increments as a positive value in relation to the lower end switch-off point.<br><i>Only applies for CLOSING direction of door travel.</i>                                                                                                                                                                                               | 0 – 999                                | 250             |
| BRAKE P.CL.2* | Initiates the delay time DO. MX. Display in absolute value encoder increments as a positive value in relation to the lower end switch-off point.<br>If the end positions are changed again (e.g. fine adjustment), the BP2 is deactivated again (display A) and must be re-programmed.<br><i>Only applies for CLOSING direction of door travel.</i><br><br>* Parameters appear only after programming the end positions | 0 – UPPER SWITCH<br>(0 – LOWER SWITCH) | A               |
| SPEED OPEN    | Normal speed for OPENING door movement.                                                                                                                                                                                                                                                                                                                                                                                 | MOT.HZ MIN – MAX                       | 50 Hz           |
| SPEED CLOSE   | Normal speed for CLOSING door movement.                                                                                                                                                                                                                                                                                                                                                                                 | MOT.HZ MIN – MAX                       | 50 Hz           |
| MX SPEED CL.  | Maximum speed for CLOSING door movement (optional). Parameter appears only after programming BRAKE P. CL.2.                                                                                                                                                                                                                                                                                                             | MOT.HZ MIN – MAX                       | 50 Hz           |
| SOFTRUN OP.   | Minimum speed for OPENING door movement.                                                                                                                                                                                                                                                                                                                                                                                | MOT.HZ MIN – 50 Hz                     | 25 Hz           |

| Function      | Description                                                                                                                                                                                                  | Adjustment options | Factory setting |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------------|
| SOFT RUN OP.  | Minimum speed for OPENING door movement.                                                                                                                                                                     | MOT.HZ MIN - 50 Hz | 25 Hz           |
| SOFT RUN CL.  | Minimum speed for CLOSING door movement.                                                                                                                                                                     | MOT.HZ MIN - 50 Hz | 25 Hz           |
| SPEED UP OP.  | Acceleration time between starting command and SPEED OPEN frequency.<br><i>Only applies for OPENING direction of door travel.</i>                                                                            | 0.1 – 9.9 s        | 2.0 s           |
| SPEED UP CL.  | Acceleration time between starting command and SPEED CLOSE frequency.<br><i>Only applies for CLOSING direction of door travel.</i>                                                                           | 0.1 – 9.9 s        | 2.0 s           |
| SLOW DO. OP.  | Deceleration time between Brake point OPEN and SOFT RUN OP. frequency<br><i>Only applies for OPENING direction of door travel.</i>                                                                           | 0.1 – 9.9 s        | 2.0 s           |
| SLOW DO. CL.  | Deceleration time between Brake point CLOSE and SOFT RUN CL. frequency<br><i>Only applies for CLOSING direction of door travel.</i>                                                                          | 0.1 – 9.9 s        | 2.0 s           |
| SPD. UP MX *  | Acceleration time between starting command and MX SPEED CL. frequency.<br><i>Only applies for CLOSING direction of door travel.</i>                                                                          | 0.1 – 5.0 s        | 2.0 s           |
| SLO. DO. MX * | Deceleration time between Brake point CL2 and SPEED CLOSE frequency.<br><i>Only applies for CLOSING direction of door travel.</i><br><br><i>* Parameters appear only after programming Brake point CL.2.</i> | 0.1 – 5.0 s        | 2.0 s           |
| SPEED UP SKS  | Acceleration time after reversal of direction until SPEED OPEN/CLOSE frequency.<br><i>Applies for both directions of door/gate travel and activation of closing edge safety device.</i>                      | 0.1 – 1 s          | 0.5 s           |
| SLOW DO. SKS  | Delay time between activating the SKS closing edge safety device and stopping the system.<br><i>Applies for both directions of door/gate travel and activation of closing edge safety device.</i>            | 0.1 – 1 s          | 0.1 s           |
| SPEED UP LB   | Acceleration time after reversal of direction until SPEED OPEN/CLOSE frequency.<br><i>Applies for both directions of door/gate travel and activation of photocell.</i>                                       | 0.1 – 5.0 s        | 0.5 s           |
| SLOW DOWN LB  | Delay time between activating the photocell and stopping the system.<br><i>Applies for both directions of door/gate travel and activation of photocell.</i>                                                  | 0.1 – 5.0 s        | 0.5 s           |
| SLOW DO. STOP | Delay time between the stop command / reaching an end position and stopping the system.<br><i>Applies for both directions of door/gate running.</i>                                                          | 0.0 – 5.0 s        | 0.5 s           |
| RES. INVERTER | Resets all parameters of the frequency converter (factory default setting).                                                                                                                                  | ON<br>OFF          | OFF             |

| Function     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Adjustment options           | Factory setting        |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|------------------------|
| MOTOR V      | Nominal motor voltage.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 100 – 500 V                  | 230 V                  |
| MOTOR I      | Nominal motor current.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 1 – 9.9 A                    | 5.1 A                  |
| MOTOR P      | Nominal motor current.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 100 – 5000 W                 | 550 W                  |
| MOTOR PHI    | Motor power factor (cosine phi).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 0 – 1                        | 0.69                   |
| MOTOR HZ     | Nominal motor frequency.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 10 – 100 Hz                  | 50 Hz                  |
| MOTOR RPM    | Nominal motor rpm.<br><br><b>NOTICE:</b><br>The motor rating data must comply with the data on the type plate.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 100 – 5000 min <sup>-1</sup> | 1370 min <sup>-1</sup> |
| MOTOR HZ MIN | The minimum value to which the operating frequency of the motor can be set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 10 – 50 Hz                   | 10 Hz                  |
| MOT.HZ MAX   | The maximum value to which the operating frequency of the motor can be set.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 50 – 100 Hz                  | 87 Hz                  |
| BRAKE DELAY  | Causes delayed brake release following a starting command. Prevent the door/gate from sagging when it starts from an intermediate position.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 0 – 500 ms                   | 50 ms                  |
| BOOST CONT.  | Constant voltage boost relative to the output frequency.<br>At low output frequencies, the effective resistance values of the winding can no longer be neglected in order to maintain the motor flux.<br>To compensate voltage drops, hold the load and/or maintain the magnetisation, the inverter output voltage can therefore be boosted using this parameter.                                                                                                                                                                                                                                                                                                                                                                                                                     | 0 – 250 V                    | 50 V                   |
| BOOST RUN UP | Results in a voltage boost when ramping up/ramping down and generates an additional torque each time accelerating/braking occurs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0 – 250 V                    | 50 V                   |
| BOOST START  | Voltage boost when starting. Useful for starting loads.<br>Only active after the first acceleration process following an ON command.<br>Setting a starting boost that is too high (BOOST START) results in the inverter limiting the current strength, which means that the output frequency is limited to a value that is lower than the nominal frequency.<br><br><b>NOTICE:</b><br>The voltage boosts increase the motor warming (in particular at zero speed).<br>The boost values are combined when continuous boost (BOOST KONST. parameter) are used in conjunction with other boost parameters (BOOST BESL. acceleration boost and BOOST START starting boost).<br>These parameters are assigned priorities, however, as follows:<br>BOOST CONT. > BOOST RUN UP > BOOST START | 0 – 250 V                    | 0 V                    |

| Function    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Adjustment options | Factory setting |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------------|
| EXPERT MENU | <p>Activation and deactivation of expert setting.<br/>In the factory setting OFF, only a limited choice of parameters appears in INPUT mode. If this parameter is set to ON, all parameters in the input menu can be called up and set.</p> <p>OFF: Limited number of parameter settings:</p> <ul style="list-style-type: none"> <li>- Menu language</li> <li>- INC.P.OP</li> <li>- OPEN TIME</li> <li>- FOREWARNING</li> <li>- FAST CL.</li> <li>- REVERS- POINT.</li> <li>- INPUT 1</li> <li>- SELF LOCK</li> <li>- BRAKE P OP</li> <li>- BRAKE P CL</li> <li>- SPEED OPEN</li> <li>- SPEED CLOSE</li> <li>- SOFTRUN OP.</li> <li>- SOFTRUN CL.</li> <li>- SPEED UP OP.</li> <li>- SPEED UP CL.</li> <li>- SLO. DO. OP.</li> <li>- SLO. DO. CL.</li> <li>- MOTOR V</li> <li>- MOTOR I</li> <li>- MOTOR P</li> <li>- MOTOR PHI</li> <li>- MOTOR HZ</li> <li>- MOTOR RPM</li> <li>- EXPERT MENU</li> </ul> <p>ON: Access to all parameters as listed in Chapter 11.2.</p> | ON - OFF           | OFF             |

## 9.3 Explanations of the relay modes:

### A. Traffic light functions

| MOD    | Description                        | CLOSED limit position | OPEN limit position      | Forewarning | Door movement         |
|--------|------------------------------------|-----------------------|--------------------------|-------------|-----------------------|
| MOD 1  | Red traffic light inside 1         | ON / OFF <sup>1</sup> | OFF <sup>2</sup>         | Flashing    | Illuminated           |
| MOD 2  | Red traffic light inside 2         | ON / OFF <sup>1</sup> | OFF <sup>2</sup>         | Flashing    | Flashing              |
| MOD 3  | Red traffic light inside 3         | ON / OFF <sup>1</sup> | OFF <sup>2</sup>         | Illuminated | Illuminated           |
| MOD 18 | Red traffic light inside 4         | OFF                   | OFF                      | Flashing    | OFF                   |
| MOD 23 | Green traffic light inside         | OFF                   | Illuminated <sup>2</sup> | OFF         | OFF                   |
| MOD 44 | Red traffic light inside + outside | OFF                   | OFF                      | OFF         | Flashing <sup>3</sup> |
| MOD 60 | Red traffic light outside 1        | ON / OFF <sup>1</sup> | OFF <sup>2</sup>         | Flashing    | Illuminated           |
| MOD 61 | Red traffic light outside 2        | ON / OFF <sup>1</sup> | OFF <sup>2</sup>         | Flashing    | Flashing              |
| MOD 62 | Green traffic light <sup>4</sup>   | OFF                   | Illuminated <sup>2</sup> | OFF         | OFF                   |

<sup>1</sup> depending on the parameter TL REST

<sup>2</sup> With active two-way control: Depending on the UP command inside or outside

<sup>3</sup> from intermediate position DOWN to DOWN, also after stop command. Only in CLOSE direction.

### B. Position messages

| MOD    | Description                                           | Remarks                                                                                                                                           |
|--------|-------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 6  | UP limit position                                     | The relay closes the contact when the door is in the OPEN limit position.                                                                         |
| MOD 7  | DOWN limit position                                   | The relay closes the contact when the door is in the CLOSED limit position.                                                                       |
| MOD 8  | Not OPEN limit position                               | The relay closes the contact when the door is not in the OPEN limit position.                                                                     |
| MOD 9  | Not CLOSED limit position                             | The relay closes the contact when the door is not in the CLOSED limit position.                                                                   |
| MOD 10 | Intermediate OPEN position (Sect. OPEN)               | The relay closes the contact when the door is in the intermediate OPEN position (Sect. OPEN).                                                     |
| MOD 11 | Intermediate CLOSED position (Sect. CLOSED)           | The relay closes the contact when the door is in the intermediate CLOSED position (Sect. CLOSED).                                                 |
| MOD 12 | Intermediate CLOSED position to CLOSED limit position | The relay closes the contact when the door is in the range between the CLOSED limit position and the intermediate CLOSED position (Sect. CLOSED). |
| MOD 19 | Intermediate OPEN position to OPEN limit position     | The relay closes the contact when the door is in the range between the OPEN limit position and the intermediate OPEN position (Sect. OPEN).       |

### C. Pulse signals

| MOD    | Description                                  | Remarks                                                                                                                                                               |
|--------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 4  | Pulse with OPEN command from inside          | The relay closes the contact for 1 second if the door receives an OPEN command from inside.<br>It is possible to realise light actuation with this pulse for example. |
| MOD 27 | Pulse after reaching the OPEN limit position | The relay closes the contact for 2 seconds if the door reaches the OPEN limit position.<br>It is possible to open a downstream cabinet with this pulse for example.   |
| MOD 40 | Pulse with OPEN command from outside         | The relay closes the contact for 1 second if the door receives an OPEN command from outside. It is possible to realise light actuation with this pulse for example.   |

### D. Brake functions (can only be set at relay 4)

| MOD    | Description                                                             | Remarks                                                                                                                                                                                                                                                                                                                                                                                  |
|--------|-------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 14 | Brake (closed-circuit current principle)                                | The switching contact of the brake rectifier is controlled via the relay in order to implement a faster braking function. As soon as the door moves, the contact is closed and the brake is vented (closed-circuit current principle).                                                                                                                                                   |
| MOD 15 | Brake (open-circuit current principle)                                  | The switching contact of the brake rectifier is controlled via the relay in order to implement a faster braking function. As soon as the door moves, the contact is opened and the brake is vented (open-circuit current principle).                                                                                                                                                     |
| MOD 16 | Brake (closed-circuit current principle) applied in OPEN limit position | The switching contact of the brake rectifier is controlled via the relay in order to implement a faster braking function. As soon as the door moves, the contact is closed and the brake is vented (closed-circuit current principle). To achieve a smoother stopping behaviour of the door in the top limit position, the switching contact is not switched in the OPEN limit position. |

### E. Error messages

| MOD    | Description                                     | Remarks                                                                                                                                                                                                                                                                             |
|--------|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 5  | Fault message                                   | The relay opens the contact if a STOP command or an error is present.<br>All errors of chapter 10 lead to relay actuation.                                                                                                                                                          |
| MOD 17 | Closing edge protective device SKS 1-4 actuated | Monitoring SKS1(X4/5-8), SKS2(X4/11-12) and SKS3/SKS4 (transmission system).<br>The relay opens the contact if one of the closing edge protective devices SKS 1-4 is actuated.<br>An error with one of the closing edge protective devices or a faulty test is displayed via MOD 5. |
| MOD 35 | Light barrier                                   | Analogous to the light barrier input X4 (3/4), switches the applied signal on as a message.<br>Relay ON: Light barrier signal is OK<br>Relay OFF: Light beam interrupted or light barrier defective                                                                                 |
| MOD 39 | Error LED                                       | The relay always closes the contact if the internal error LED 2 (red) lights up.                                                                                                                                                                                                    |



| MOD    | Description                                   | Remarks                                                                                                                                                                                                                   |
|--------|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 45 | Closing edge protective devices<br>SKS 1-4 OK | Monitoring SKS1 (X4/5-8) , SKS2 (X4/11-12) and SKS3/SKS4 (transmission system)<br>Relay ON: All closing edge protective devices are OK<br>Relay OFF: At least one closing edge protective device is actuated or defective |

## F. Movement signal

| MOD    | Description                 | Remarks                                                                                         |
|--------|-----------------------------|-------------------------------------------------------------------------------------------------|
| MOD 29 | Door drives open.           | Active with movement in the OPEN direction.                                                     |
| MOD 30 | Door drives closed.         | Active with movement in the CLOSE direction.                                                    |
| MOD 43 | Door drives open or closed. | Active with all movement.<br>The brake monitoring module BWM 1 is not active with this setting! |

## G. Functions for external accessories

| MOD    | Description                                                                 | Remarks                                                                                                                                                                                                                                                                                                                                            |
|--------|-----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 13 | Magnetic lock function                                                      | The relay closes before every door movement. The relay is opened in the standby position.<br>A delay time of 0.5 seconds is set before every door movement.                                                                                                                                                                                        |
| MOD 21 | Test of the trap-in protection                                              | The relay generates a test signal upon reaching the CLOSED limit position and awaits actuation of the STOP circuit as a response to the test signal.                                                                                                                                                                                               |
| MOD 22 | Activation of transmission system radio 1 and radio 4, test of light grid 1 | The relay generates a test signal upon reaching the OPEN limit position and awaits actuation of the switching strip input as a response to the test signal.                                                                                                                                                                                        |
| MOD 24 | Capacitor switching                                                         | With every operation command, the relay is closed for approx. 1 second. This relay is used to add an additional start capacitor required for alternating current applications to ensure safe starting of the motor.<br>For series STAW with increased switch-on duration.                                                                          |
| MOD 25 | Courtyard light function                                                    | With each OPEN command, the relay is closed for 2 minutes and can therefore be used to control a lighting system.                                                                                                                                                                                                                                  |
| MOD 26 | Activation of transmission system radio 2 and radio 4                       | Before every DOWN command, the transmission system radio is activated with a pulse. The duration of activation must be set on the transmission system.<br>As a result of this activation, travel is delayed by approx. 0.5 seconds.                                                                                                                |
| MOD 28 | Relay OFF                                                                   | The relay is switched off as a general rule, the contact is always open.                                                                                                                                                                                                                                                                           |
| MOD 36 | Pneumatic cylinder for locking the slip door (threshold-free door system)   | With every OPEN command the relay is activated and controls a pneumatic cylinder that mechanically locks the slip door of the door. The locking position of the cylinder is queried via a limit switch. Only after this limit switch is released does the door start to move. The relay remains active until the lower end point is reached again. |
| MOD 37 | Testing the stop signal via transmission system radio 1 and radio 3         | The relay generates a test signal upon reaching the OPEN limit position and awaits an interruption of the stop circuit as a response to the test signal.                                                                                                                                                                                           |

| MOD    | Description                                                        | Remarks                                                                                                                                                  |
|--------|--------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 38 | Test of light grid 2 (8.2 kΩ), connection via input 2 (X4 / 11+12) | The relay generates a test signal upon reaching the OPEN limit position and awaits an interruption at input 2 as a response to the test signal.          |
| MOD 41 | Activation transmission system radio 4 in OPEN direction           | The relay generates a test signal upon reaching the CLOSED limit position and awaits an interruption at input 2 as a response to the test signal.        |
| MOD 49 | Testing presence and movement sensors (NC)                         | The relay generates a test signal each time before closing travel and awaits an interruption of the closing edge input as a response to the test signal. |

## H. Input-dependent messages

| MOD    | Description          | Remarks                                                                                                                                                                                                                                                                                                                                             |
|--------|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 32 | Battery operation    | Active with battery operation. Input 2 is bridged (setting MOD 5).                                                                                                                                                                                                                                                                                  |
| MOD 33 | no battery operation | Active with mains operation. Input 2 is open (setting MOD 5).<br>When programmed with MOD 32/33, the relays operate as delayed changeover contacts and follow the signal at input 2 when MOD 5 is set.<br>In this case, input 2 is fed with a control signal from the UPS system, which ensures the changeover between mains supply and UPS supply. |
| MOD 34 | BMA signal           | Switches with an active fire alarm system.<br>Follows the signal at input 1 with setting MOD 5-9 / 13.<br>In this case, input 1 is fed with a control signal from the fire alarm system and, depending on the setting, the door opens or closes to an end or intermediate position.                                                                 |

## I. System messages

| MOD    | Description               | Remarks                                                                                                                                                                                  |
|--------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 31 | Service                   | The relay is active after reaching the programmed service interval. Only after the service interval is reset or redefined does the relay drop out again.<br>→ "9.2 Input operating mode" |
| MOD 46 | ADJUSTMENT operating mode | The relay is active if the control is in the ADJUSTMENT operating mode.                                                                                                                  |

## 9.4 Explanations of the inputs:

### A. Functions input 1

| MOD   | Description                         | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 1 | SECT. OPEN button                   | By pressing the button (input 1), the door opens to the intermediate OPEN position (SECT. OPEN).                                                                                                                                                                                                                                                                                                                                                             |
| MOD 2 | SECT. OPEN switch                   | Closed: All OPEN commands lead to intermediate OPEN position (SECT. OPEN).<br>Open: All OPEN commands lead to the OPEN limit position.                                                                                                                                                                                                                                                                                                                       |
| MOD 3 | AUT.CLOSE switch                    | Closed: No automatic closing.<br>(Open time stops, if open time > 0).<br>Open: Automatic closing is active (if open time > 0).                                                                                                                                                                                                                                                                                                                               |
| MOD 4 | External CLOCK (permanent OPEN)     | The door opens as soon as the contact closes and remains in the OPEN position (maintain open time) until the contact opens. Then the door drives closed automatically (only with open time > 0). This function can be cancelled by actuating the CLOSE button. The door drives CLOSED.                                                                                                                                                                       |
| MOD 5 | Switch BMA 3 (Sect. opening) NO     | Control function with an active fire alarm system.<br>Open: Normal function.<br>Closed: Sect. opening of the door. The intermediate OPEN position (Sect. OPEN) is approached from both directions, irrespective of the current door position.<br><br>BUTTON: No function.<br>LB / SKS: Door stops and moves clear (only in CLOSE direction), after 5 seconds renewed closing.<br>STOP: Interruption of the emergency closing for the duration of activation. |
| MOD 6 | Switch BMA 1 (emergency closing) NO | Control function with an active fire alarm system.<br>Open: Normal function.<br>Closed: Emergency closing of the door.<br><br>BUTTON: No function.<br>LB / SKS: Door stops and moves clear, after 5 seconds renewed emergency closing.<br>STOP: Interruption of the emergency closing for the duration of activation.                                                                                                                                        |
| MOD 7 | Switch BMA 1 (emergency closing) NC | Control function with an active fire alarm system.<br>Closed: Normal function.<br>Open: Emergency closing of the door.<br><br>BUTTON: No function.<br>LB / SKS: Door stops and moves clear, after 5 seconds renewed emergency closing.<br>STOP: Interruption of the emergency closing for the duration of activation.                                                                                                                                        |

| MOD    | Description                         | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 8  | Switch BMA 2 (emergency opening) NO | <p>Control function with an active fire alarm system.</p> <p>Open: Normal function.</p> <p>Closed: Emergency opening of the door.</p> <p>BUTTON: No function.</p> <p>LB / SKS: No function.</p> <p>STOP: Interruption of the emergency opening for the duration of activation.</p> <p>No automatic closing after deactivation of the BMA signal.</p>                                                                                                                                |
| MOD 9  | Switch BMA 2 (emergency opening) NC | <p>Control function with an active fire alarm system.</p> <p>Closed: Normal function.</p> <p>Open: Emergency opening of the door.</p> <p>BUTTON: No function.</p> <p>LB / SKS: No function.</p> <p>STOP: Interruption of the emergency opening for the duration of activation.</p> <p>No automatic closing after deactivation of the BMA signal.</p>                                                                                                                                |
| MOD 10 | Button ventilation function NO      | Sect. opening of the door. By pressing an additional button at input 1, the intermediate CLOSED position (Sect. CLOSED) is approached from both directions, independent of the current door position.                                                                                                                                                                                                                                                                               |
| MOD 11 | "Automatic closing" button          | <p>1. Actuation: No automatic closing, open time is stopped.</p> <p>2. Actuation: Automatic closing is active again if open time &gt; 0.</p> <p>3. Actuation: No automatic closing, open time is stopped.</p> <p>...</p>                                                                                                                                                                                                                                                            |
| MOD 12 | Laser scanner (height detection)    | <p>Only in conjunction with input 2 (MOD 6).</p> <p>➔ See explanations for input 2</p>                                                                                                                                                                                                                                                                                                                                                                                              |
| MOD 13 | Switch BMA 3 (Sect. opening) NC     | <p>Control function with an active fire alarm system.</p> <p>Closed: Normal function.</p> <p>Open: Sect. opening of the door. The intermediate OPEN position (SECT. OPEN) is approached from both directions, irrespective of the current door position.</p> <p>BUTTON: no function.</p> <p>LB / SKS: Door stops and moves clear (only in CLOSE direction), after 5 seconds renewed closing.</p> <p>STOP: Interruption of the emergency closing for the duration of activation.</p> |
| MOD 14 | Slip door locking                   | <p>Monitoring limit switch for the pneumatic locking system of slip doors. The limit switch must have confirmed the correct locking within 10 seconds after an OPEN command, otherwise an error message is issued and the door stops.</p> <p>This function acts on relay mode 36.</p>                                                                                                                                                                                               |
| MOD 15 | Light barrier 2 NC                  | <p>If a second light barrier is connected in the passage area of the door, this system can be programmed via the parameter LB FUNC 2 in the INPUT.</p> <p>Only connection of light barriers with potential-free NC contact.</p>                                                                                                                                                                                                                                                     |
| MOD 16 | Forewarning switch                  | <p>Closed: Start-up warning and forewarning are inactive (even if both times &gt; 0).</p> <p>Open: Start-up warning and forewarning are active (only if both times &gt; 0).</p> <p>➔ "9.2 Input operating mode"</p>                                                                                                                                                                                                                                                                 |

| MOD    | Description                           | Remarks                                                                                                                                                                                                                                                                                                                                                |
|--------|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 17 | Impuls button outside                 | Pressing the button moves or stops the door.<br><ul style="list-style-type: none"> <li>Function and direction of the movement depend on the IMPULS parameter setting in the input menu.</li> <li>→ "9.2 Input operating mode" / IMPULS parameter</li> <li>With active two-way control, this pulse command is treated as an external signal.</li> </ul> |
| MOD 18 | Crash sensor NC                       | Query of a crash sensor as NC contact. If the crash sensor was actuated once, only renewed door travel is possible.<br><ul style="list-style-type: none"> <li>after pressing and holding the STOP button for more than 5 seconds, or</li> <li>switching the supply voltage off and back on.</li> </ul>                                                 |
| MOD 19 | Switch block operation commands NC    | Closed: no restrictions.<br>Open: It is no longer possible to use the (+) and (-) buttons on the LCD monitor and the motherboard to issue operation commands in AUTOMATIC mode.                                                                                                                                                                        |
| MOD 22 | Monitoring an external load contactor | In a control version with external load contactor (motor power > 2.2kW / 8A) the auxiliary contacts of the load contactor (NO) are connected and monitored here.                                                                                                                                                                                       |
| MOD 30 | UP switch inside                      | Pressing the button opens the door to the UP limit position.<br>The internal traffic light switches to green.                                                                                                                                                                                                                                          |
| MOD 31 | UP switch outside                     | Pressing the button opens the door to the UP limit position.<br>The external traffic light switches to green.                                                                                                                                                                                                                                          |
| MOD 32 | DOWN switch                           | Pressing the button closes the door to the DOWN limit position.<br>Only active with functioning closing edge protective device and functioning light barrier 1. No function in dead-man's operation.                                                                                                                                                   |

## B. Functions input 2

| MOD   | Description                                 | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF   |                                             | Not active.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| MOD 2 | Safety switching with resistance evaluation | With first commissioning and after a reset, input 2 is set to A (self-teaching) once. If a resistance value is detected, MOD 2 is automatically set and the measured value is stored and monitored as a reference for the connected safety-related components.<br>→ "3.14 Safety input per EN 12453"<br>Deviation of the measured value leads to an error message.<br><br>If a safety element is subsequently added or removed, the resistance measurement must be performed again. For this purpose the parameter INPUT 2 must be manually reset to A (self-teaching) and the supply voltage must be switched off and on again. Renewed measurement then takes place.<br><br>If no connected component is detected during initial commissioning or after a reset, the input is automatically deactivated. OFF appears in the display and the input must be manually activated. |
| MOD 3 | Switching strip OPEN (8.2 kΩ)               | Switching strip active in OPEN direction.<br>Stop and reversing to the CLOSED limit position upon actuation of the switching strip.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| MOD 4 | Switching strip OPEN (8.2 kΩ)               | Switching strip active in OPEN direction.<br>Stop and close for 2 seconds (rev) with actuation of the switching strip.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

| MOD    | Description                                   | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MOD 5  | Battery operation (MDFU-special) NO           | Active with supply via battery.<br>Relay switching MOD 32 / MOD 33.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| MOD 6  | Radar movement detector (Height detection) NO | <p>The function is coupled with input 1 (MOD 12 – laser scanner).<br/>The upstream laser scanner detects the height of the vehicle.<br/>The connected radar motion detector generates an OPEN command when activated.</p> <ul style="list-style-type: none"> <li>- A tall vehicle (HGV) is detected by the laser scanner.<br/>The laser scanner switches input 1 (MOD 12) to ON.<br/>The radar motion detector detects the vehicle and triggers the door movement.<br/>The door is moved to the OPEN limit position.</li> <li>- A low vehicle (car) is detected by the laser scanner.<br/>The laser scanner switches input 1 (MOD 12) to OFF.<br/>The radar motion detector detects the vehicle and triggers the door movement.<br/>The door is moved to the intermediate OPEN position (SECT. OPEN).</li> </ul> <p>All other OPEN commands (via X3, X7, X9, X13) always move the door to the OPEN limit position.<br/>The function of input 1 (MOD 12) is then irrelevant.</p> |
| MOD 7  | Light grid 2 (SSR / PNP) with testing         | <p>Behaves like light grid 1 (SKS MOD 4 – 6).</p> <ul style="list-style-type: none"> <li>- Light grid active in CLOSE direction.</li> <li>- Stops and reverses with actuation of the light grid.</li> </ul> <p>Form of reversing (reverse / rev) is accepted.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| MOD 9  | Safety element (OSE)                          | STOP the system with actuation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| MOD 10 | Switching strip OPEN (OSE)                    | Switching strip active in OPEN direction.<br>Stop and reversing to the CLOSED limit position upon actuation of the switching strip.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| MOD 11 | Switching strip OPEN (OSE)                    | Switching strip active in OPEN direction.<br>Stop and close for 2 seconds (rev) with actuation of the switching strip.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| MOD 12 | Light grid 2 (OSE) without testing            | <p>Behaves like light grid 1 (SKS MOD 4 – 6).</p> <ul style="list-style-type: none"> <li>- Light grid active in CLOSE direction.</li> <li>- Stops and reverses with actuation of the light grid.</li> </ul> <p>Form of reversing (reverse / rev) is accepted.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## 9.5 Diagnosis operating mode / error memory



| Display      | Meaning                     | Condition                                                                                         |
|--------------|-----------------------------|---------------------------------------------------------------------------------------------------|
| UPPER SWITCH | UP limit position           | <p>OFF: Limit position reached.<br/>ON: Limit position not reached.</p>                           |
| LOWER SWITCH | DOWN limit position         | <p>OFF: Limit position reached.<br/>ON: Limit position not reached.</p>                           |
| UP-SWITCH    | Command button / input OPEN | <p>ON: Button is actuated / input is active.<br/>OFF: Button not actuated / input not active.</p> |

| Display                                              | Meaning                                                                                                                                                                                                                                       | Condition                                                                                       |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| DOWN-SWITCH                                          | Command button / input CLOSE                                                                                                                                                                                                                  | ON: Button is actuated / input is active.<br>OFF: Button not actuated / input not active.       |
| INPUT 1                                              | Programmable INPUT 1<br>(X4 / 9 + 10)                                                                                                                                                                                                         | ON: Input 1 is active.<br>OFF: Input 1 is not active.                                           |
| INPUT 2 /<br>SKS OPEN 2 /<br>SAFE. 2<br>(optionally) | Programmable INPUT 2<br>(X4 / 11 + 12)<br><br>Input dependent on MOD selected at<br>the programmable input.<br><br>INPUT 2 with MOD 5-7<br>SKS OPEN 2 with MOD 3-4<br>SAFE. 2 with MOD 2                                                      | ON: Input 2 is active.<br>OFF: Input 2 is not active.<br>—: Not activated.                      |
| INPUT 3                                              | Programmable INPUT 3<br>(X10 / 1 – 3)                                                                                                                                                                                                         | ON: Input 3 is active.<br>OFF: Input 3 is not active.<br>—: Not activated.                      |
| SKS                                                  | Closing edge protective device 1<br>(DW, 8.2kΩ or photo-sensor)<br>or light grid 1<br>(PNP or photo-sensor)<br>(X4 / 5-8) CLOSE direction                                                                                                     | ON: System is closed.<br>OFF: System is interrupted (fault).                                    |
| SKS 3 /<br>SAFE. 3<br>(optionally)                   | Closing edge protective device 3<br>(8.2kΩ or photo-sensor)<br>Radio transmission system channel 1<br>OPEN or CLOSE direction<br><br>Display dependent on MOD selected at<br>parameter SKS 3.<br><br>SKS 3 with MOD 2-3<br>SAFE. 3 with MOD 4 | ON: System is closed.<br>OFF: System is interrupted (fault).<br>—: Not activated.               |
| SKS 4 /<br>SAFE. 4<br>(optionally)                   | Closing edge protective device 4<br>(8.2kΩ or photo-sensor)<br>Radio transmission system channel 2<br>OPEN or CLOSE direction<br><br>Display dependent on MOD selected at<br>parameter SKS 4.<br><br>SKS 4 with MOD 2-3<br>SAFE. 4 with MOD 4 | ON: System is closed.<br>OFF: System is interrupted (fault).<br>—: Not activated.               |
| IMPULS                                               | Command button / input IMPULS<br>(X3 / 7+8)                                                                                                                                                                                                   | ON: Button is actuated / input is active.<br>OFF: Button is not actuated / input is not active. |
| TIMER                                                | Week timer (pluggable)                                                                                                                                                                                                                        | ON: Timer is active.<br>OFF: Timer is not active.                                               |
| LIGHT BARR.                                          | Light barrier 1<br>(X4 / 1-4)                                                                                                                                                                                                                 | ON: Light barrier signal is OK.<br>OFF: Light beam interrupted or light barrier defective.      |

| Display                     | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Condition                                                                                                                                                                                                                                                |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LIGHT BARR.<br>2            | Light barrier 2<br>Connection at input 1<br>(X4 / 9+10)                                                                                                                                                                                                                                                                                                                                                                                                                         | ON: Light barrier signal is OK.<br>OFF: Light beam interrupted or light barrier defective.                                                                                                                                                               |
| SAFETY CIRC.                | Safety circuit 1<br>Emergency stop systems of door<br>system                                                                                                                                                                                                                                                                                                                                                                                                                    | ON: Safety circuit is closed.<br>OFF: Safety circuit is interrupted.                                                                                                                                                                                     |
| STOP                        | Command button STOP (cover keypad)                                                                                                                                                                                                                                                                                                                                                                                                                                              | ON: Button is not actuated.<br>OFF: Button is actuated.                                                                                                                                                                                                  |
| ROT FIELD                   | Shows the currently set rolling<br>direction of the drive                                                                                                                                                                                                                                                                                                                                                                                                                       | RIGHT: Setting for a right rotating field.<br>LEFT: Setting for a left rotating field.                                                                                                                                                                   |
| CYCLE                       | Door cycle counter                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Display of the door cycles that have run through:<br>1 x open + 1 x CLOSE = 1 cycle<br>Counting only takes place when the end switch-off points have each been<br>reached.                                                                               |
| SERVICE                     | Service alarm function<br>Setting via parameter SERVICE and PIN<br>no. 2                                                                                                                                                                                                                                                                                                                                                                                                        | OFF: Service display not active.<br>0 - 99999: Service display is active.<br>Display of the remaining door cycles up to the service<br>message.                                                                                                          |
| AWG                         | Position information of the absolute<br>value encoder                                                                                                                                                                                                                                                                                                                                                                                                                           | Display of the currently transferred value.                                                                                                                                                                                                              |
| C.STOP                      | HALT/STOP counter                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Shows how often the door was stopped. Either through activation of a safety<br>device, in case of direct direction reversal by a run command or by a direct<br>STOP/HALT command.                                                                        |
| C.OPENED                    | Counter for top limit position                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Shows how often the top limit position was approached.                                                                                                                                                                                                   |
| C.O.BTN                     | Counter for OPEN commands                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Number of all incoming OPEN commands through command devices,<br>sensors and safety devices (e. g. light barrier).                                                                                                                                       |
| ERROR ...<br>COUNT<br>CYCLE | Controller error memory.<br><br>The error messages of the controller<br>can be read out here with information<br>about frequency and cycle.<br>Use the [+] and [-] keys on the LCD<br>monitor to scroll through the list of<br>various error messages.<br>→ "10.1 Fault display on the LCD<br>monitor"<br><br>Deletion of the error memory:<br>Press the buttons [+] and [-]<br>simultaneously for approx. 2 seconds.<br>Each error message must be<br>individually<br>deleted. | The display changes in 2-second intervals between<br>- the fault description,<br>- the frequency of occurrence, and<br>- the information on which cycle the fault arose most recently.<br><br>Only errors that have already occurred appear in the list. |



The following messages can be read from the error memory, but are not displayed in the AUTOMATIC operating mode:

| Display           | Meaning                                                         | Condition                                                                                                                                                                       |
|-------------------|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| POWER ON          | Counter for switching the supply voltage off and back on again. | Counts up by actively switching the supply on and off, or with power failures.                                                                                                  |
| ERROR SUPP. VOLT. | Counter for the occurrence of deviations in the supply voltage. | Overvoltage and undervoltage are detected and counted.                                                                                                                          |
| RESTART           | Restart counter                                                 | Display of the restarts executed. Caused by detection of undervoltage, change of the limit position system, change to the motor parameters, or after a RESET of the controller. |

## 10. Fault display and remedial measures

### 10.1 Fault display on the LCD monitor

| Fault / message                                                                                                                                           | Cause                                                                                                                                                                                                                                                                                                                                               | Rectification                                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| System does not react.                                                                                                                                    | <ul style="list-style-type: none"> <li>No voltage present.</li> </ul>                                                                                                                                                                                                                                                                               | <ul style="list-style-type: none"> <li>Check power supply for the drive and controller.</li> </ul>                                                  |
| Door drives to the CLOSED limit position upon actuation of the OPEN button.<br>Door drives to the OPEN limit position upon actuation of the CLOSE button. | <ul style="list-style-type: none"> <li>Rotating field has been incorrectly connected.</li> </ul>                                                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>Check rotating field and establish right rotating field if necessary.</li> </ul>                             |
| FAULT - X                                                                                                                                                 | <ul style="list-style-type: none"> <li>internal software or hardware error.</li> </ul>                                                                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li>RESET via circuit board button:<br/>→ "6.6 RESETTING the controller without LCD monitor"</li> </ul>          |
| SAFETY CIRC.                                                                                                                                              | <ul style="list-style-type: none"> <li>The safety circuit is interrupted.<br/>X3 / 1+2 Safety circuit controller<br/>EMERGENCY STOP, slack rope switch<br/>X6 / 1+2 ON / OFF internal<br/>X11 / 4+8 Safety circuit drive AWG<br/>X2 / B1+B2 Safety circuit drive MEC<br/>X3 / 3+4 Stop button external<br/>X7 / 1+2 Stop button internal</li> </ul> | <ul style="list-style-type: none"> <li>Check safety circuit, locate interruption and eliminate problem.</li> </ul>                                  |
| ERROR STOP                                                                                                                                                | <ul style="list-style-type: none"> <li>An error has occurred at the safety input (X4/11-12 - MOD 2).</li> </ul>                                                                                                                                                                                                                                     | <ul style="list-style-type: none"> <li>Check all components at the safety input and replace if necessary.</li> </ul>                                |
| ERROR RUNTIME                                                                                                                                             | <ul style="list-style-type: none"> <li>The programmed running time has been exceeded.</li> </ul>                                                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>Check the path of the door and running time.</li> <li>Re-programme the running time if necessary.</li> </ul> |

| Fault / message   | Cause                                                                                                                                                                   | Rectification                                                                                                                                                                |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ERROR AWG         | <ul style="list-style-type: none"> <li>Signal transmission between absolute value encoder and controller is interrupted or faulty.</li> </ul>                           | <ul style="list-style-type: none"> <li>Check cable and connector and replace if necessary.</li> </ul>                                                                        |
| TERM SWITCH FAIL  | <ul style="list-style-type: none"> <li>The door is located outside the programmed limit position range.</li> <li>The limit positions are not yet programmed.</li> </ul> | <ul style="list-style-type: none"> <li>Reset the door in the programmed range via the emergency operation.</li> <li>First program the limit positions.</li> </ul>            |
| ERROR REVOLUTION  | <ul style="list-style-type: none"> <li>The power monitoring has triggered.</li> </ul>                                                                                   | <ul style="list-style-type: none"> <li>Check door for mechanical impairments.</li> </ul>                                                                                     |
| ERROR DIRECTION   | <ul style="list-style-type: none"> <li>The present rotating field is not clockwise rotating.</li> </ul>                                                                 | <ul style="list-style-type: none"> <li>Check rotating field and change if necessary.<br/>→ "5.1 Checking the drive / travel direction"</li> </ul>                            |
| ERROR SKS CLOSE   | <ul style="list-style-type: none"> <li>Closing edge protective device 1 defective in CLOSE direction → (X4 / 5-8).</li> </ul>                                           | <ul style="list-style-type: none"> <li>Check closing edge protective devices and spiral cable.</li> </ul>                                                                    |
| ERROR SKS OPEN 2  | <ul style="list-style-type: none"> <li>Closing edge protective device 2 defective in OPEN direction → (X4 / 11+12) input 2.</li> </ul>                                  | <ul style="list-style-type: none"> <li>Check closing edge protective devices and spiral cable.</li> </ul>                                                                    |
| ERROR STOP. 2     | <ul style="list-style-type: none"> <li>Safety circuit 2 is interrupted.<br/>Slip door switch 8.2 kΩ<br/>→ (X4 / 11+12) input 2.</li> </ul>                              | <ul style="list-style-type: none"> <li>Check slip door switch.</li> </ul>                                                                                                    |
| ERROR SKS CLOSE 3 | <ul style="list-style-type: none"> <li>Closing edge protective device 3 defective in CLOSE direction → (X20) Pluggable transmission system RADIO channel 1.</li> </ul>  | <ul style="list-style-type: none"> <li>Check closing edge protective device.</li> <li>Check transmission system RADIO.</li> <li>Check setting of parameter SKS 3.</li> </ul> |
| ERROR SKS OPEN 3  | <ul style="list-style-type: none"> <li>Closing edge protective device 3 defective in OPEN direction → (X20) Pluggable transmission system RADIO channel 1.</li> </ul>   | <ul style="list-style-type: none"> <li>Check closing edge protective device.</li> <li>Check transmission system RADIO.</li> <li>Check setting of parameter SKS 3.</li> </ul> |
| ERROR STOP. 3     | <ul style="list-style-type: none"> <li>Safety circuit 3 is interrupted.<br/>→ (X20) Pluggable transmission system RADIO channel 1.</li> </ul>                           | <ul style="list-style-type: none"> <li>Check safety circuit.</li> <li>Check transmission system RADIO.</li> </ul>                                                            |
| ERROR SKS CLOSE 4 | <ul style="list-style-type: none"> <li>Closing edge protective device 4 defective in CLOSE direction → (X20) Pluggable transmission system RADIO channel 2.</li> </ul>  | <ul style="list-style-type: none"> <li>Check closing edge protective device.</li> <li>Check transmission system RADIO.</li> <li>Check setting of parameter SKS 4.</li> </ul> |
| ERROR SKS OPEN 4  | <ul style="list-style-type: none"> <li>Closing edge protective device 4 defective in OPEN direction → (X20) Pluggable transmission system RADIO channel 2.</li> </ul>   | <ul style="list-style-type: none"> <li>Check closing edge protective device.</li> <li>Check transmission system RADIO.</li> <li>Check setting of parameter SKS 4.</li> </ul> |
| ERROR STOP. 4     | <ul style="list-style-type: none"> <li>Safety circuit 4 is interrupted.<br/>→ (X20) Pluggable transmission system RADIO channel 2.</li> </ul>                           | <ul style="list-style-type: none"> <li>Check safety circuit.</li> <li>Check transmission system RADIO.</li> </ul>                                                            |

| Fault / message    | Cause                                                                                                                                                                                                                              | Rectification                                                                                                                                                                                                                                                                 |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ERROR SKS-TEST     | <ul style="list-style-type: none"> <li>- The test of the connected pressure wave strip was unsuccessful.</li> </ul>                                                                                                                | <ul style="list-style-type: none"> <li>- Check DW switch, spiral cable and rubber profile.</li> <li>- Check DW-POINT setting.</li> </ul>                                                                                                                                      |
|                    | <ul style="list-style-type: none"> <li>- The test of the transmission systems radio 1 – 4 failed.</li> </ul>                                                                                                                       | <ul style="list-style-type: none"> <li>- Check transmission system radio.</li> <li>- Check relay MOD setting for transmission system.</li> <li>→ "G. Functions for external accessories"</li> </ul>                                                                           |
| ERROR LIGHT BAR.   | <ul style="list-style-type: none"> <li>- The connected light barrier exhibits a permanent fault.</li> <li>-&gt; (X4 / 1-4)</li> </ul>                                                                                              | <ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>                                                                                                                                                   |
| ERROR LIGHT BAR. 2 | <ul style="list-style-type: none"> <li>- The connected light barrier exhibits a permanent fault.</li> <li>-&gt; (X4 / 9+10) input 1</li> </ul>                                                                                     | <ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>                                                                                                                                                   |
| ERROR LB TEST      | <ul style="list-style-type: none"> <li>- The test of the 2-wire light barrier failed.</li> </ul>                                                                                                                                   | <ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>                                                                                                                                                   |
| ERROR STOP-TEST    | <ul style="list-style-type: none"> <li>- The test of the slip door switch (8.2 kΩ) failed.</li> <li>-&gt; input 2</li> </ul>                                                                                                       | <ul style="list-style-type: none"> <li>- Check slip door switch.</li> </ul>                                                                                                                                                                                                   |
| ERROR TRAPIN       | <ul style="list-style-type: none"> <li>- The test of the trap-in protection (auxiliary module) failed.</li> <li>-&gt; Relay MOD 21</li> </ul>                                                                                      | <ul style="list-style-type: none"> <li>- Check light barrier (function and alignment).</li> <li>- Check cabling.</li> </ul>                                                                                                                                                   |
| ERROR CYLINDER     | <ul style="list-style-type: none"> <li>- The monitoring limit switch of the locking system for threshold-free slip doors has not switched within 10 seconds of the input of an OPEN command.</li> </ul>                            | <ul style="list-style-type: none"> <li>- Check limit switch of the cylinder.</li> </ul>                                                                                                                                                                                       |
| ERROR MSBUS        | <ul style="list-style-type: none"> <li>- The communication between the controller and connected MS-BUS module is interrupted.</li> </ul>                                                                                           | <ul style="list-style-type: none"> <li>- Check cable and connectors and replace if necessary.</li> </ul>                                                                                                                                                                      |
| ERROR 24 V         | <ul style="list-style-type: none"> <li>- The voltage supply 24V DC (X4/1-2) was switched off due to excessive load from external consumers.</li> </ul>                                                                             | <ul style="list-style-type: none"> <li>- Reduce the number of connected consumers.</li> <li>- Limit current draw to max. 500 mA through the selection of other components.</li> </ul>                                                                                         |
| ERROR POWERSEGM.   | <ul style="list-style-type: none"> <li>- The load contactor or a relay is defective.</li> </ul>                                                                                                                                    | <ul style="list-style-type: none"> <li>- The circuit board must be replaced.</li> </ul>                                                                                                                                                                                       |
| ERROR BRAKE        | <ul style="list-style-type: none"> <li>- Monitoring module BWM1 has identified a defect at relay 4.</li> </ul>                                                                                                                     | <ul style="list-style-type: none"> <li>- The circuit board must be replaced.</li> </ul>                                                                                                                                                                                       |
| ERROR INVERTER     | <ul style="list-style-type: none"> <li>- Communication fault.</li> <li>- Communication between frequency converter and control CS 320 interrupted and/or broken down.</li> <li>- Bridge (F) missing between DIC and OV.</li> </ul> | <ul style="list-style-type: none"> <li>- Check communication cable (C) and plug-in connections to control and frequency converter.</li> <li>- Use bridge (F) between DIC and OV (only with frequency converter type V20).</li> <li>- Confirm with the STOP button.</li> </ul> |

| Fault / message   | Cause                                                                                                                                                                                                                 | Rectification                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ERROR INVERTER 1  | Overcurrent.<br><ul style="list-style-type: none"> <li>Motor rating does not correspond to converter rating.</li> <li>Short-circuit in the motor cable.</li> <li>Earth leakage.</li> </ul>                            | <ul style="list-style-type: none"> <li>Check motor rating / inverter rating.</li> <li>Check motor / motor cable for short-circuit and earth leakage.</li> <li>Adjust the motor parameter settings to the information on the type plate.</li> <li>Check that the the door/gate system runs smoothly.</li> <li>Check the spring balance in sectional doors.</li> <li>Confirm with the STOP button.</li> </ul> |
| ERROR INVERTER 2  | Overvoltage.<br><ul style="list-style-type: none"> <li>Mains voltage too high.</li> <li>Motor is working generator-based due to ramping down too fast or due to an active load which is driving the motor.</li> </ul> | <ul style="list-style-type: none"> <li>Check the voltage supply to the door operator and the control.</li> <li>Confirm with the STOP button.</li> </ul>                                                                                                                                                                                                                                                     |
| ERROR INVERTER 3  | Undervoltage.<br><ul style="list-style-type: none"> <li>Mains voltage too low.</li> <li>Mains voltage supply failed.</li> </ul>                                                                                       | <ul style="list-style-type: none"> <li>Check the voltage supply to the door operator and the control.</li> <li>Check that all connections are firmly attached.</li> <li>Confirm with the STOP button.</li> </ul>                                                                                                                                                                                            |
| ERROR INVERTER 4  | Inverter overtemperature.<br><ul style="list-style-type: none"> <li>Inverter overloaded.</li> <li>Ambient temperature too high.</li> </ul>                                                                            | <ul style="list-style-type: none"> <li>Check motor rating / inverter rating.</li> <li>Adjust the motor parameter settings to the information on the type plate.</li> <li>Check duty cycle.</li> <li>Check that the the door/gate system runs smoothly.</li> <li>Check the spring balance in sectional doors.</li> <li>Confirm with the STOP button.</li> </ul>                                              |
| ERROR INVERTER 5  | Inverter I2T<br><ul style="list-style-type: none"> <li>Inverter overloaded.</li> <li>Motor rating does not correspond to converter rating.</li> <li>Load cycle too high.</li> </ul>                                   | <ul style="list-style-type: none"> <li>Check motor rating / inverter rating.</li> <li>Adjust the motor parameter settings to the information on the type plate.</li> <li>Check load cycle.</li> </ul>                                                                                                                                                                                                       |
| ERROR INVERTER 11 | Motor overtemperature 12.T<br><ul style="list-style-type: none"> <li>Motor overloaded.</li> </ul>                                                                                                                     | <ul style="list-style-type: none"> <li>Check that the the door/gate system runs smoothly.</li> <li>Check the spring balance in sectional doors.</li> <li>Confirm with the STOP button.</li> </ul>                                                                                                                                                                                                           |
| ERROR INVERTER 51 | Internal fault.                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>Get in touch with our customer service.</li> </ul>                                                                                                                                                                                                                                                                                                                   |
| ERROR INVERTER 52 | Internal fault.                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>Get in touch with our customer service.</li> </ul>                                                                                                                                                                                                                                                                                                                   |
| ERROR INVERTER 60 | Internal fault.                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>Get in touch with our customer service.</li> </ul>                                                                                                                                                                                                                                                                                                                   |
| ERROR INVERTER 72 | Internal fault.                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>Get in touch with our customer service.</li> </ul>                                                                                                                                                                                                                                                                                                                   |
| ERROR INVERTER 85 | External fault.<br><ul style="list-style-type: none"> <li>External fault through command input using terminals.</li> </ul>                                                                                            | <ul style="list-style-type: none"> <li>Check connection terminals of communication cable (D) on inverter.</li> <li>Confirm with the STOP button.</li> </ul>                                                                                                                                                                                                                                                 |
| ERROR INVERTER -1 | 24V voltage from the frequency inverter missing.<br><ul style="list-style-type: none"> <li>Frequency inverter is not switched on or is defective.</li> <li>Communication cable (C) defective.</li> </ul>              | <ul style="list-style-type: none"> <li>Check frequency inverter.</li> <li>Check communication cable (C) and plug connections on the controller and frequency inverter.</li> <li>Acknowledge with STOP.</li> </ul>                                                                                                                                                                                           |

| Fault / message   | Cause                                                                                                                                                                                                                                                                                                                                                                                | Rectification                                                                                                                                                                                                                                                                |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ERROR INVERTER -2 | Initialisation <ul style="list-style-type: none"> <li>- Frequency inverter initialisation defective.</li> <li>- A value that does not match with the frequency inverter was set in the settings, e.g. 400V with a 230V frequency inverter.</li> </ul> Under-voltage <ul style="list-style-type: none"> <li>- Mains voltage too low.</li> <li>- Mains voltage dropped out.</li> </ul> | <ul style="list-style-type: none"> <li>- Check the frequency inverter settings or get in touch with customer services.</li> <li>- Check power supply for the drive and controller.</li> <li>- Check all connections are secure.</li> <li>- Acknowledge with STOP.</li> </ul> |
| ERROR INVERTER -3 | Frequency inverter fault <ul style="list-style-type: none"> <li>- Frequency inverter reports a fault without error number.</li> </ul>                                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>- Get in touch with customer services.</li> </ul>                                                                                                                                                                                     |
| ERROR INVERTER -4 | Communication error with frequency inverter. <ul style="list-style-type: none"> <li>- EMC radiation too high.</li> </ul>                                                                                                                                                                                                                                                             | <ul style="list-style-type: none"> <li>- Check environment and screen or switch off external devices.</li> <li>- Get in touch with customer services.</li> </ul>                                                                                                             |
| ERROR INVERTER -5 | Frequency inverter does not issue frequency. <ul style="list-style-type: none"> <li>- Internal fault.</li> </ul>                                                                                                                                                                                                                                                                     | <ul style="list-style-type: none"> <li>- Get in touch with customer services.</li> </ul>                                                                                                                                                                                     |
| ERROR INVERTER -6 | Internal communication defective. <ul style="list-style-type: none"> <li>- Internal fault.</li> </ul>                                                                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>- Get in touch with customer services.</li> </ul>                                                                                                                                                                                     |
| ERROR INVERTER -7 | Frequency inverter has not responded to a signal.                                                                                                                                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>- Acknowledge with STOP,</li> <li>- otherwise get in touch with customer services</li> </ul>                                                                                                                                          |

**After rectifying the cause of the error, the power supply to the control must be turned off once and/or the control must be restarted (> INPUT menu > parameter RESTART > ON) in the event of the following errors:**

- ERROR DIRECTION
- ERROR REVOLUTION
- ERROR RUNTIME
- TERM SWITCH FAIL

## 10.2 Error message via LED indicator

**LED H1 (green, main circuit board)**

| Fault / error message | LED indicator | Remarks                  |
|-----------------------|---------------|--------------------------|
| No operating voltage  | Off           | No power supply present. |

**LED H2 (red, main circuit board)**

| Fault / error message | LED indicator                                                                 | Remarks                                                                                                                                                                                                                                                                                                    |
|-----------------------|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SAFETY CIRC.          | Flashes 1 x                                                                   | Safety circuit is interrupted. <ul style="list-style-type: none"><li>- Check safety circuit, localise interruption and rectify problem.</li></ul>                                                                                                                                                          |
| ERROR AWG             | Flashes 2 x                                                                   | Signal transmission between absolute value encoder and control interrupted and/or broken down. <ul style="list-style-type: none"><li>- Check the cable and socket connections and replace, if necessary.</li></ul>                                                                                         |
| TERM SWITCH FAIL      | Flashes 3 x                                                                   | The door has travelled beyond the programmed end position area or the end positions have not yet been programmed. <ul style="list-style-type: none"><li>- First, programme the end positions.</li><li>- Move the door/gate back into the programmed area using the emergency operation facility.</li></ul> |
| ERROR DIRECTION       | Flashes 4 x                                                                   | The rotating field present is not a clockwise rotating field. <ul style="list-style-type: none"><li>- Check the rotating field and change the direction, if necessary.</li></ul> ➔ "5.1 Checking the drive / travel direction"                                                                             |
| ERROR REVOLUTION      | Flashes 5 x                                                                   | The power monitoring has been triggered. <ul style="list-style-type: none"><li>- Check the door for any mechanical impairment or damage.</li></ul>                                                                                                                                                         |
| ERROR RUNTIME         | Flashes 6 x                                                                   | The programmed running time has been exceeded. <ul style="list-style-type: none"><li>- Check the path of the door and the running time.</li><li>- Re-programme the running time, if necessary.</li></ul>                                                                                                   |
| ERROR INVERTER        | Flashes 7 x                                                                   | 24V voltage from the frequency inverter missing. <ul style="list-style-type: none"><li>- Check frequency inverter.</li><li>- Check communication cable (C) and plug connections on the controller and frequency inverter.</li><li>- Acknowledge with STOP.</li></ul>                                       |
| ERROR MSBUS           | Flashes 9 x                                                                   | Communication error between the control and the installed MS BUS end device. <ul style="list-style-type: none"><li>- Check the cable and socket connections and replace, if necessary.</li></ul>                                                                                                           |
| SERVICE               | Flashes 10x                                                                   | The programmed service interval has been reached. <ul style="list-style-type: none"><li>- Reset or redefine service interval.</li></ul> ➔ "9.2 Input operating mode" / SERVICE parameter                                                                                                                   |
| ERROR POWERSEGM.      | Flashes 11x                                                                   | The load contactor or a relay is defective. <ul style="list-style-type: none"><li>- The circuit board must be replaced.</li></ul>                                                                                                                                                                          |
| ERROR STOP            | Continuous illumination, travel no longer possible.                           | An error has occurred at the safety input (X4/11-12 - MOD 2). <ul style="list-style-type: none"><li>- Check all components at the safety input and replace if necessary.</li></ul>                                                                                                                         |
| ERROR SKS             | Continuous light<br>Travel only possible in deadman mode                      | Closing edge safety device faulty in OPENING or CLOSING direction. <ul style="list-style-type: none"><li>- Check the closing edge safety device and the spiral cable and, if necessary, check the RADIO transmission system.</li></ul>                                                                     |
| ERROR LIGHT BAR       | Continuous light<br>Travel in CLOSING direction only possible in deadman mode | The installed photocell indicates a permanent fault. <ul style="list-style-type: none"><li>- Check photocell (function and alignment).</li><li>- Check cabling.</li></ul>                                                                                                                                  |

## 11. Service



### WARNING!

#### Life-threatening danger due to electric shock!

- The control **MUST** be disconnected from the power supply before carrying out any service work on the control unit or door system. Take measures to ensure that the power supply remains disconnected for the duration of the work.

The CS 320 FU controller is maintenance-free.

The CS 320 FU controller must be checked at least once yearly.



### ATTENTION!

#### Property damage due to improper checking of the controller!

In order to avoid damage to the controller, drive and door, observe the following points:

- Testing must only be carried out by trained, qualified and authorised persons.
  - Worn or faulty parts must be replaced or disposed of correctly.
  - Only approved original parts may be installed.
  - The test results must be documented in the log book for the door system.
- Check all electrical cables and the housing for damage. A defective cable must be replaced immediately.

## 12. Declaration of incorporation (EU)

in accordance with Directive 2006/42/EC (Machinery) for the incorporation of an incomplete machine per Annex II, Part 1B

### Declaration of conformity

in accordance with Directive 2014/30/EU (EMC)  
in accordance with Directive 2011/65/EU (RoHS)

Marantec Legden GmbH & Co.KG,  
Neue Mühle 4,  
D - 48739 Legden

We hereby declare that the product cited below

Product designation: **Controller for industrial doors**  
Type designation: **CS 320 FU**

is intended exclusively for incorporation in a door system and has been developed, designed and produced in accordance with the following directives:

Machinery Directive 2006/42/EC  
Annex 1: 1.1.2, 1.1.3, 1.1.5, 1.2.1, 1.2.2, 1.2.3, 1.2.4.2, 1.2.5, 1.2.6, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.9, 1.5.1, 1.5.2, 1.5.4, 1.5.5, 1.5.6, 1.5.7, 1.5.8, 1.5.9, 1.5.10, 1.5.11, 1.5.13, 1.6.1, 1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.1.2, 1.7.2, 1.7.3, 1.7.4.3.

EMC Directive 2014/30/EU - Electromagnetic Compatibility  
RoHS Directive 2011/65/EU - Hazardous substances in electrical appliances  
LV Directive 2014/35/EU - Low voltage, per Annex I part 1.5.1 of 2006/42/EC

Applied standards:

|                       |                                                                                                                                                     |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| EN 12453:2017         | Doors - Safety in use of power-operated doors: Requirements and test methods                                                                        |
| EN ISO 13849-1:2015   | Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design                                               |
| EN ISO 13849-2:2012   | Safety of machinery - Safety-related parts of control systems - Part 2: Validation                                                                  |
| EN 60335-1:2012       | Safety of household and similar electrical appliances - Part 1: General requirements                                                                |
| EN 60335-2-103:2015   | Safety of household and similar electrical appliances - Part 2-103: Particular requirements for drives for gates, doors and windows                 |
| EN IEC 61000-6-2:2019 | Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments                                            |
| EN 61000-6-3:2011     | Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments |
| EN 55014-1:2017       | Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 1: Emission                      |

EN 55014-2:2015

Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 2: Immunity - Product family standard

The relevant technical documentation has been compiled in accordance with Annex VII, part B of the Machinery Directive (2006/42/EC).

We shall transmit this information in electronic form, in response to a justified request by the market surveillance authorities, in a timely manner.

Person authorised to compile the technical documentation is the undersigned.

Incomplete machines in accordance with Directive 2006/42/EC are only intended for incorporation in other machines or incomplete machines or systems or for combination with them, in order to form a machine with them in accordance with the aforementioned directive. This product must therefore not be put into service until the complete machine/system into which it is incorporated is compliant with the provisions of the aforementioned directives. Any change to this product that we have not approved will void this regulation.

Legden, 01.08.2022



Michael Hörmann, General Manager





### 13. Declaration of incorporation (UK)

within the context of Supply of Machinery (Safety) Regulations 2008 for incorporation in a an incomplete machine according to Appendix II, Part 1B

#### Declaration of conformity

within the context of Electromagnetic Compatibility Regulations 2016

within the context of The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Marantec Legden GmbH & Co.KG,  
Neue Mühle 4,  
D - 48739 Legden

#### UK Representative:

Link Controls  
Stuart Road, Manor Park  
Runcorn Cheshire, WA7 1TS

We hereby declare that the following listed product

Product designation: **Controller for industrial doors**  
Type designation: **CS 320 FU**

is exclusively intended for integration in a door system and has been developed, designed and produced in accordance with the following Directives:

Supply of Machinery (Safety) Regulations (2008 No.1597)

Appendix 1: 1.1.2, 1.1.3, 1.1.5, 1.2.1, 1.2.2, 1.2.3, 1.2.4.2, 1.2.5, 1.2.6, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.9, 1.5.1, 1.5.2, 1.5.4, 1.5.5, 1.5.6, 1.5.7, 1.5.8, 1.5.9, 1.5.10, 1.5.11, 1.5.13, 1.6.1, 1.6.2, 1.6.3, 1.6.4, 1.7.1.1, 1.7.1.2, 1.7.2, 1.7.3, 1.7.4.3.

- Electromagnetic Compatibility Regulations (2016 No.1091)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations (2012 No.3032)
- Electrical Equipment (Safety) Regulations (2016 No.1101) according to Annex I Part 1.5.1 of "2008 No.1597"

Applied and consulted standards:

|                       |                                                                                                                                    |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------|
| EN 12453:2022         | Doors - Safety in use of power operated doors: Requirements and test methods                                                       |
| EN ISO 13849-1:2015   | Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design                              |
| EN ISO 13849-2:2012   | Safety of machinery - Safety-related parts of control systems - Part 2: Validation                                                 |
| EN 60335-1:2020       | Household and similar electrical appliances - Safety - Part 1: General requirements                                                |
| EN 60335-2-103:2016   | Household and similar electrical appliances - Safety - Part 2-103: Particular requirements for drives for gates, doors and windows |
| EN IEC 61000-6-2:2019 | Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity standard for industrial environments                  |

EN 61000-6-3:2011

Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments  
Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 1: Emission  
Electromagnetic compatibility - Requirements for household appliances, electric tools and similar apparatus - Part 2: Immunity - Product family standard

EN 55014-1:2017

EN 55014-2:2015

The special technical documents were created according to Appendix VII Part B of Supply of Machinery (Safety) Regulations (2008 No.1597). We are obligated to transmit these to market monitoring agencies in a timely manner upon justified request in electronic form.  
Authorised representative for compiling the technical documents is the undersigned.  
Incomplete machines within the context of Supply of Machinery (Safety) Regulations 2008 are therefore only specified for incorporation with other machines or with other incomplete machines or systems or combined with them to form a machine within the contact of the directive indicated above. For this reason, this product may only be commissioned once it has been determined that the complete machine /system into which it has been incorporated corresponds with the indicated UK guidelines. In case of changes to the product that are not confirmed by us, this declaration is void.

Legden, 01.11.2022




Michael Hörmann, General Manager

**UK  
CA**

## 14. Annex

### 14.1 Safety circuit measuring points

14.1/1

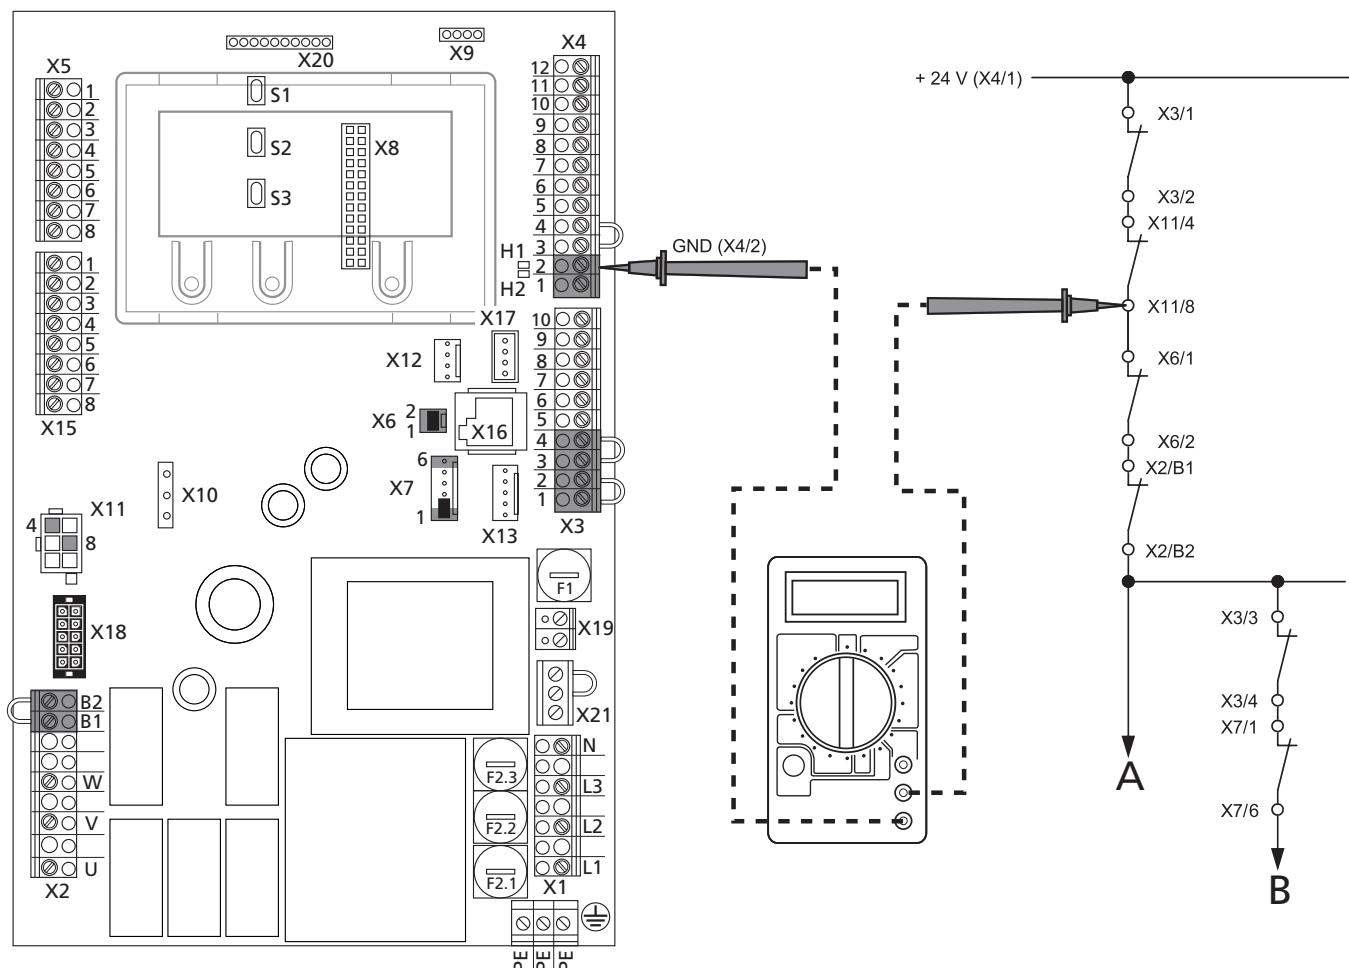

#### NOTE:


The measuring range must be set for 24 V-DC.

- A Emergency stop
- B Stop


- Measure at all measuring points on the diagram, to locate the interruption.



## 14.2 Overview of the connections

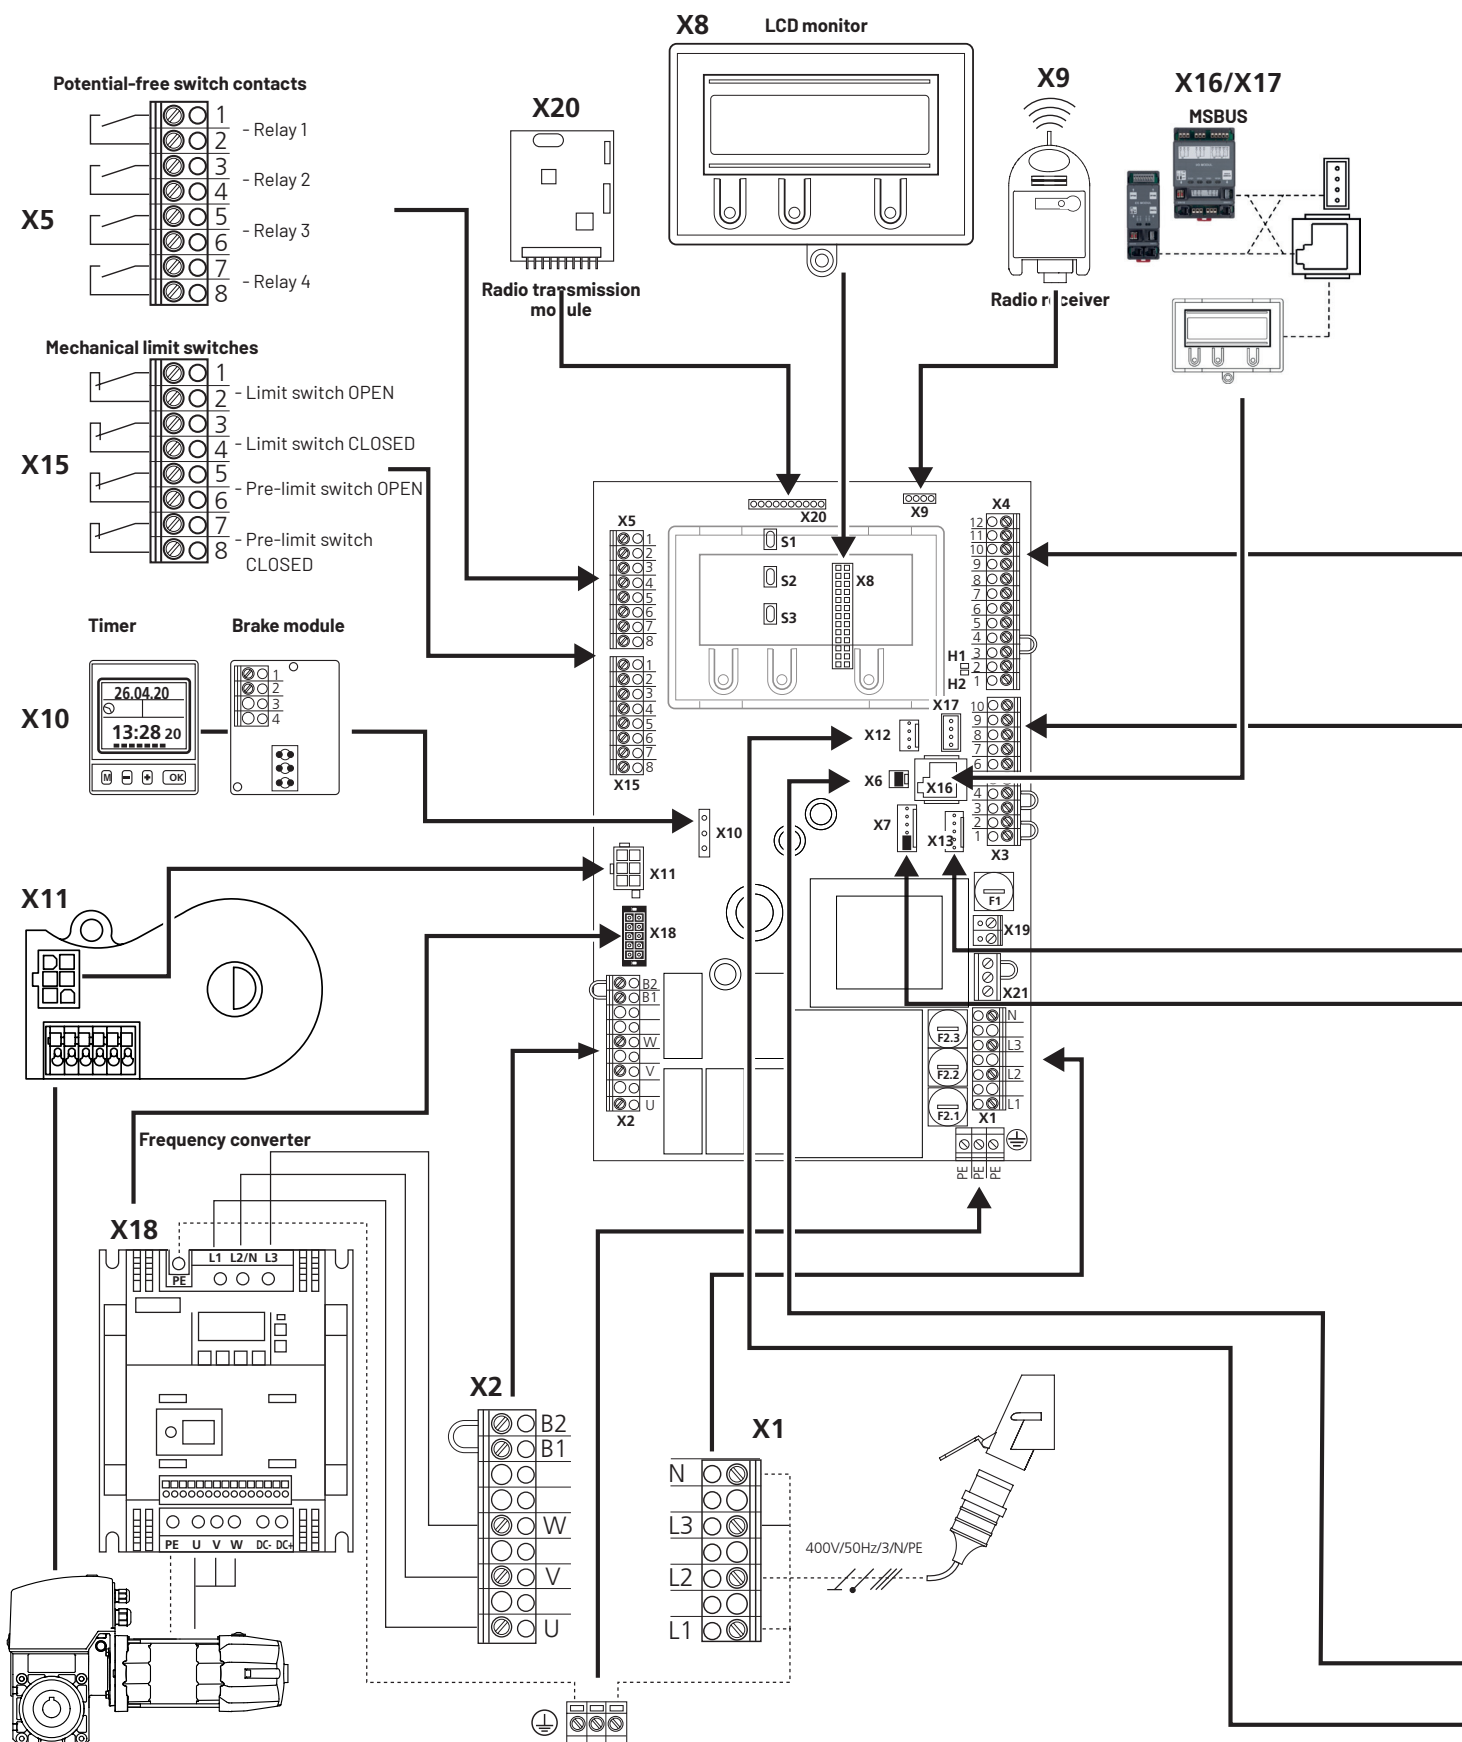


**Closing edge protective device  
OSE**

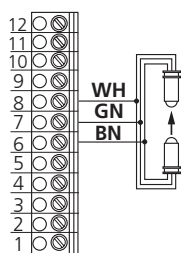


**X4**


**Input 1 (9 + 10)  
Closing edge protective device 8.2 k $\Omega$  /  
DW (5+6)**

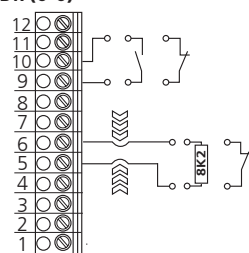

**Input 2 (11 + 12)  
Light barrier (2 + 4)**

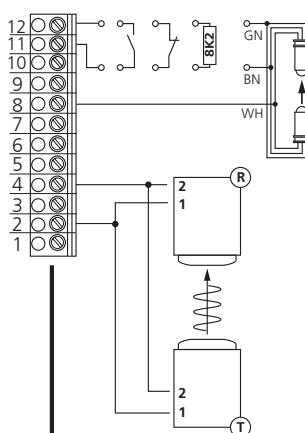


**Light barrier  
NC, NPN, PNP**

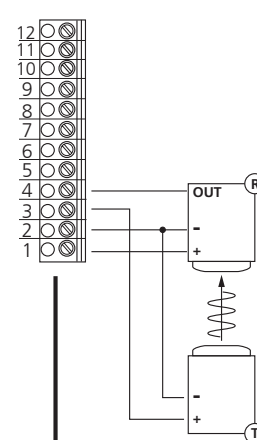


**X3**


**Command devices**

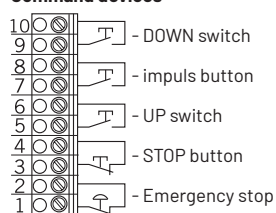


**UP / STOP / DOWN switch  
(6-wire solution)**

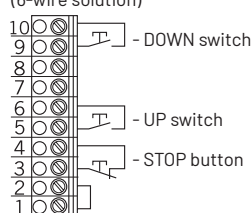


**UP / STOP / DOWN switch  
(4-wire solution)**

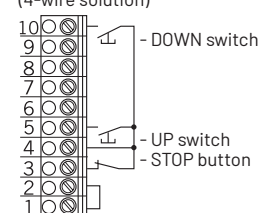


**IMPULS button**

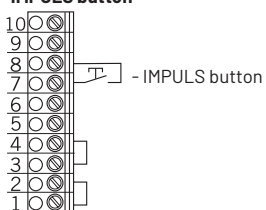

**Key switch**

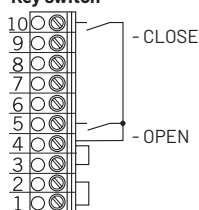


**Cover keypad CS**

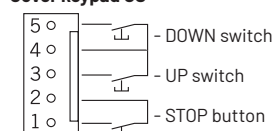


**X13**

**Cover switch KDT**

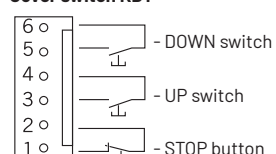


**X7**

 **ON/OFF key switch**



**X6**

 **External radio receiver**



**X12**

WH: white  
GN: green  
BN: brown





